

## PRODUCT SPECIFICATION

MODEL NAME	TC-395
RATED INPUT VOLTAGE	<input type="checkbox"/> 100 ~ 120V <input type="checkbox"/> 220 ~ 240V
RATED FREQUENCY	<input type="checkbox"/> 50Hz <input type="checkbox"/> 60Hz
POWER CONSUMPTION	150W
N.W. / G.W.	75kg / 88kg
PRODUCT SIZE	L1420xW770xH1200(mm)
CARTON SIZE	L1250xW780xH1150(mm)
ORIGINAL COUNTRY	CHINA
SERIAL NO	

## LIMITED WARRANTY

The company will repair this product with new or rebuilt parts, free of charge for one year from the date of original purchase to the event of defect in material or workmanship.

A purchase invoice or any other proof of date of original purchase will be required before warranty performance is rendered. This warranty does not cover any damage which results from accident, misuse, abuse, alteration, modification or commercial use of this product.

This warranty is not available if the product is used in a health club or for any commercial purposes.

**CUSTOMER NAME:** \_\_\_\_\_

**DATE:** \_\_\_\_/\_\_\_\_/\_\_\_\_


**DEALER NAME:** \_\_\_\_\_

**DEALER ADDRESS:** \_\_\_\_\_

\_\_\_\_\_

## INSTRUCTION MANUAL MASSAGE CHAIR

•tokuyo

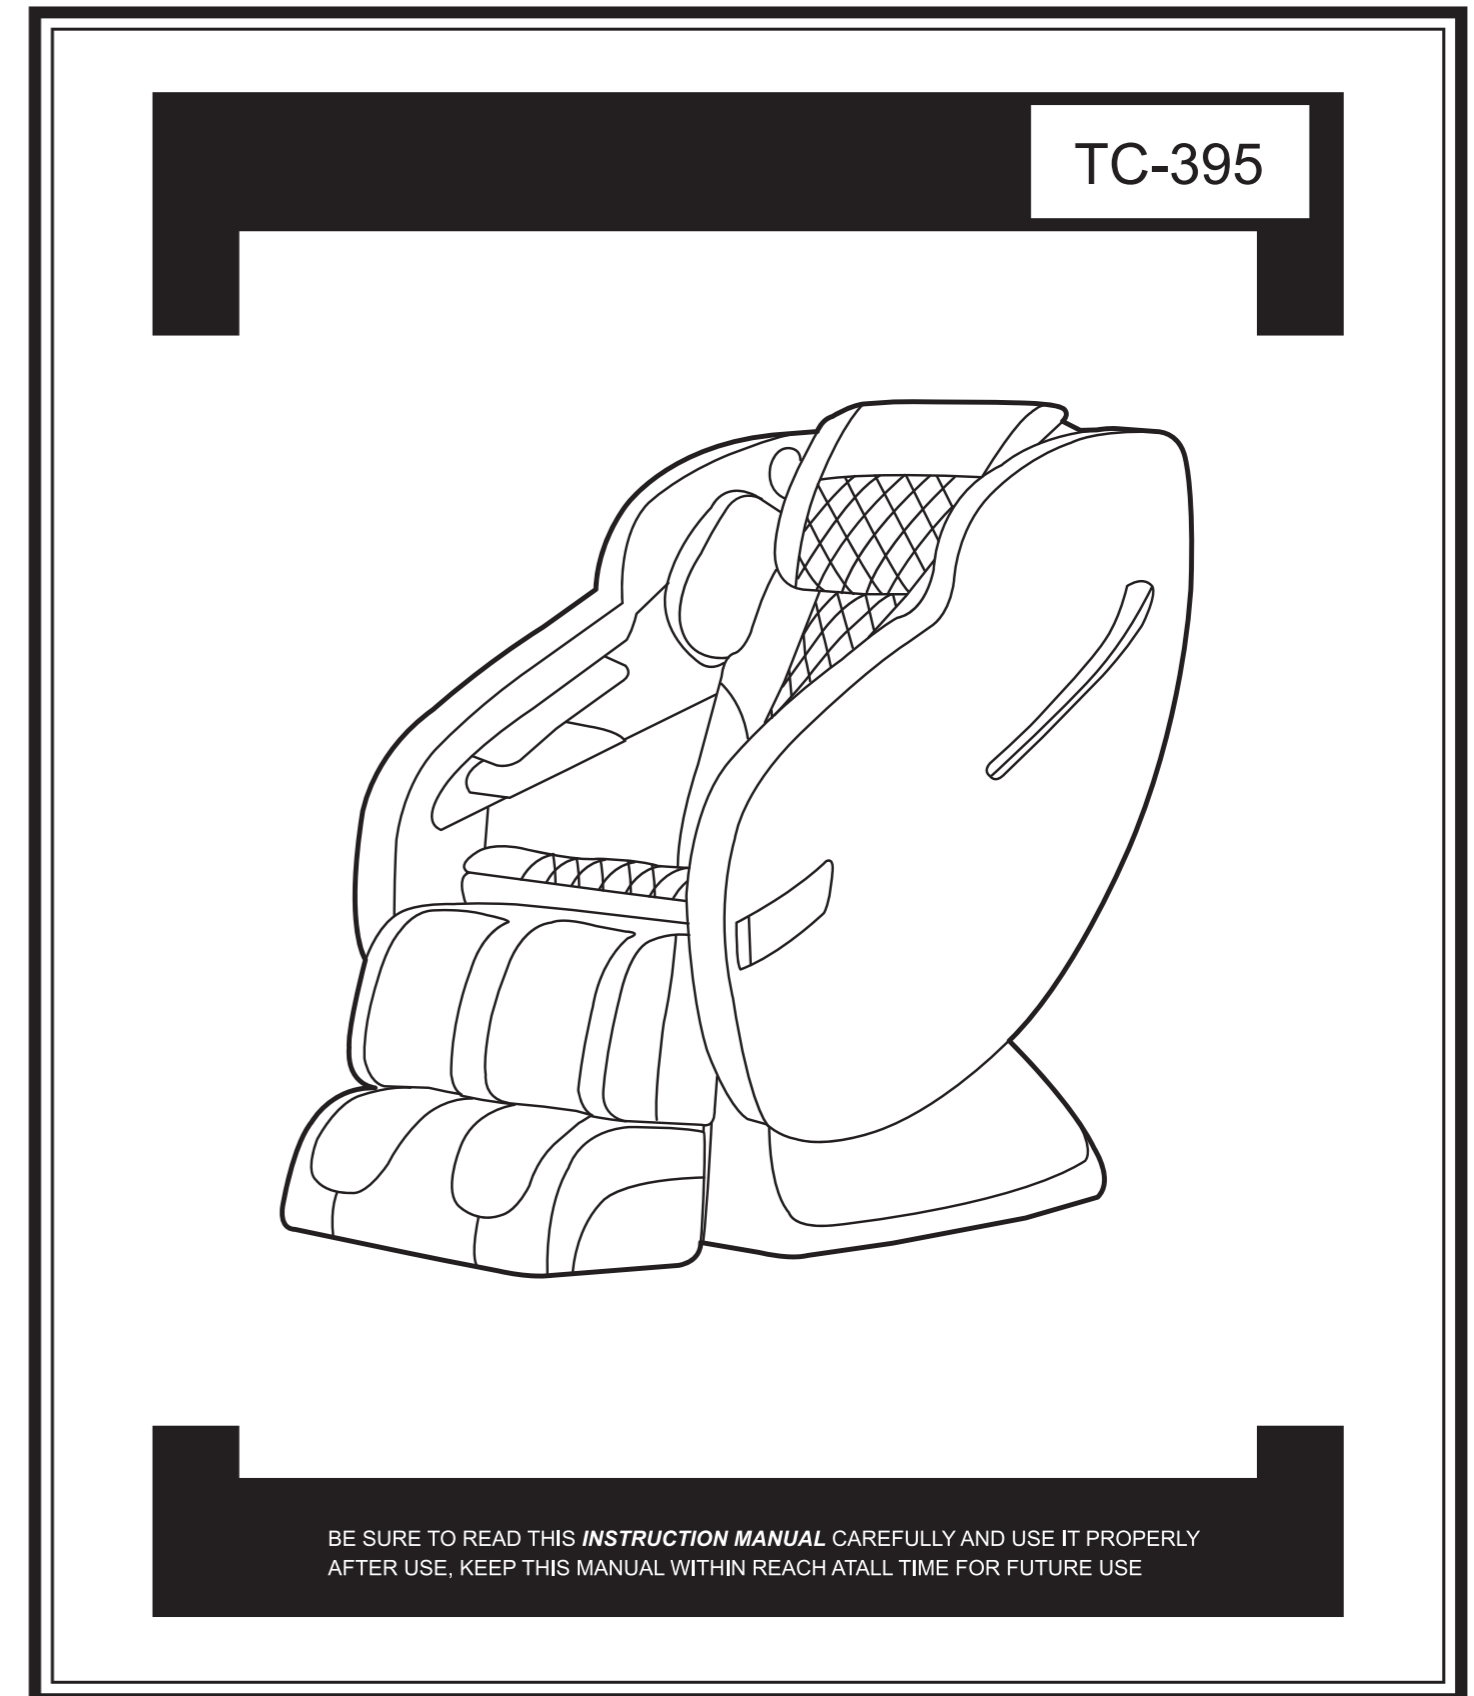










# PRODUCT COMPONENTS

Main Body Diagram (Front)

## CAUTIONS

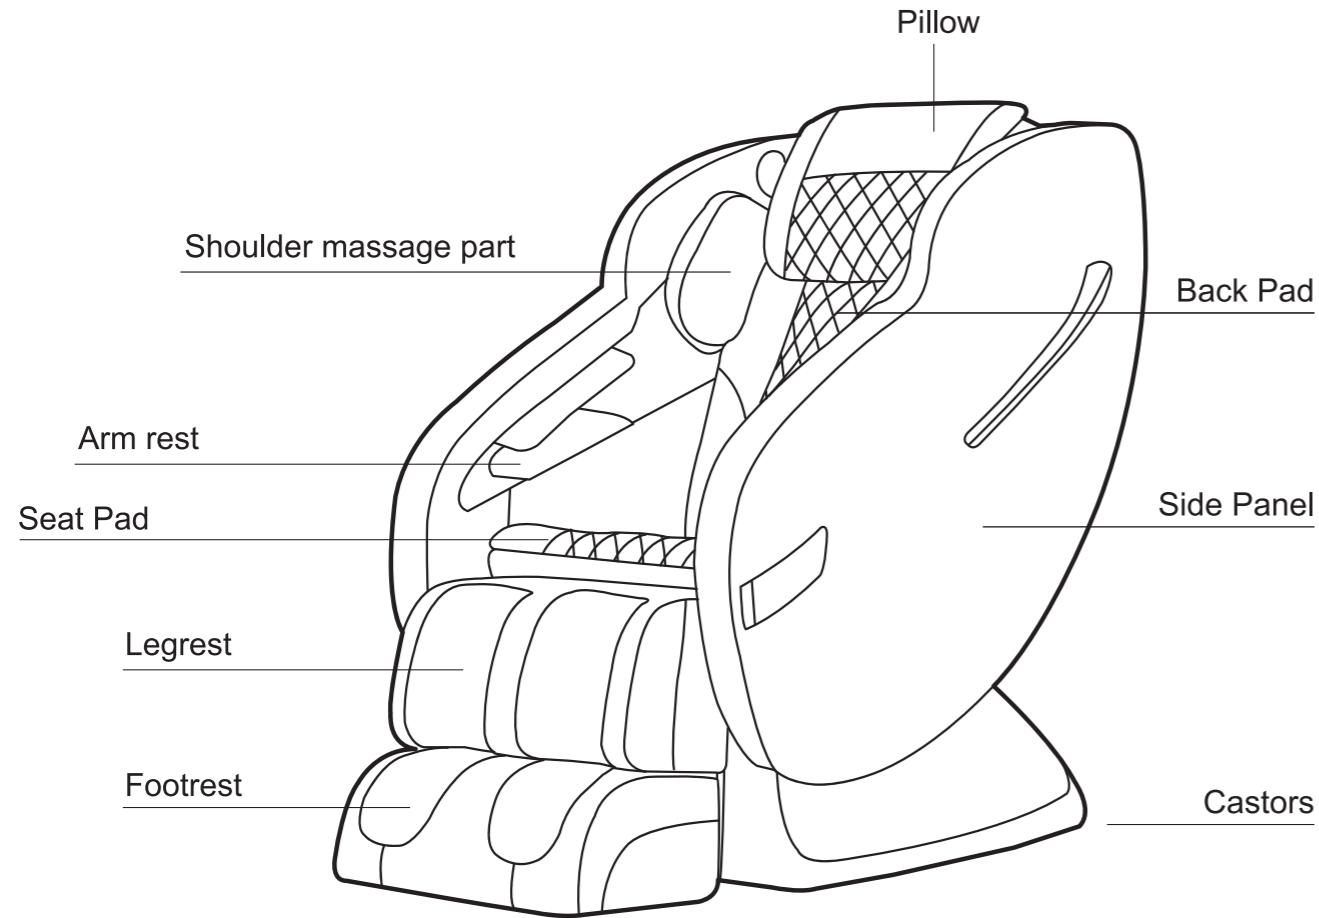

Please inspect this product when regularly use. If not use for a long time, please make sure this product can operate normally when use again.

Situations	Solutions
Indicator out and no operation	<ul style="list-style-type: none"> <li>● Please make sure the power plug is stable.</li> <li>● Please check the power switch is in the on position.</li> </ul>
Noise occurred when operating	<p>It is normal when following situations happen:</p> <ul style="list-style-type: none"> <li>● When tapping or kneading action.</li> <li>● When adjust speed.</li> <li>● Sound from the frame when operating.</li> <li>● When massage ball rub the cloth.</li> <li>● When air press operating.</li> <li>● Vibrator noise. (Especially when nobody lay on the chair)</li> <li>● When adjusting the footrest.</li> <li>● When motor working on loaded.</li> </ul>

## EMERGENCY SOLUTIONS

1. When abnormal situations, turn off the power and pull off the power plug.
2. Call customer service for repair when it is breakdown.
3. Power cord may only be replaced by the qualified personnel.

## WARNING

To prevent fire or electric leakage, only qualified personnel may disassemble or fix the machine.

### WARNING



1. Make sure not be twisted, knotted or stressed to the power cord or anything heavy on it.
2. The earth wire must be connected properly.
3. Before attaching the plug, make sure all switches must be turned off.
4. If the massage mechanism stays in the center of the backrest it will reset to the origin position at first.

## CLEAN, CARE AND MAINTENANCE

### ■ Maintenance

- Please do not remove the backrest, it may cause electric shock by touching parts inside massage chair.
- Please do not remove parts or repair massage chair by yourself. This may cause electric shock or accident.
- Please pull off the power plug when proceed maintenance.
- Please keep the massage chair clean and dustless. Please put the massage chair in dry area.
- If not use for a long time, please cover the massage chair with cloth to keep from dust.
- Please do not put massage chair under the sunlight directly.

### ■ Chair Maintenance


- Please clean the head pad, backrest pad and footrest by neutral detergents, and keep it dry after cleaning.
- Plastic part, tube and leather can be cleaned by cleaner also, mop it with dry cloth afterward.
- Do not use organic cleaners such as benzene for cleaning, as it may cause leather discoloration, ageing and disintegration.
- Please do not use insecticide, it may cause an electric shock or fire.
- Use only dry cloth to clean the machine to prevent malfunction.

### ■ Controller Maintenance

- Keep it away from fire and heat.
- Please keep it in dry condition.
- Please mop it with dry cloth softly or clean it with hairbrush.
- Do not use VOCs to clean. (Such as volatile, organic compounds)


## PRODUCT COMPONENTS

### Main Body Diagram (Rear)

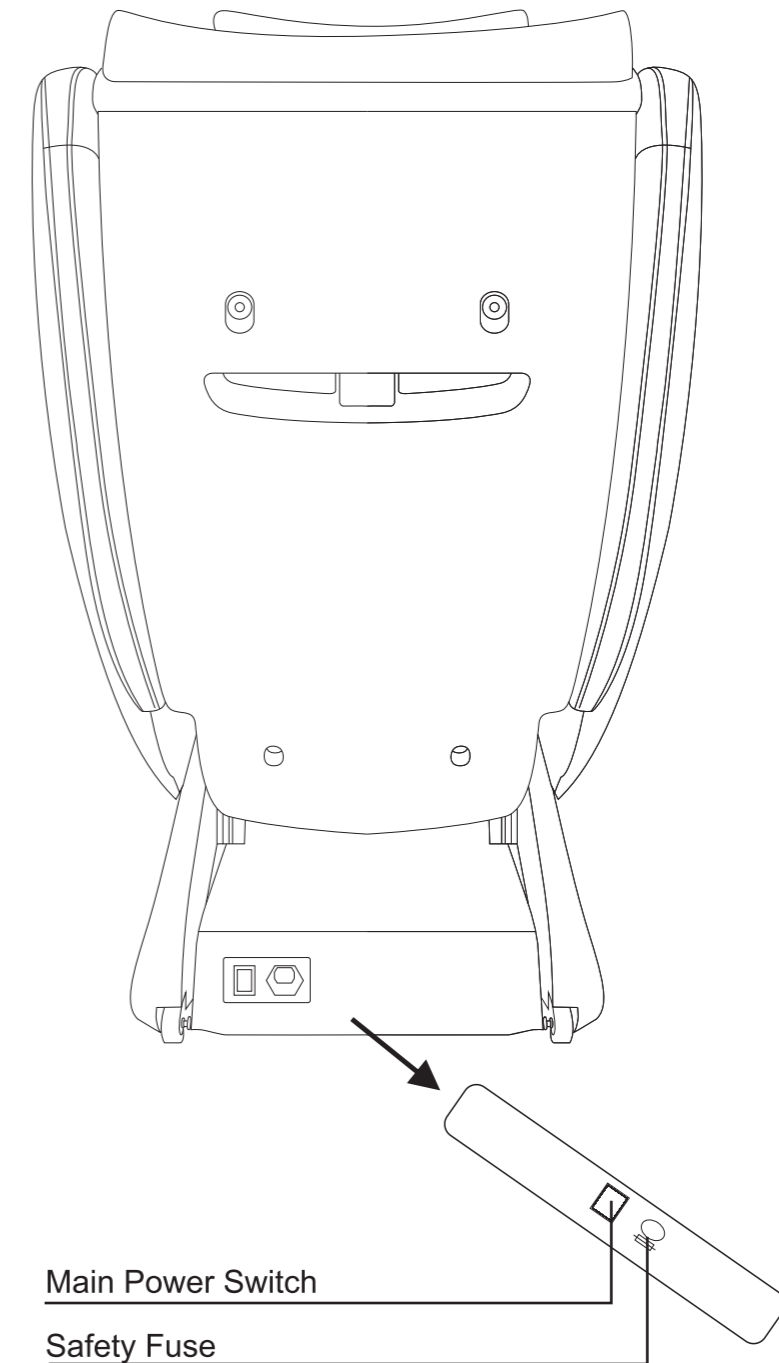


# REMOTE CONTROLLER

## CONTROLLER INSTRUCTIONS

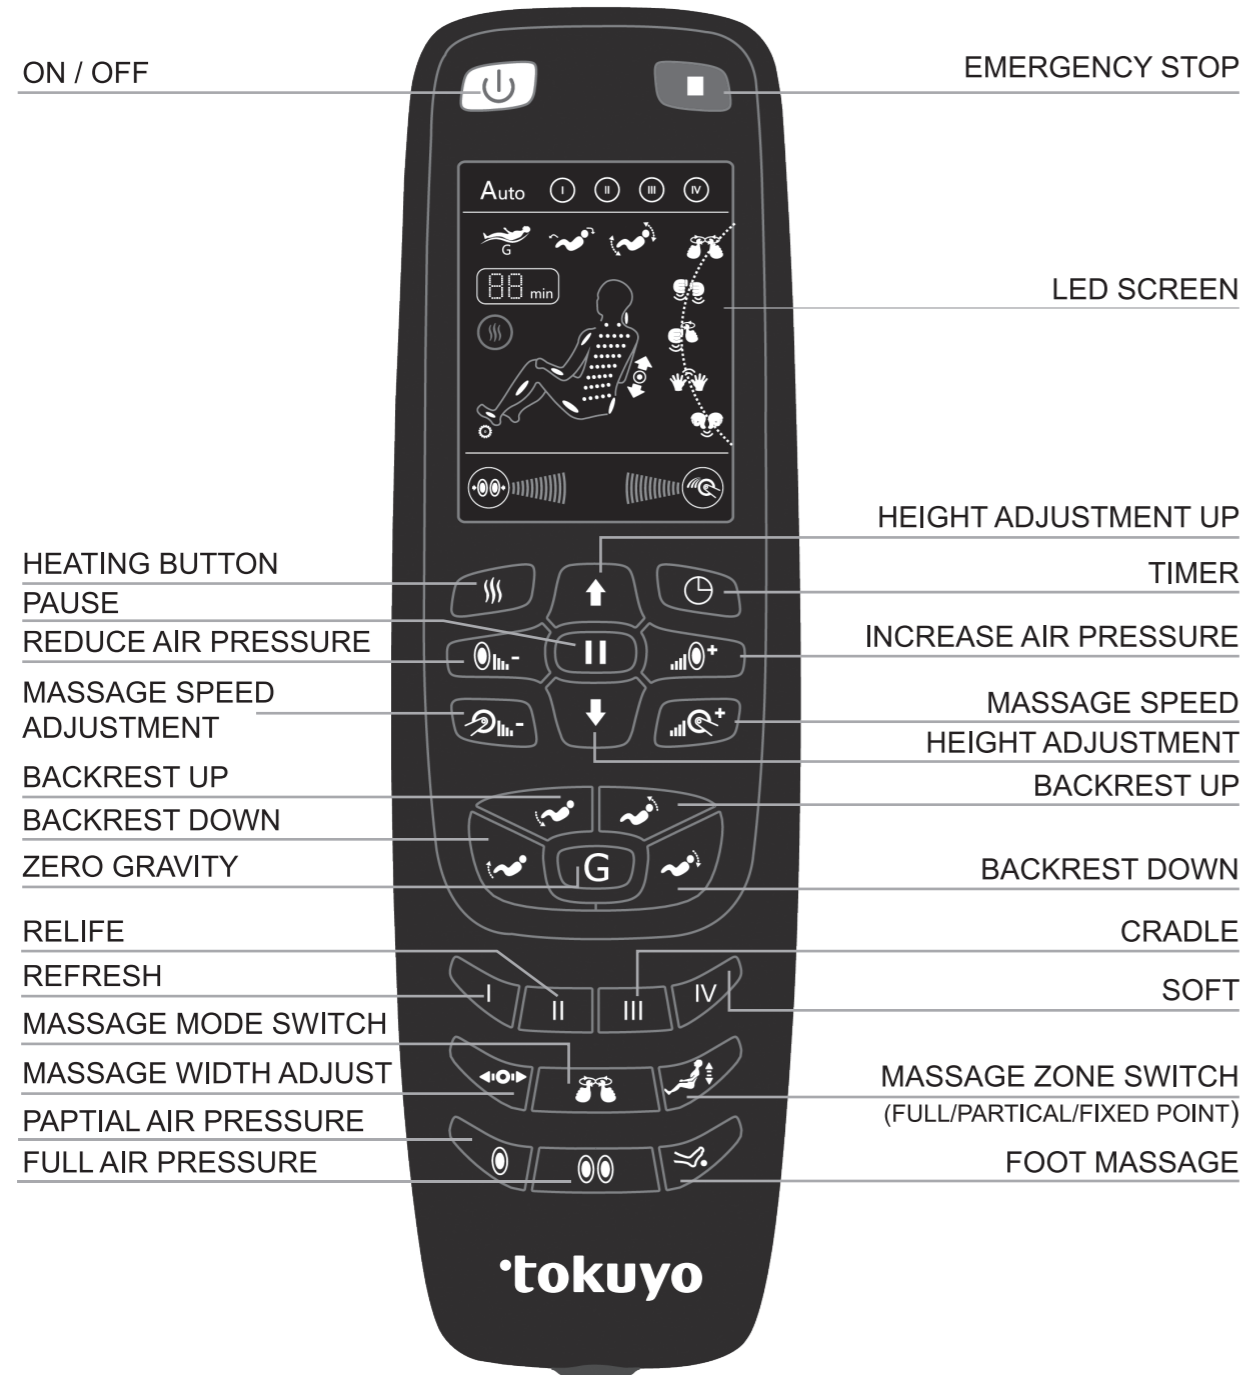

# OPERATION GUIDE

## Display Diagram

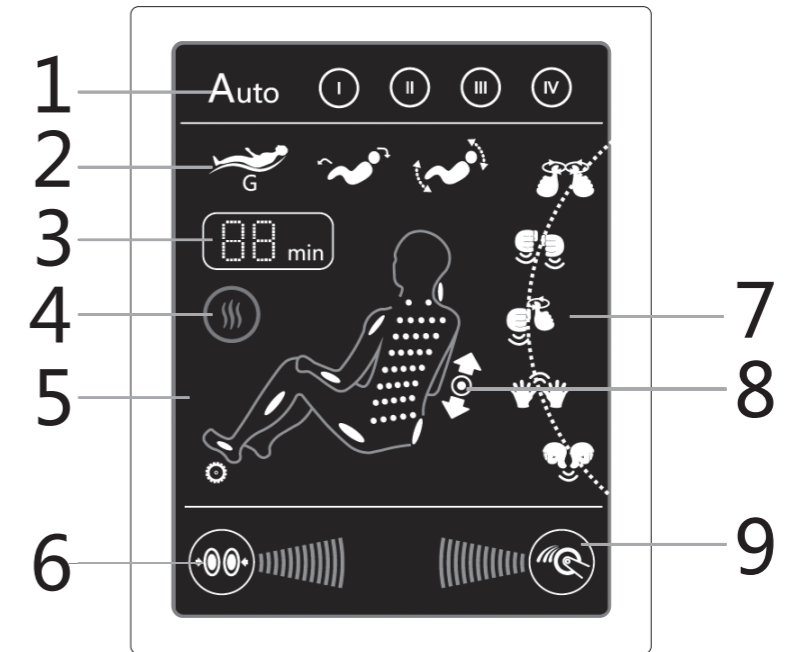





1. Massage chair is powered on.
2. Reclining position adjustment buttons are pressed the backrest and legrest are moving.
3. Shows the time remaining in current massage program.
4. Heating function is on.
5. Displays the location of massage rollers and active air bags.
6. Shows the air intensity level, from one to three.
7. Displays which massage technique is activated at the time. In order from up to down: Kneading, Tapping, Kneading & Tapping, Patting, Shiatsu.
8. Shows the direction of the massage rollers, moving upwards or downwards.
9. Shows massage roller width, from narrow to medium to wide.



## CONTROLLER INSTRUCTIONS




### Select Massage Area

Selection of Partial Body Area and Fixed Point Massage. These are for kneading and tapping massage.

Button	Name	Description
	Massage speed adjustment	Adjust massage speed.
	Massage width adjustment	Select 3 types of massage width.
	Roller position adjustment	Select up/down for fixed point massage.
	Massage zone switch	Select for full body - partial - fixed point.

## CONTROLLER INSTRUCTIONS

### START

Button	Name	Description
	ON / OFF	Press once to turn on, press twice to turn off.
	Emergency Stop	Stop massage program, need to press ON/OFF button to standby mode.
	PAUSE	Press to stop massage program, press twice to continue.

### Auto Massage Programs

Each program has different massage techniques: Refresh, Relaxation, Cradle, Soft






Button	Name	Description
<b>I</b>	Refresh	Suggest to massage in the morning. (Focus on kneading massage) ※ Adjust backrest position and air pressure intensity while using.
<b>II</b>	Relaxation	Suggest to massage when you feel tired or before sleeping at night. (Soft multiple programs) ※ Adjust backrest position and air pressure intensity while using.
<b>III</b>	Cradle	Suggest to massage at lunch break or after working. (Focus on kneading & tapping massage) ※ Adjust backrest position and air pressure intensity while using.
<b>IV</b>	Soft	Soft multiple back massage / ※ Adjust backrest position and air pressure intensity while using.

- ※ Default timer for above programs is 15 mins. the intensity of air pressure is level one, press "air pressure button" to adjust intensity. ( Automatically turn off when time's up)
- ※ Above programs are individual software, can't be executed with other programs.
- ※ Massage programs will be started after "beep" sound.

## CONTROLLER INSTRUCTIONS

**Manual Massage Program: Kneading, Tapping, Kneading & Tapping, Patting, Shiatsu.**

Partial auto program is for partial body massage.

Button	Name	Description
	Kneading	3 levels of adjustments, start with middle speed, adjust it while using.
	Tapping	Back tapping massage. ( Adjust speed & width while using)
	Kneading & Tapping	3 levels of adjustments, start with middle speed, adjust speed while using.
	Patting	Back patting massage. ( Adjust speed & width while using)
	Shiatsu	Real back shiatsu massage alike.





※Above programs are manual functions, for full body massage please select auto massage programs.

※Press speed button to adjust speed while using, default position is fixed point, press massage zone switch button for full/partial back massage.

## CONTROLLER INSTRUCTIONS

**Air Pressure Massage**

Air Pressure Massage Area and Intensity

Button	Name	Description
	Air Pressure Adjustment	3 Levels of intensity.
	Partial Air Massage	Press to select massage position.
	Full Body Air Massage	Press to start full body air massage.
	Foot Massage	Turn on/off foot massage function.