

封底

封面

Please read the instructions carefully before using this product and keep it well for reference.

USER MANUAL



T-DAGGER

ADRIATIC RGB mechanical keyboard

www.t-dagger.com
Made in China



T-TGK316

OS Support

Windows XP / Vista / Win7 / Win8 / Win10 / Win11

Function Introduction

- 1. Computer USB port interfaces with the keyboard without needing to install drivers or software.
2. Multi-level backlight brightness: Press and hold the [FN] key, and then press the arrow key "↑" to increase the backlight brightness of the keyboard.
3. There are 16 backlighting effects: FN + [Insert] key: switch 3 backlighting modes: A. RGB steady ON; B. RGB breathing C. Wave FN + [Home]: switch 3 backlighting modes: A. Hurricane B.Digital Times C. Pass without trace FN + [Page Up]: switch 3 backlighting modes: A. Single color Steady ON B. Single color breathing C. Single color run from left to right FN + [Del]: switch 3 backlighting modes: A.Go with the stream B.Clouds fly C.Winding Paths FN + [End]: switch 3 backlighting modes: A. Flowers blooming B. Both of way C. Rippling FN + [Page Down]: switch 7 color Single light,default as in RED.
4. To disable the [WIN] key: Press and hold the [FN] key, and then press left [WIN] key to turn off [WIN] key in order to avoid leaving gaming function if user presses [WIN] key by mistake. Repeat the above operation to restore the function.
5. Adjustable lighting speed: Press FN+ [-] or FN+ [+] adjust lighting effect speed.
6. Customized backlighting mode: Press FN+[-] get ready for set the colors on the key, [-] key now is your palette. Press FN+[Page down] for color switching, there are 8 colors options, 3 indicators [Num. Cap. Scroll] twinkle in same time during customization, Press the desired key for colors setting. Press FN[-] key to save the setting. For example, Set [T] key as BLUE color, FN+[-] → press the letter [T] key → Press FN+[-] to switch palette key [-] as BLUE color →Press [T] key again to set Blue color on it → Press FN+[-] to save the customization.
7. Back to factory setting: Press FN+ESC,then press F1,F3,F5 in turn.

01 EN

T-TGK316

- 8. Scroll wheel function: Volume+ / Volume-
9. Short cut keys:



Multi-media function (FN+F1-F12)



FAQ

- 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboardsUSB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.

02 EN

T-TGK316

Obsługiwane systemy operacyjne

Windows XP / Vista / Win7 / Win8 / Win10 / Win11

Function Introduction

- 1. Interfaces para porta USB do computador para o teclado, sem necessidade de instalar drivers ou software.
2. Diversos níveis de intensidade da iluminação de fundo: Pressione e mantenha pressionada a tecla [FN] e pressione a tecla de direção "↑" para aumentar a intensidade da iluminação de fundo do teclado. Pressione e mantenha pressionada a tecla [FN] e pressione a tecla "↓" para reduzir a intensidade da iluminação de fundo do teclado.
3. Há dezesseis efeitos de iluminação de fundo: Tecla FN + [Insert]: alterna entre três modos de iluminação de fundo: A.RGB ON e fixo; B.RGB oscilante C.Onda. FN + [Home]: alterna entre três modos de iluminação de fundo: A.Furacão B.Era Digital C.Sem rastros. FN + [Page Up]: alterna entre três modos de iluminação de fundo: A.Cor única fixa LIGADO B.Cor única oscilante C.Cor única correndo da esquerda para a direita. FN + [Del]: alterna entre três modos de iluminação de fundo: A.Segue o fluxo B.Nuvens voando C.Caminhos tortuosos. FN+ [End]: alterna entre três modos de iluminação de fundo: A.Flores desabrochando B.Dois caminhos C.Vibrante. FN + [Page Down]: comuta entre sete cores únicas. A cor padrão é VERMELHO.
4. Para desativar a tecla [WIN], Pressione e mantenha pressionada a tecla [FN] e pressione a tecla [WIN] para desativar a tecla [WIN], para evitar a saída da função de jogo se o usuário pressionar [WIN] por engano. Repita a operação acima para restaurar a função.
5. Velocidade da iluminação ajustável: Pressione FN+ [-] ou FN+ [+] para ajustar a velocidade do efeito da iluminação.
6. Iluminação de fundo personalizada: Pressione FN+[-] e prepare-se para definir as cores da tecla. A tecla [-] é agora a sua paleta. Pressione FN+[Page down] para alternar entre as cores. Há oito opções de cores, três indicadores [Num. Cap. Scroll] piscam ao mesmo tempo durante a personalização.

03 PL

T-TGK316

- Pressione a tecla desejada para definir as cores. Pressione a tecla FN [-] para salvar a configuração. Por exemplo, configure a tecla [T] com a cor AZUL, FN + [-] → pressione a tecla com a letra [T] →Pressione FN + [-] para mudar a tecla de paleta [-] com a cor AZUL →Pressione a tecla [T] novamente para definir a cor Azul na mesma →Pressione FN + [-] para salvar a personalização.
7. Recuperar as configurações de fábrica:Pressione FN+ESC,depois pressione F1 - F3 - F5 alternado-as.
8. Função da rodinha: Volume + / Volume -
9. Teclas de atalho:



Funkcja klawiszy multimedialnych (FN+F1-F12)



Często zadawane pytania

- 1. Jeśli klawiatura nie odpowiada, sprawdź, czy kabel USB klawiatury jest prawidłowo podłączony do odpowiedniego złącza USB w komputerze lub spróbuj użyć innego złącza USB w komputerze.
2. W przypadku rozlania płynu na klawiaturę należy natychmiast odłączyć kabel klawiatury USB od komputera. Wytrzeć nadmiar płynu i umieścić klawiaturę w ciepłym miejscu (na przykład pod lampą), aby naturalnie wyschła przed ponownym użyciem.

04 PL

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65

WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov

05

Table with 4 columns: 型号 (T-TGK316-8328), 名称 (说明书), 日期 (2023-4-2), 页码 (1 OF 1), 备注 (尺寸: L100*W100, 材质: 80克书纸, 风琴折, 印刷: 单黑印刷), 文件编号, 绘图 (冯丽廷), 审核, 核准, 版本 (A.0)

