



001	Bearing
002	Clicker Gear Screw
003	Clicker Gear
004	Pin E-Clip
005	Drag Positioning Washer A
006	Drag Plate A
007	Drag Plate B
008	Washer
009	Drag Spring
010	Drag Washer
011	Spool Bearing
012	Spool
013	Drag Retainer Ring
014	Spool Shaft
015	Washer
016	Anti Reverse Washer
017	Drag Positioning Washer B
018	Pinion
019	Pinion Bearing
020	Drive Gear Screw
021	Drive Gear
022	Drive Shaft Bearing B
023	Drive Shaft
024	One-way Bearing
025	Spindle Sleeve
026	Drive Shaft Bearing A
027	Drive Shaft Bearing Washer
028	Lever Arm
029	Lever Arm Screw B
030	Lever Arm Screw C
031	Lever Arm Screw A
032	Lever Arm Screw Washer
033	Spool Shaft Washer
034	Lever Arm Shaft Washer
035	Lever Arm Shaft
036	Handle Knob A
037	Lever Arm Shaft Bearing

038	Handle Knob B
039	Handle Knob Cover
040	Main Frame Cover
041	Main Frame Cover Screw
042	Pronunciation Base
043	Pronunciation Nail
044	Pronunciation Spring
045	Drag Lever
046	Drag Lever Pin E-Clip
047	Drag Cam
048	Cam Cover
049	Adjustment Knob
050	Cam Bearing
051	Adjustment knob Cover
052	Clicker Pin
053	Clicker Arm
054	Clicker Arm E-Clip
055	Main Frame
056	Stop Block Screw
057	Stop Block Washer
058	Stop Block Spring
059	Stop Block
060	Anti Reverse Screw
061	Anti Reverse Cam
062	Anti Reverse Cam Washer
063	Fine-tune Button
064	Fine-tune Clip
065	Fine-tune Pin
066	Rod Mount(clamp style)
067	Rod Mount Screw
068	Rod Mount Clamp
069	Clamp Screw
070	Gear Cover
071	Gear Cover Screw
072	Clicker Arm Screw
073	Pronunciation Base