


## 1

- Do not suffer from water droplets or water splashes. Do not place objects such as vases.
- Improper battery replacement is dangerous and can only be replaced with the same type or equivalent type of battery.
- Batteries must not be exposed to warnings such as sunshine, roasting or similar overheating.
- External power adapter charging use, the charge should be promptly unplug the power cord to disconnect the power. Do not use this product in charge mode. (To use this product to be used after unplugging the power).
- Do not use the wireless device or use the equipment will cause the interference of electronic equipment and security risks, please turn off the product.
- In the flammable and explosive area, please close the product, so as not to cause an explosion or fire. The "turn off two-way radio" logo area should immediately turn off the device.
- When you fly, please follow the relevant regulations and regulations of the airline, please close the product before the aircraft take off, so as to avoid the security risks.
- The power adapter of this product as a disconnect device, disconnect the device should be maintained to facilitate the operation.



1 x amplifier    1 x headset wired microphone    1 x charging cable    1 x belt    1 x manual    1 x certificate

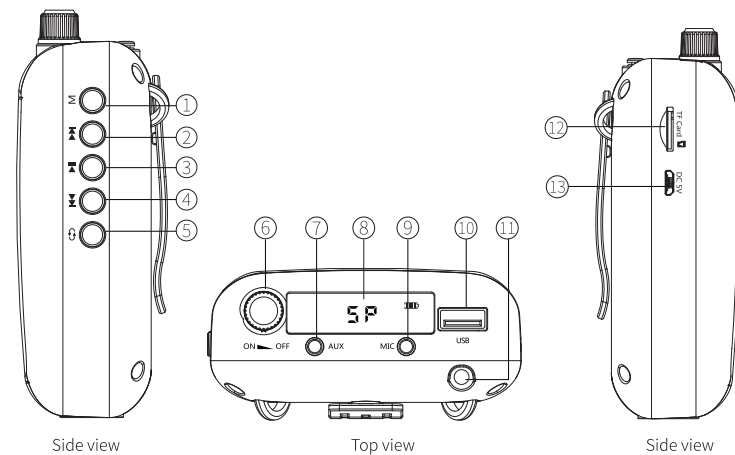

1. Mode key: When with a device access, short press for the TF card / U disk / FM / audio input / PA input mode conversion, long press invalid; when no device access, short press for FM / PA mode conversion , Long press invalid.
2. Previous / fast backward key: When with TF card / U disk playback, short press to select the last song, long press rewind; When under FM radio mode, short press for a frequency point down, long press to switch to a radio; when with audio input, Short press is invalid, long press volume down.
3. Playback / pause key: When playing with TF card / U disk / audio input , short press for playback / pause, long press is invalid; under FM radio mode, short press to play / pause, long press automatically search the radio, when search is completed,it will automatically save the stations and Jump to the first station playing.
4. Next / Fast forward key: TF card / U disk playback, short press to select the next song, long press for fast forward; under FM radio mode, short press for a frequency point increment, long press to switch to the next radio channel; when with audio input, short press is invalid, long press for volume up.
5. AB repeat / cycle key: When playing MP3, press the point for the beginning of a point, and then click for the end of the end of B and at the same time indefinite repeat AB between the two points, and then short

6

1. The microphone is directional, make sure the microphone head to the front of the mouth 1-2cm, aligned sound collection hole to get the best pickup effect.
2. To ensure the life of lithium batteries, do not use this product during charging; if do not use it a long time, it should be charged once every month.
3. All parts of this product are designed according to the needs of the amplifier, if you need to replace the accessories, please use the original parts from us to achieve the best working condition.
4. Non-professional technical personnel please do not arbitrarily disassemble modified, maintenance, if any questions or service needs, please contact us or the local seller.
5. Please adjust the volume according to the actual use of the environment, long time in high volume will damage your hearing health.
6. Do not use this product in hot, humid environments.
7. Do not throw away, to avoid damage caused by falling down.
8. Do not disassemble, repair and modify this product by yourself.
9. If necessary, use the input voltage DC5V USB power supply or optional universal lithium battery.
10. Please follow the instructions for the use of lithium batteries, do not arbitrarily discarded or placed in the fire, so as not to cause danger!
11. Temporarily do not use this product, please turn the product power switch to the off state to turn off the power, to avoid the battery power loss.



Q: How to do for my amplifier has no sound?

A: If your amplifier did not has sound, please do not worry, and check as below:

- (1) whether the microphone is inserted in the wrong position.
- (2) whether the host power switch is turned on.
- (3) Whether the microphone volume knob is already open.
- (4) whether the battery power is sufficient.

If the above operation can not solve the problem, please contact the us or the local seller.

Q: Why does the amplifier has a whistle?

A: There are four reasons for howling are overload, distance, angle, frequency, howling is generally caused by the overload of the input signal.

As the howling itself is not control, generally can be used to solve the following methods.

- (1) appropriate to adjust the loudspeaker loudspeaker volume, try not to open to the maximum volume.
- (2) control the distance between the microphone and the loudspeaker, do not leave too close.
- (3) adjust the microphone and loudspeaker angle, to avoid the microphone is facing the loudspeaker loudspeaker.

Q: How long is the life of the lithium battery, can I replace it?

A: Lithium battery life is generally 2-4 years, is replaceable, please contact us for the battery specification.

Q: How to do if FM radio can not search ?

A: Please confirm whether the use of the environment FM signal coverage, whether it has automatically searched the local radio.

