

Note: If the following documents do not solve your problem or if you have any questions, please do not hesitate to contact us

Contact: [support@maono.com](mailto:support@maono.com)

MAONO official website: <https://www.maono.com/>

Facebook: <https://www.facebook.com/maonoglobal>


IG: <https://www.instagram.com/maonoglobal/>

Notice: Whether it is a computer or software, in the sound settings, set **Maonocaster E2 as the default device !**


## 1. Windows basic settings

STEP 1: Go to "Windows setting".


STEP 2: Select "System".

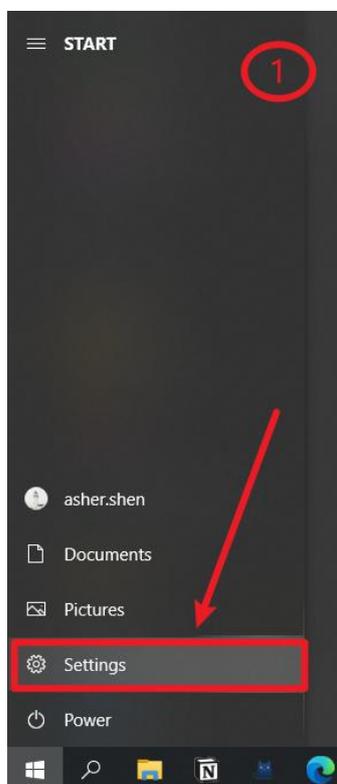

Contact: [support@maono.com](mailto:support@maono.com)

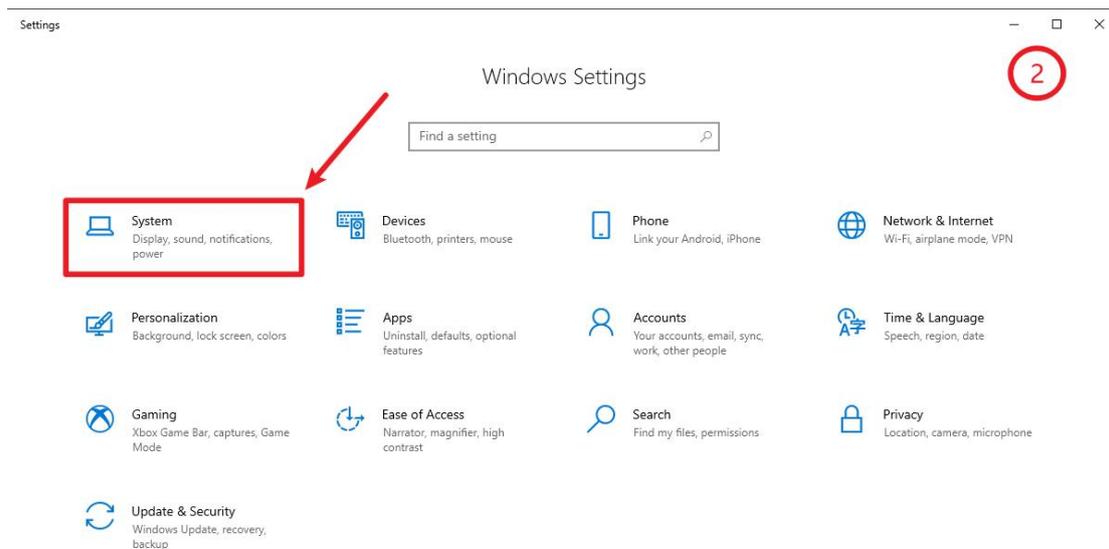


STEP 3: Select "Sound" and go to "Sound Control Panel".

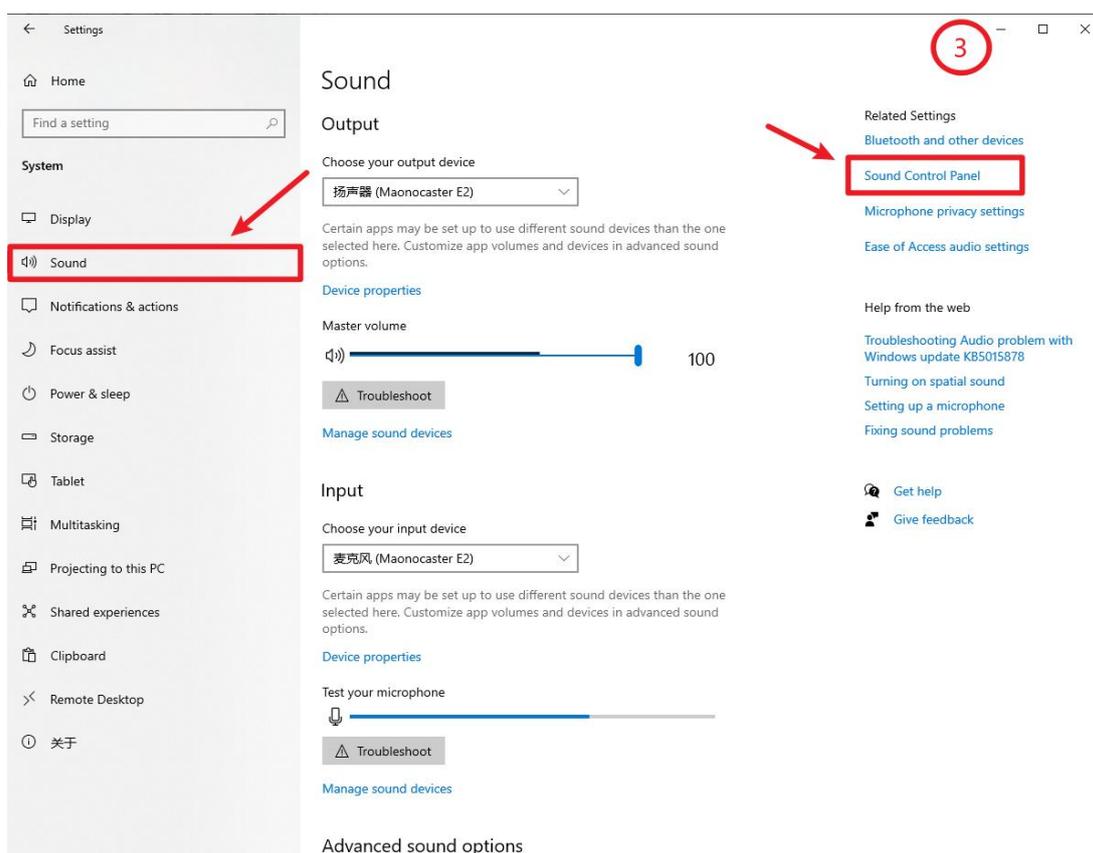


STEP 4: Set Maonocaster E2 as default recording device in "Recording" of sound setting.




Contact: support@maono.com

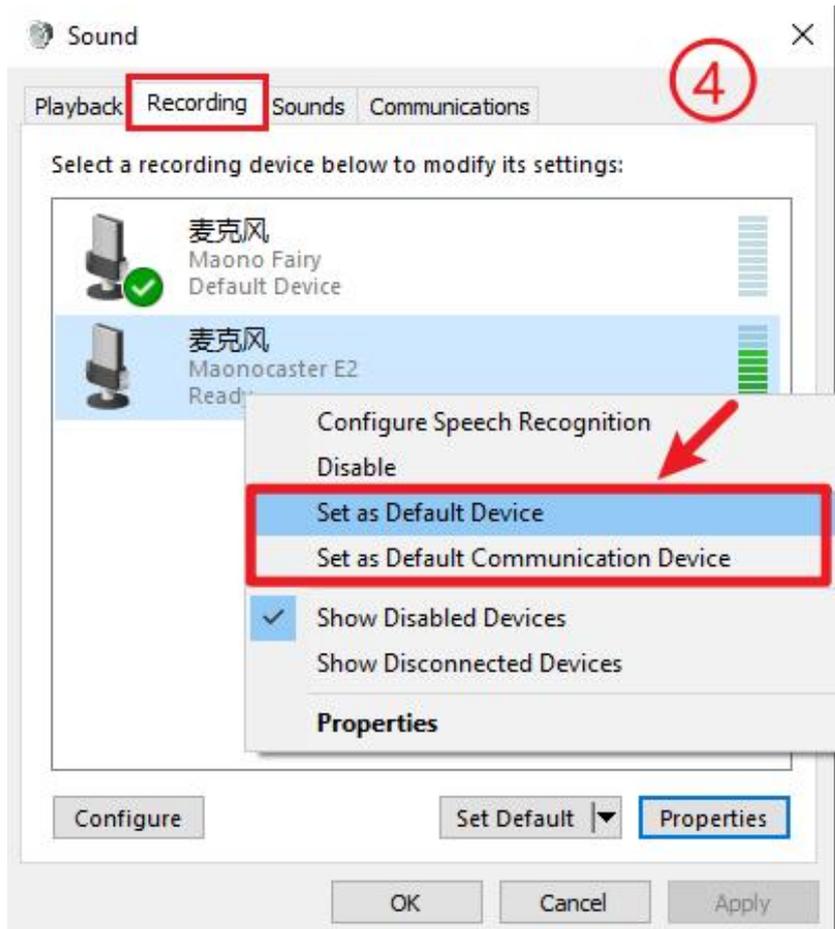

STEP 5: Double click "Maonocaster E2" go to "Properties", select "Levels" and set it to 100.

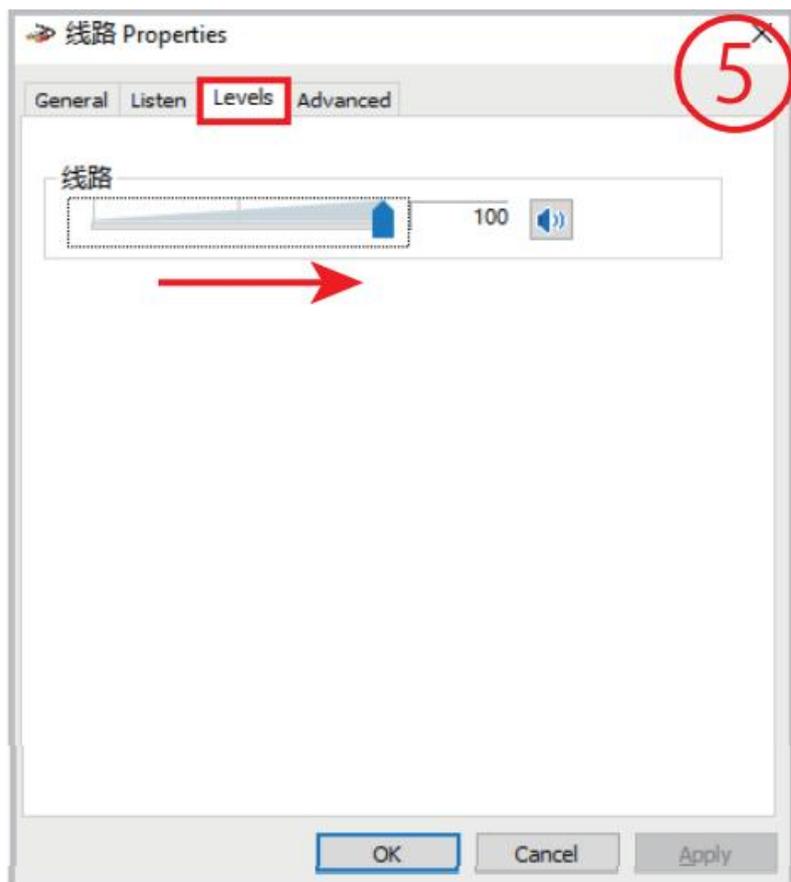

STEP 6: Set the Maonocaster E2 as default playback device in "Playback" of sound setting.

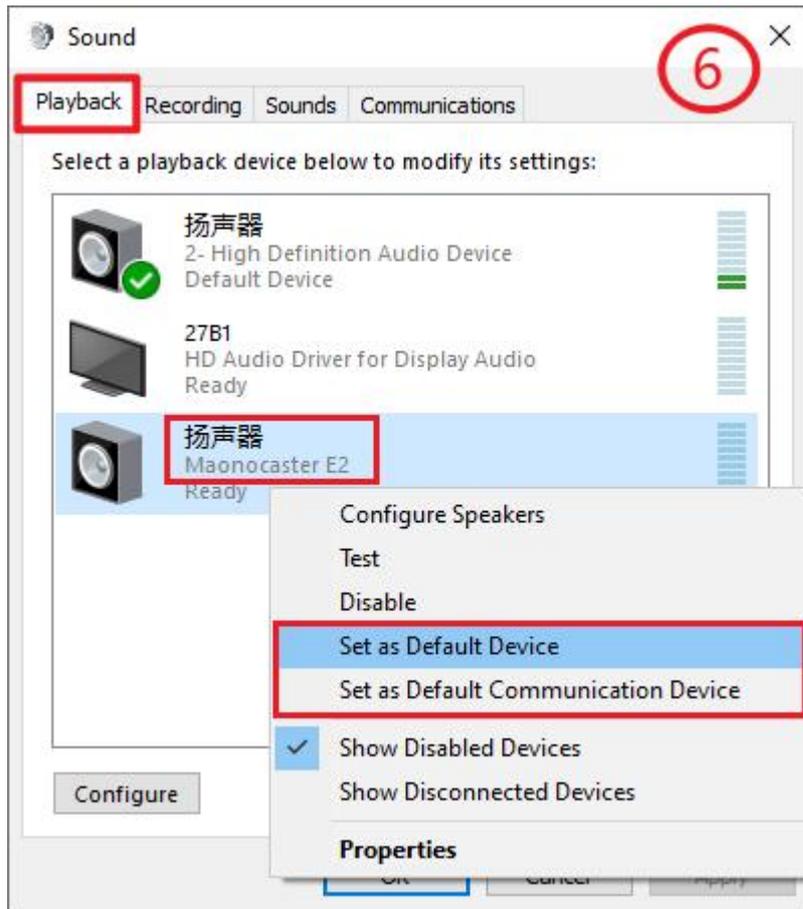

## 2. Software Audio Settings

After Maonocaster E2 is set up on the PC, how to set it in common software?


(Take Adobe Audition, OBS, DISCORD, ZOOM, AUDACITY, Twitch as examples.)

Notice: If you set the Maonocaster E2 as the default device in the software settings, it is still useless, you need to set it again!


Adobe Audition:

STEP 1: Open Adobe Audition and navigate through the menu to

Edit > Preferences--> Audio Hardware

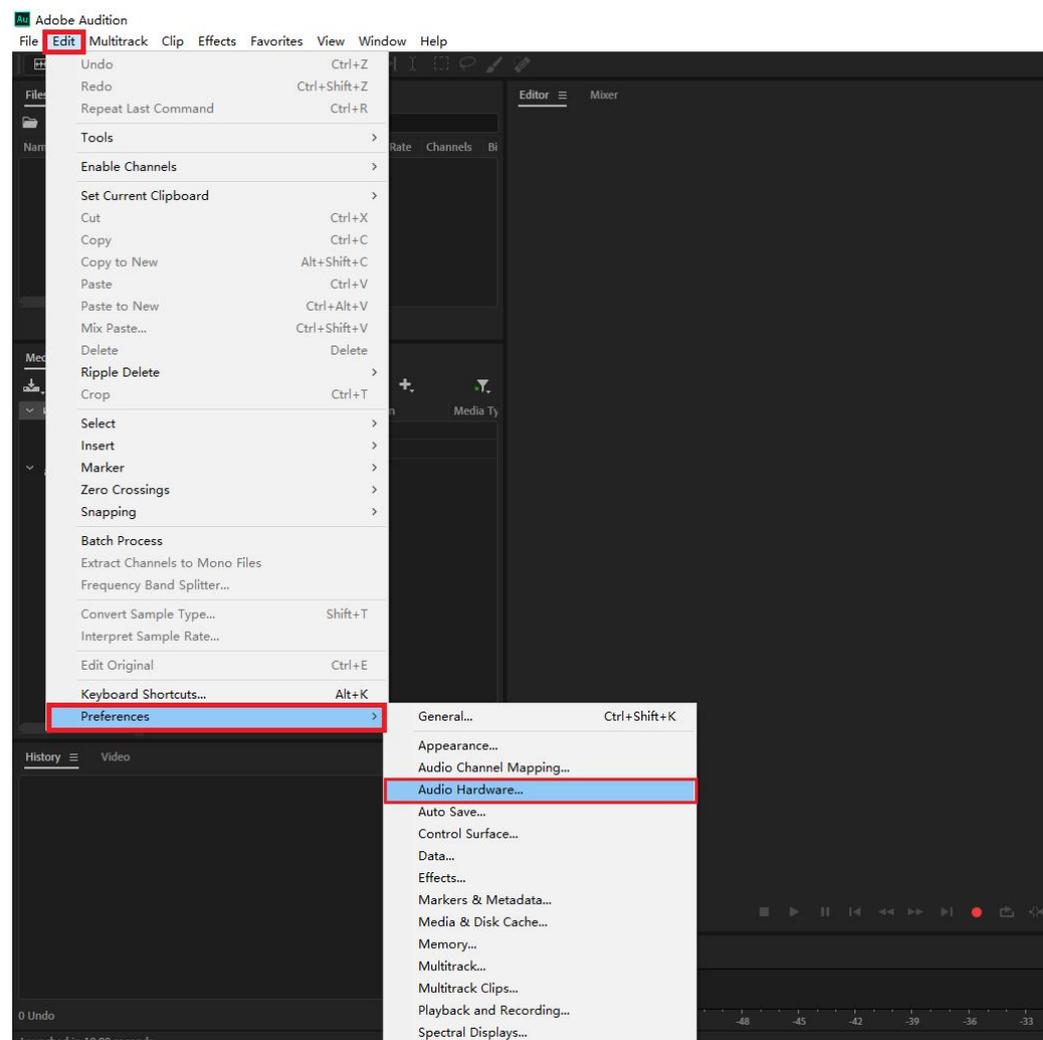


STEP 2: Please select the device as Maonocaster E2 for Default input and Default output.

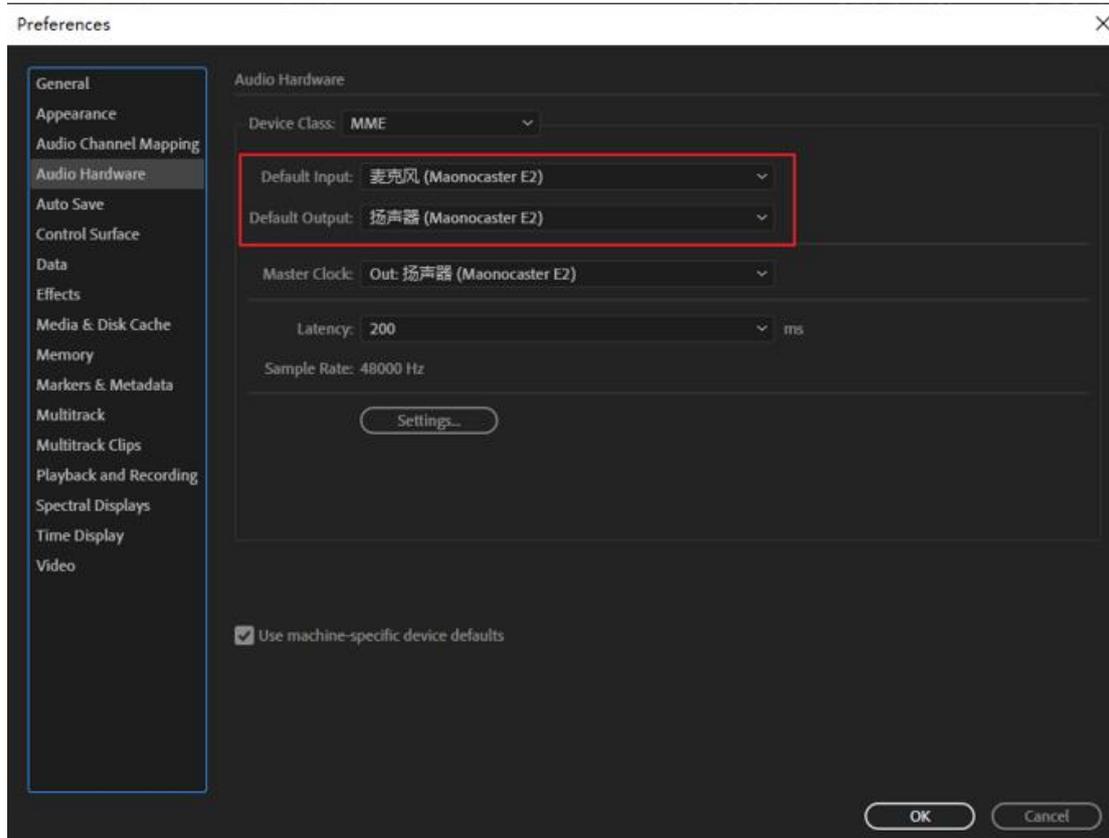


OBS:


STEP1: Select "Settings" in "File".

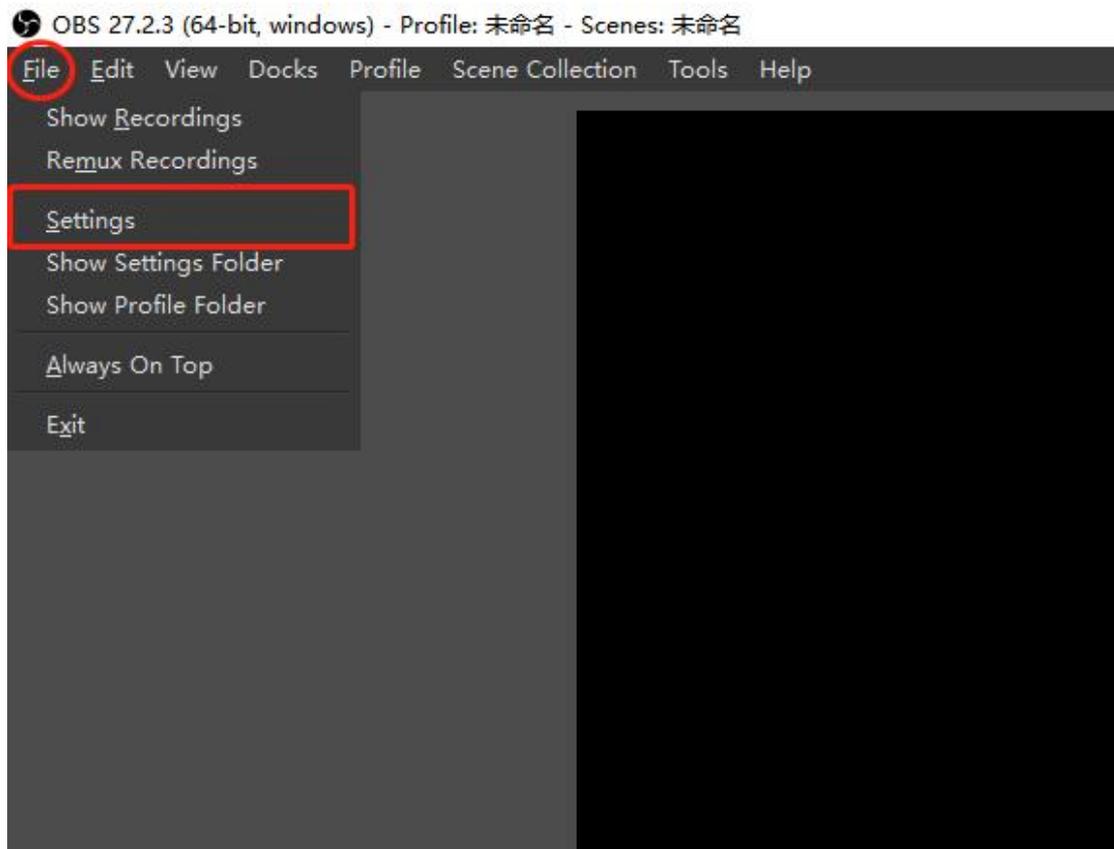


STEP 2: Select "Audio".

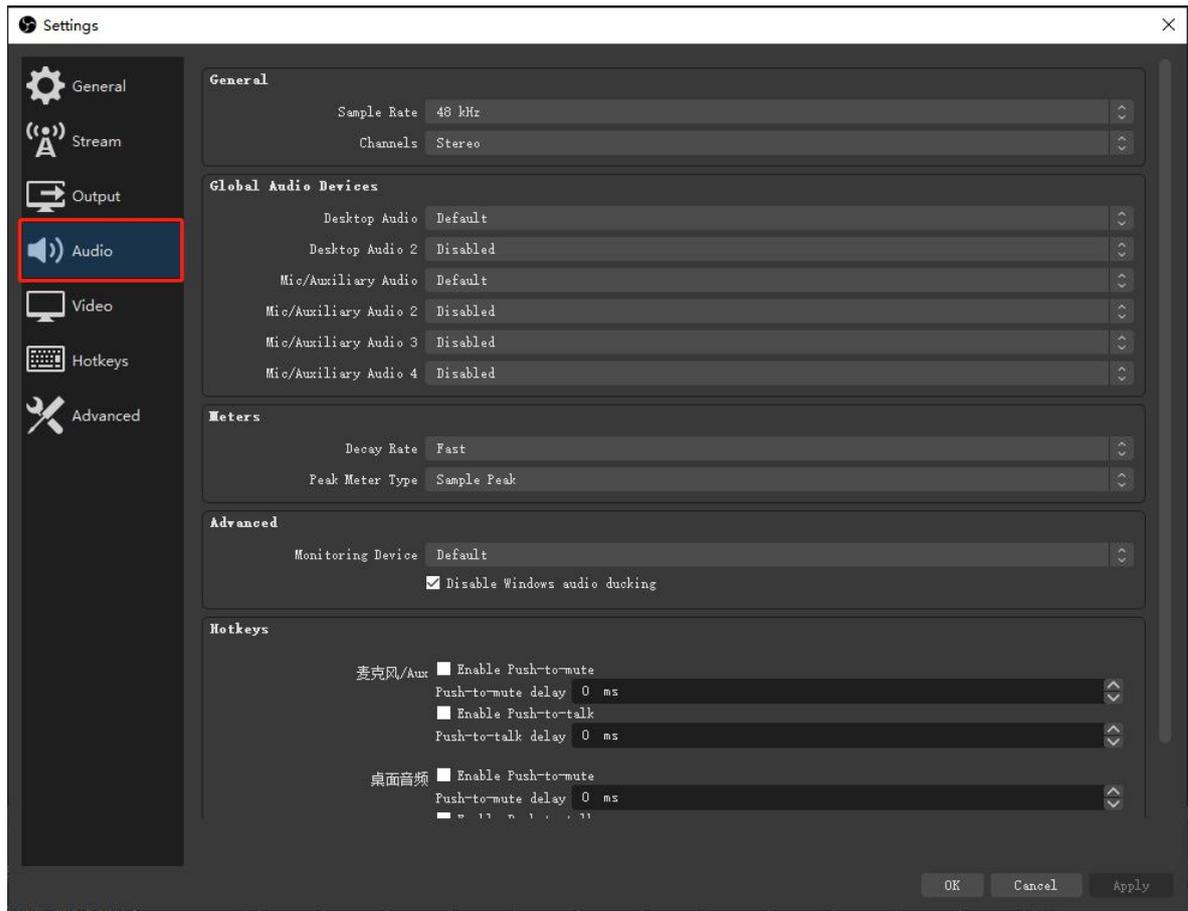


STEP 3: Select the device to be used in "Desktop Audio".

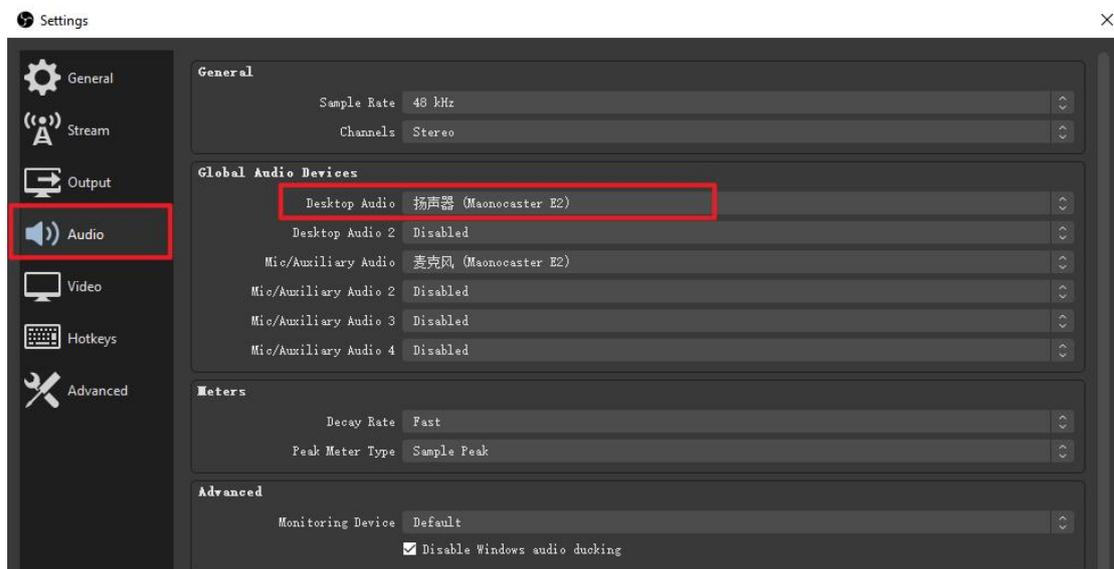

STEP 4: If you are using OBS and there is no sound, then please right click on the AUX (microphone) and select properties

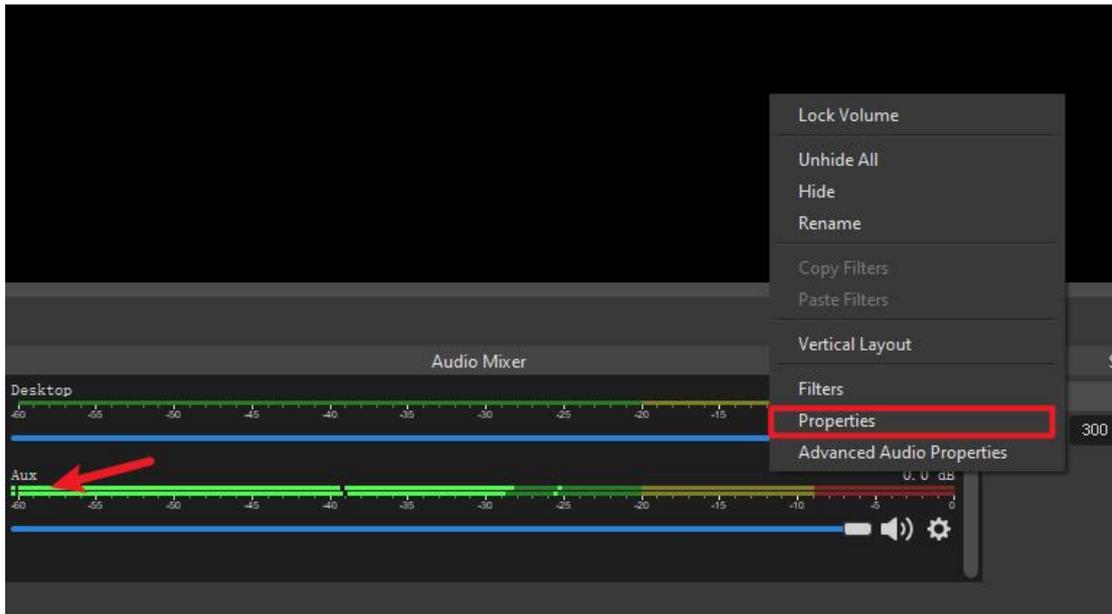


STEP 5: Use Maonocaster E2 as your default device

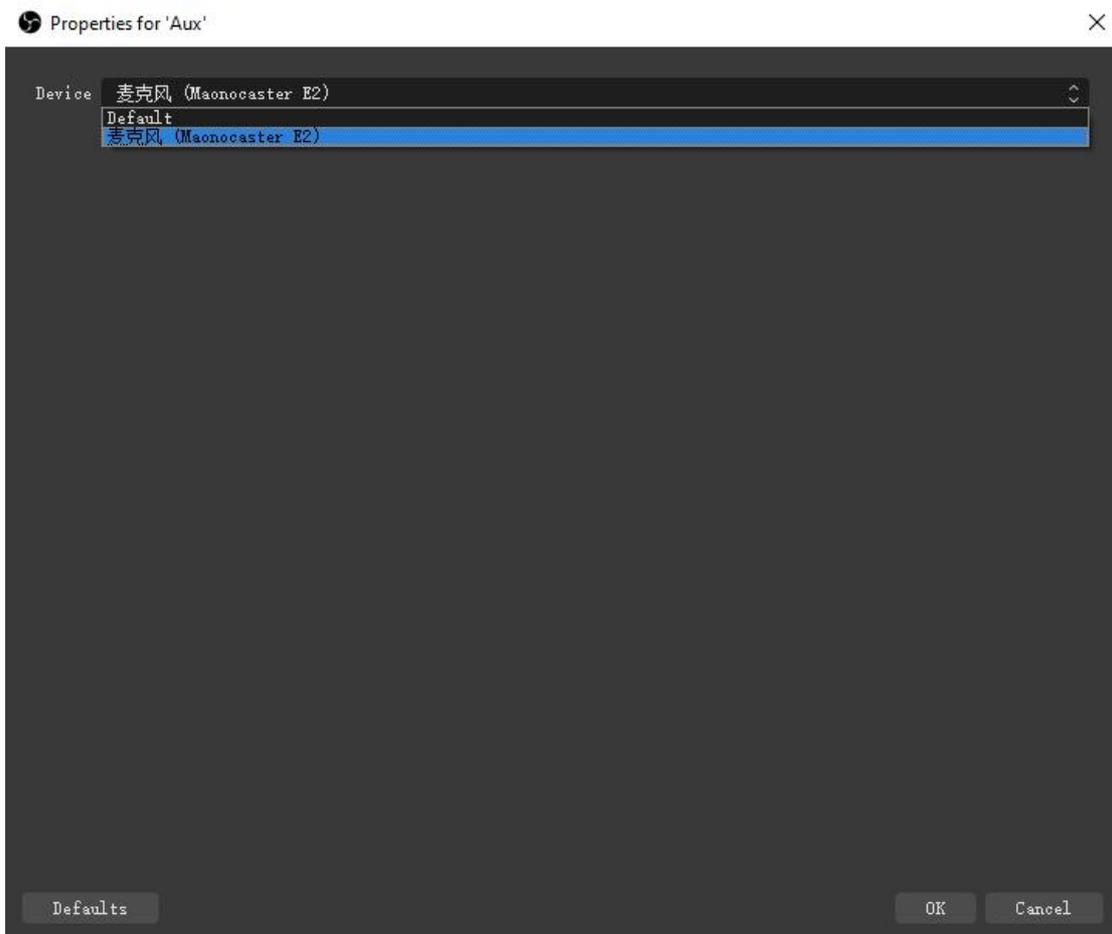


Contact: [support@maono.com](mailto:support@maono.com)

DISCORD:


STEP 1: Open the "Setting".

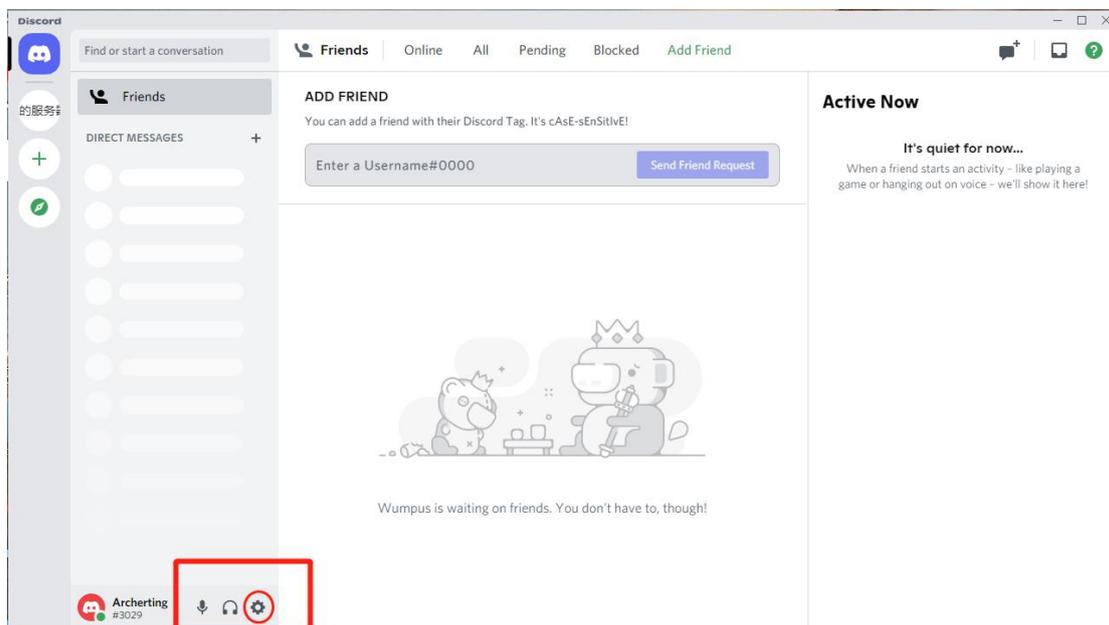

STEP 2: Select "Voice & Video".

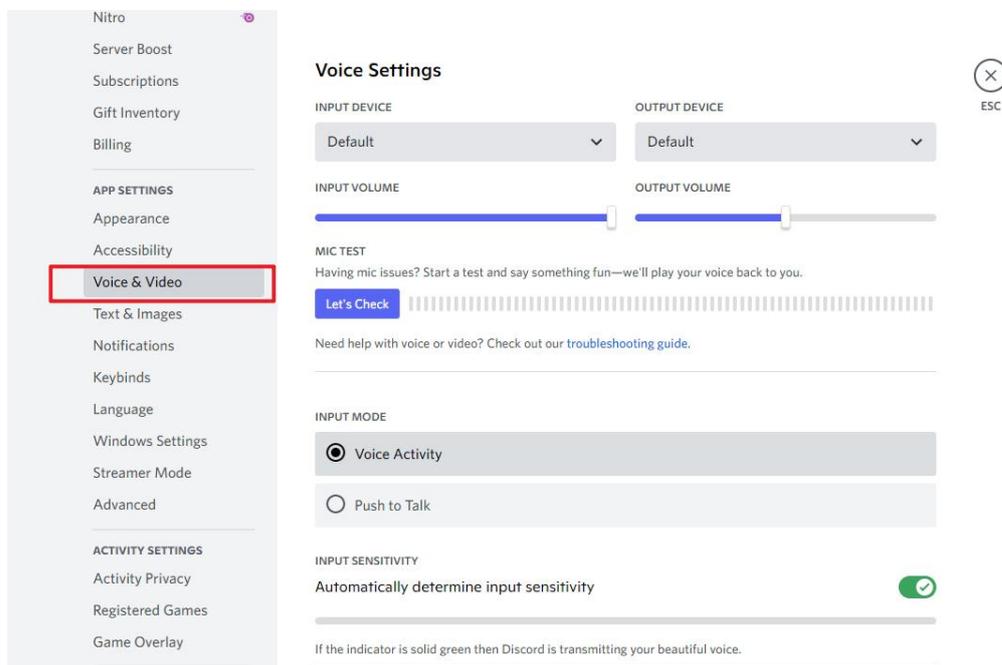


STEP 3: Select "Maonocaster E2" in "INPUT DEVICE & OUTPUT DEVICE".

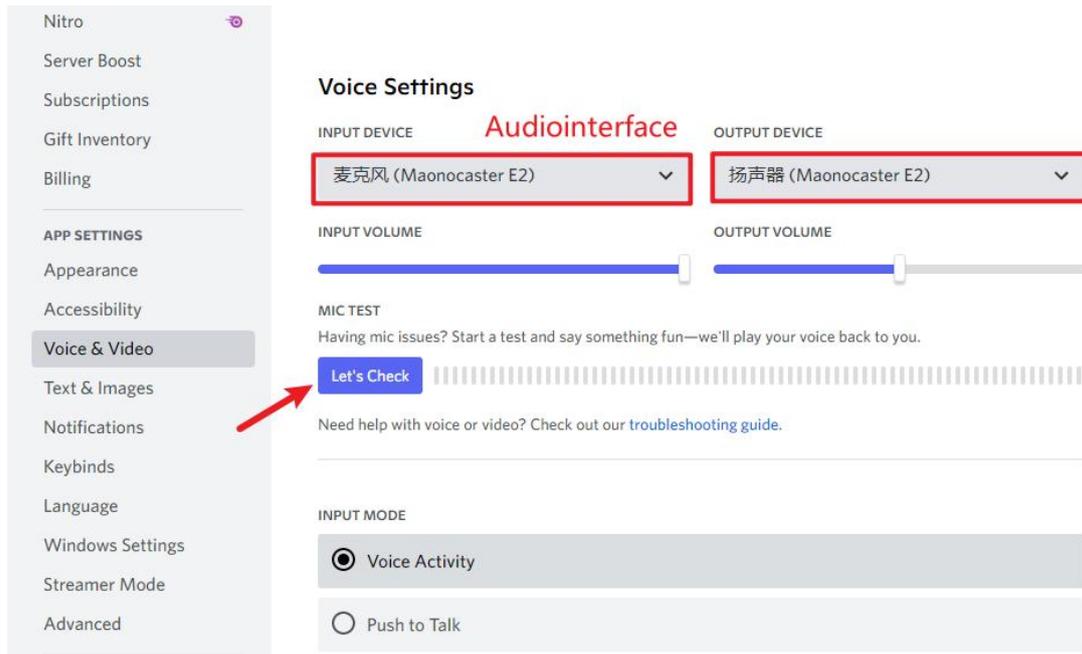

STEP 4: Test whether the sound input and output are normal, if there is no sound, please reconnect to the audio interface.

STEP 5: Turn off Automatic Gain Control.

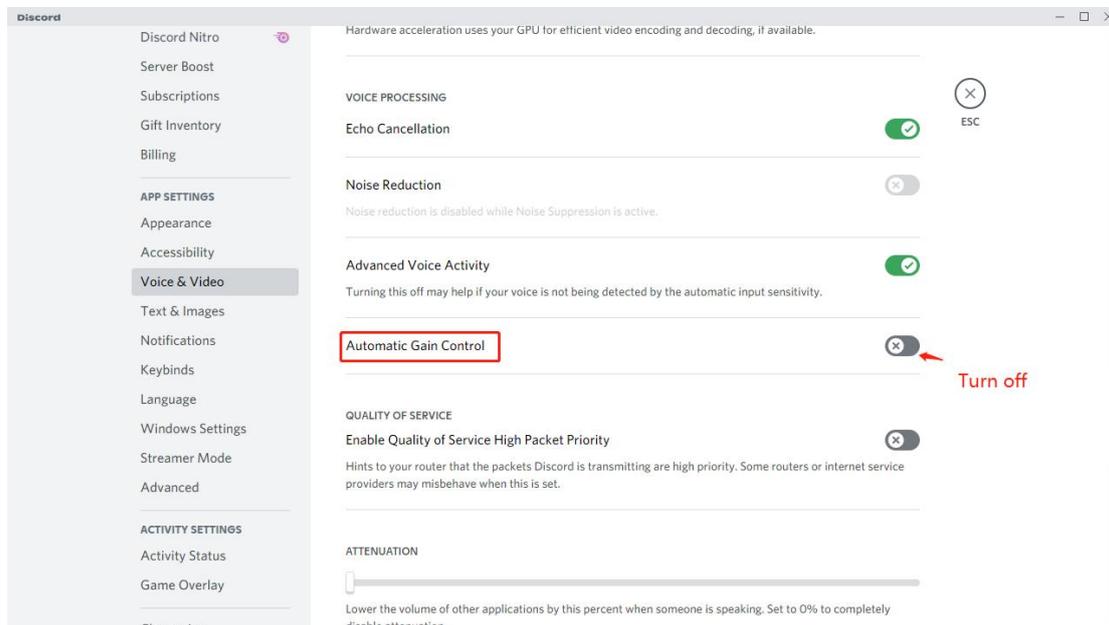


ZOOM


STEP 1: Open Settings.



Contact: support@maono.com

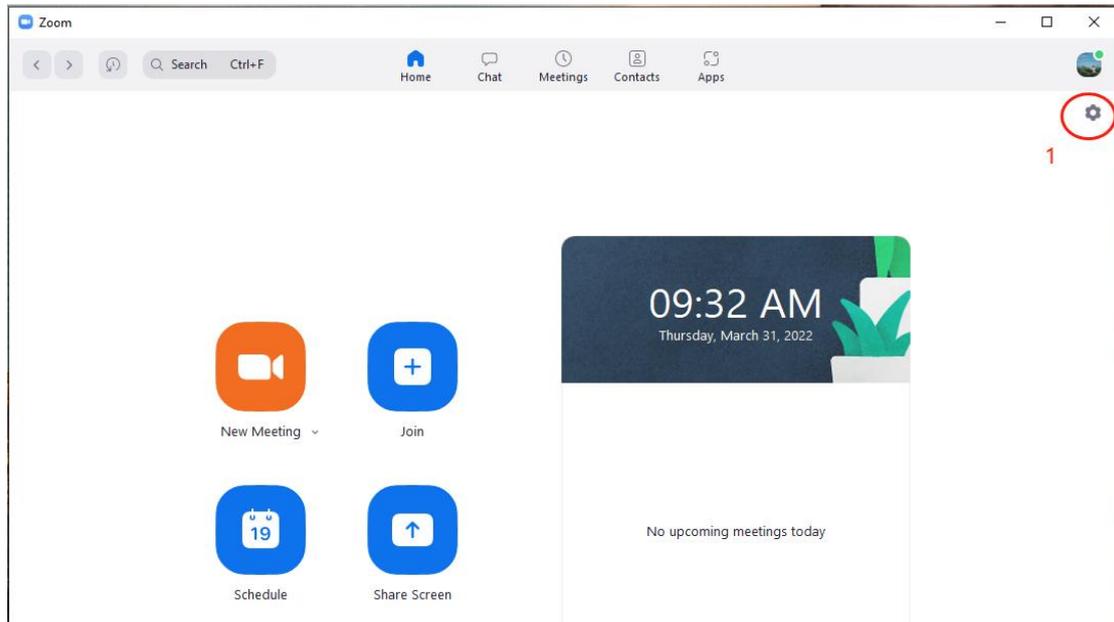


STEP 2: Click Audio.

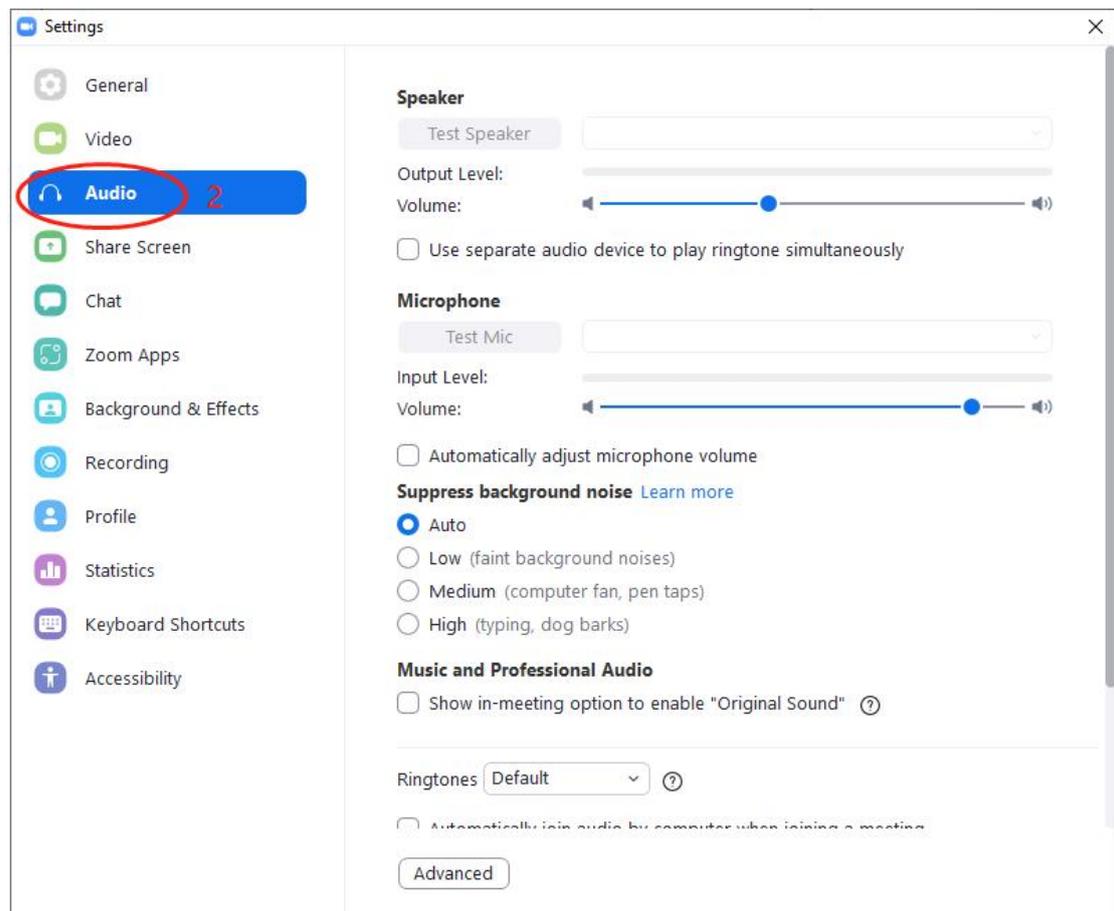

STEP 3: Select the 'Maonocaster E2'




Contact: support@maono.com

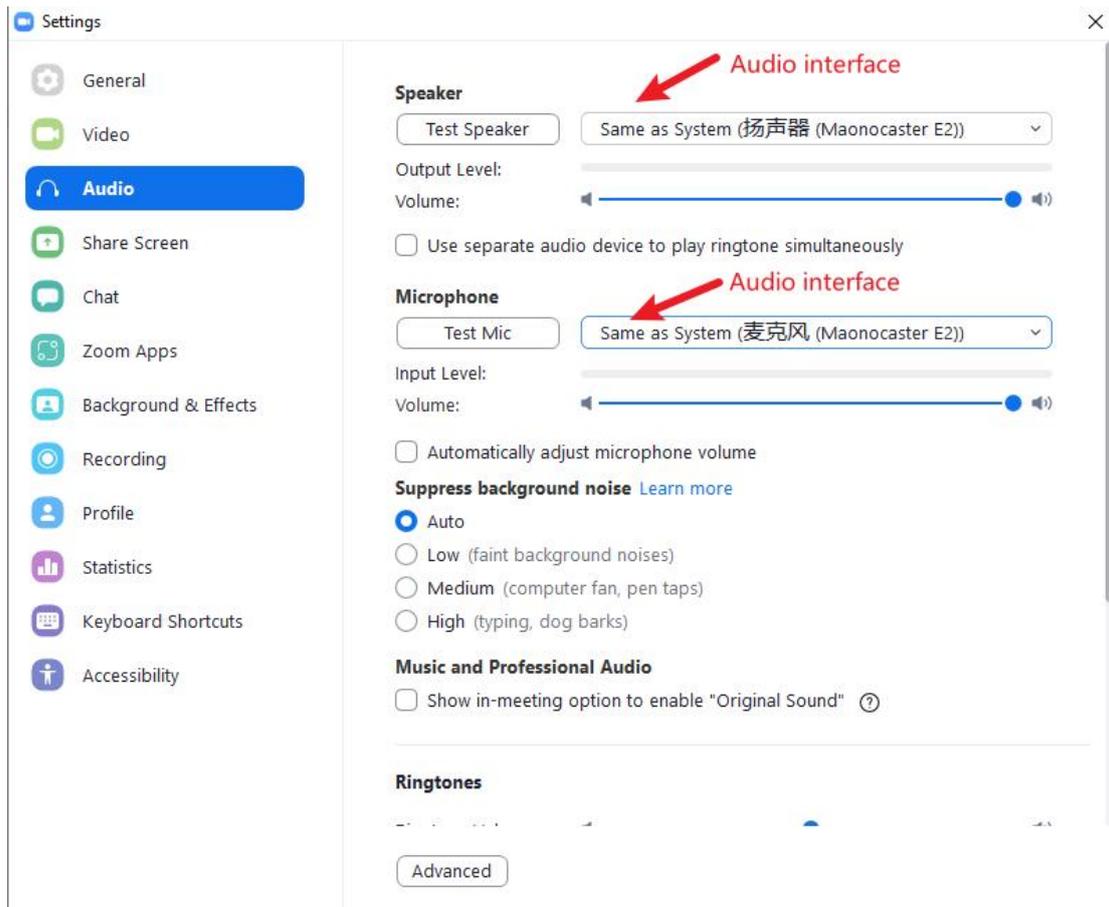


STEP 4: "Use separate audio device to play ringtone simultaneously" (uncheck it)

and "Automatically adjust microphone volume" (Uncheck it)

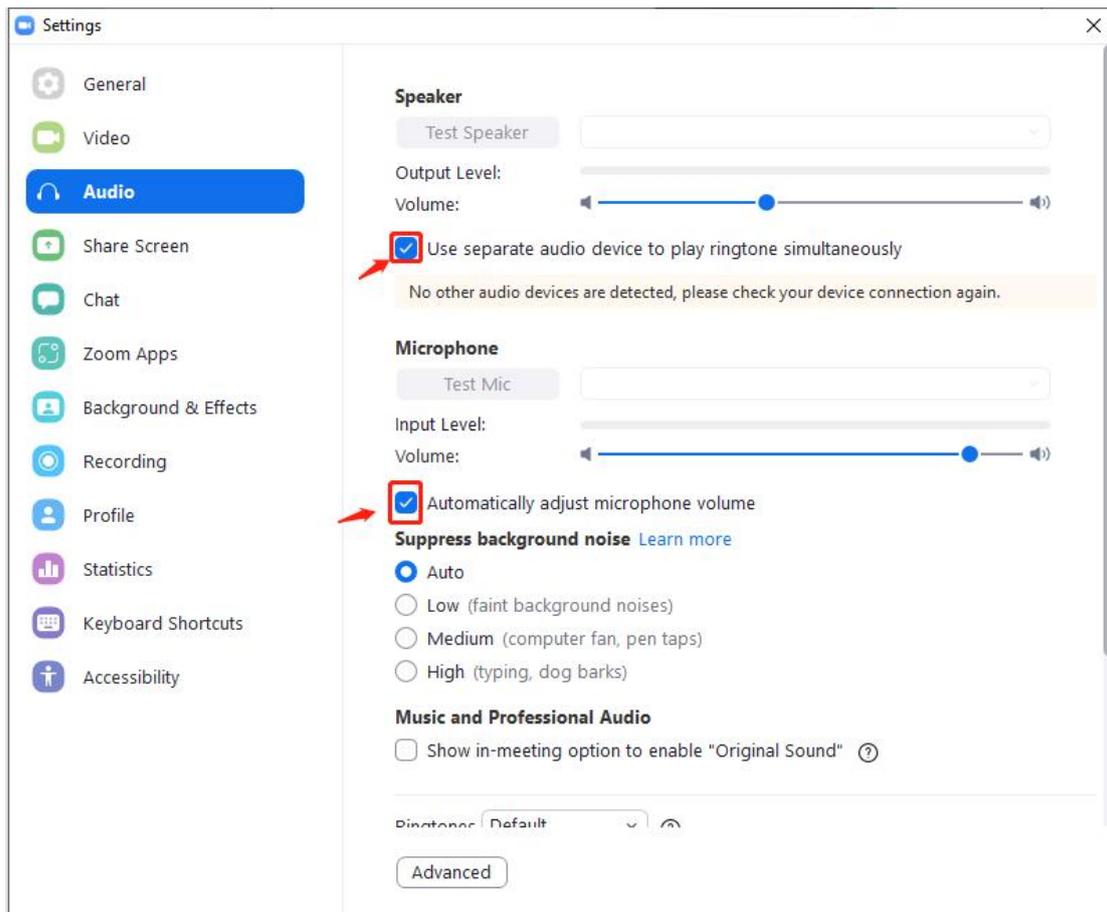


STEP 5: Volume adjusted to 100%.

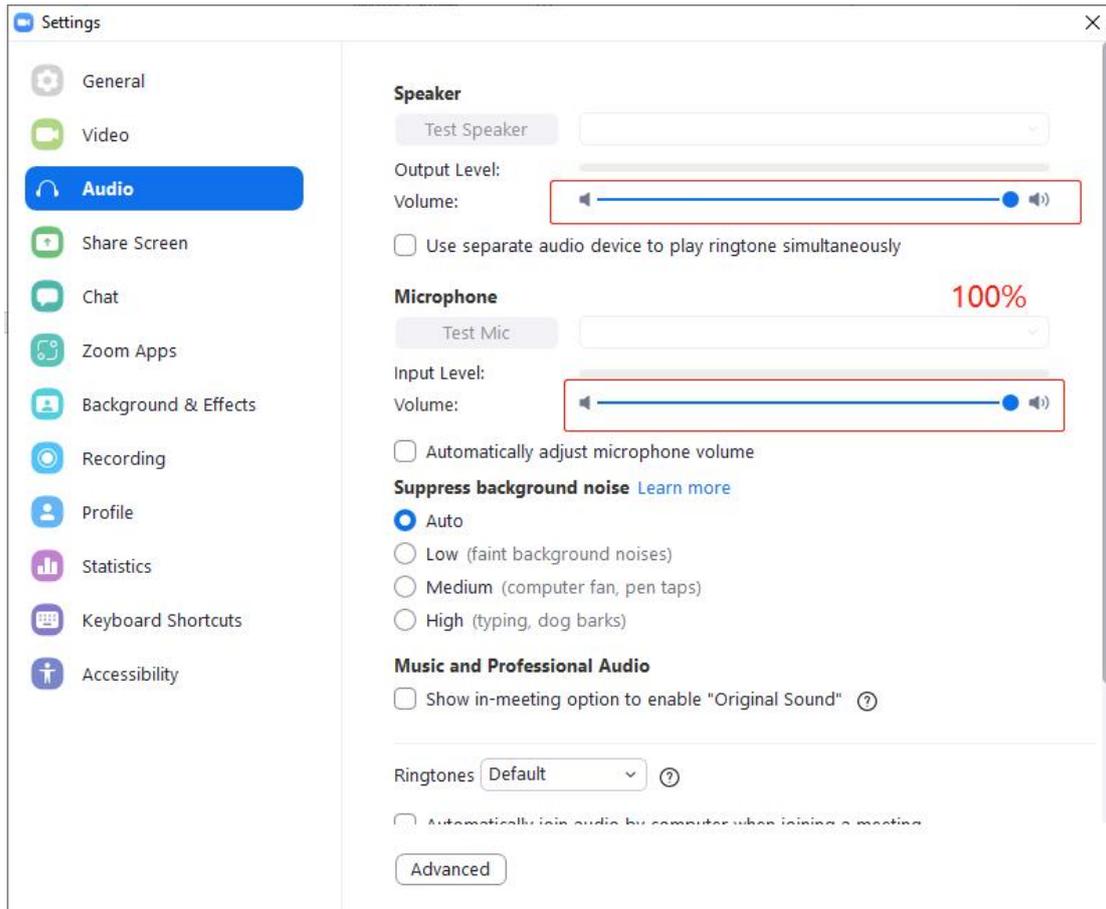

## AUDACITY:


Set up Audacity audio inputs and outputs.

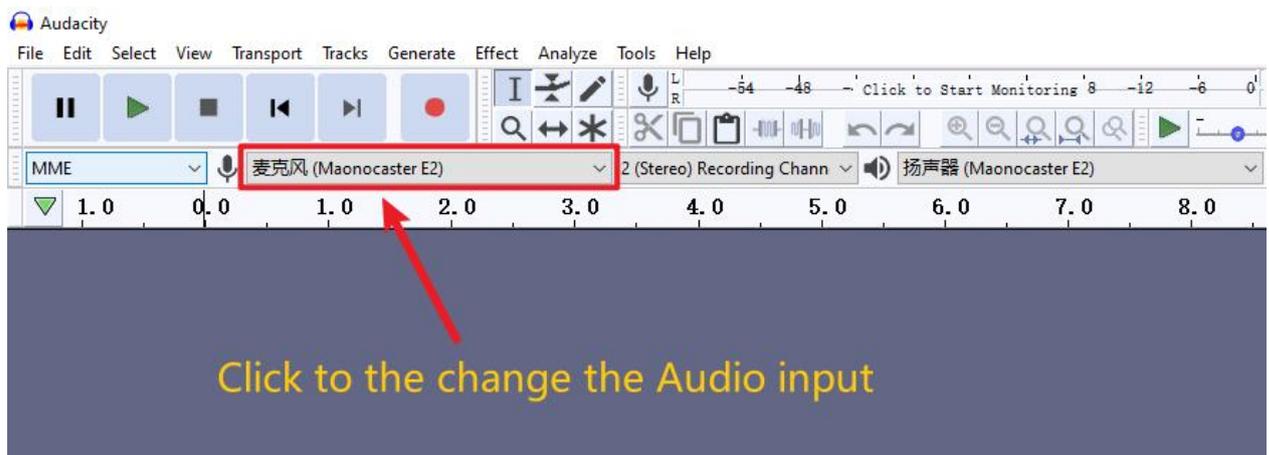

## TWITCH STUDIO:

STEP 1: Open Twitch and navigate through the top left menu to


File-->Settings

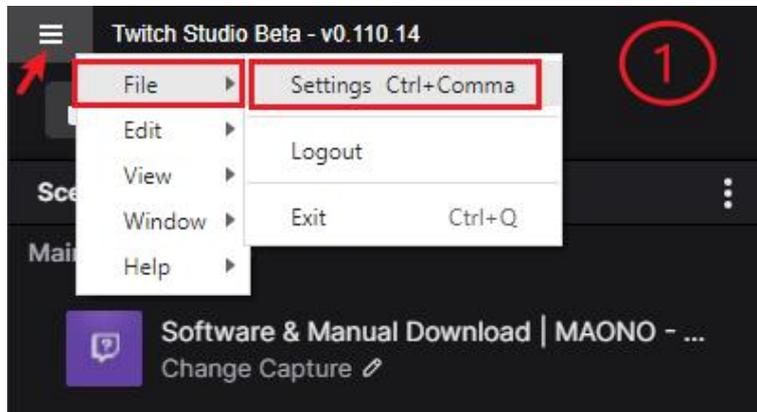

STEP 2: Select the Audio tab

Set Primary Microphone to Maonocaster E2

If you think the sound is not loud enough, you can use the microphone sound enhancement

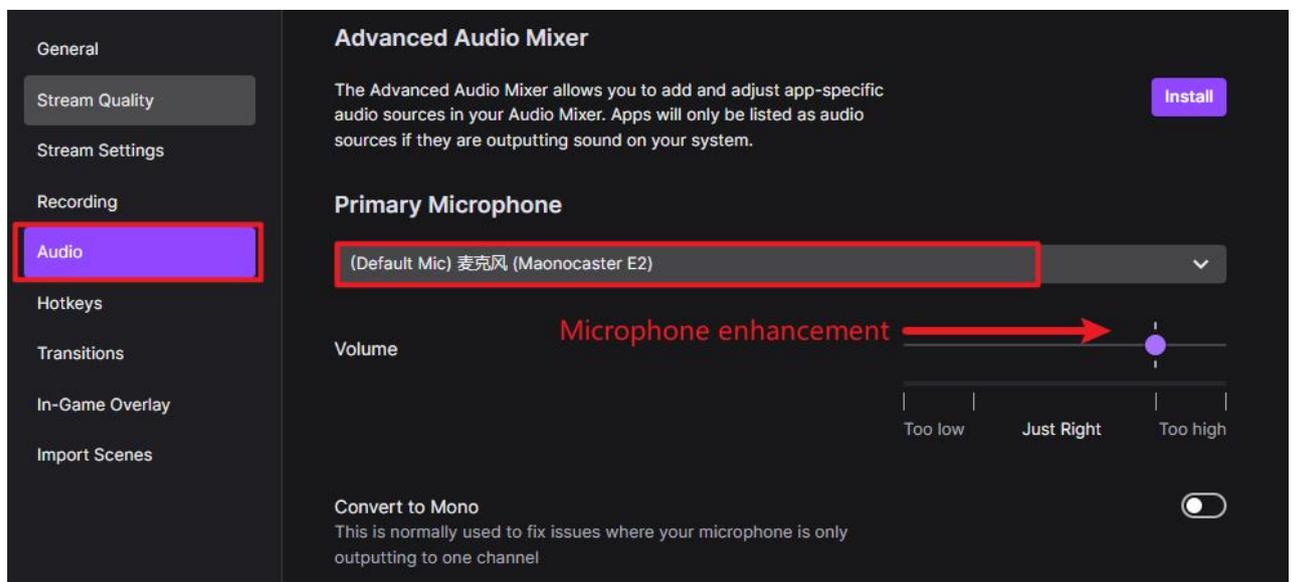

Notice:

1. Whether it is a computer or software, in the sound settings, set the Maonocaster E2 as the default device!
2. If you set the Maonocaster E2 as the default device in the software settings, it is still useless, you need to set it again!
3. Turn off the automatic gain switch in the software, Automatically adjust the microphone volume and more functions that affect the sound settings!



Contact: [support@maono.com](mailto:support@maono.com)