



FRIDGE SLIDE USER MANUAL

SH-FS75L-BLK / SH-FS95L-BLK

Prior to installation and operation, it is essential to carefully read the manual and keep it for future reference.

V1.1

WARNINGS AND SAFETY INSTRUCTIONS

- The slide **MUST** only be used when securely and evenly bolted down to a flat surface with no frame distortion.
- **DO NOT** exceed the specified maximum weight capacity for the slide.
- **NEVER** operate the slide or built-in table on a sloped surface.
- Please be aware that your fridge will sit approximately 5.5cm (for SH-FS75L-BLK) / 6.3cm (for SH-FS95L-BLK) above the mounting surface.
- **ALWAYS** use the four supplied tie-down straps to securely fasten the fridge to the slide.
- The tray/table is activated by depressing the release lever(s) to pull forward and lock. **NEVER** forcefully pull without disengaging the release lever(s) to prevent damage.
- Ensure that the tray/table firmly locks into place when returning them to their inward positions.
- Keep slide rails free from dirt, grit, and water to ensure proper functionality. Regularly inspect and clean as necessary.

PARTS LIST

- 1 PC(s) Fridge Slide
- 4 PC(s) Tie-Down Straps
- 6 PC(s) M6 x 20 Bolts
- 6 PC(s) M6 x10 T-Nuts
- 6 PC(s) M6 Washers
- 1 PC(s) User Manual

FRIDGE SLIDE INSTALLATION

- Position the fridge slide where it is intended to be installed, ensuring the release levers face the direction toward which the slide will be pulled out.
- Depress the two release levers to unlock the tray, then pull it out to expose the mounting holes on the base frame.



- Mark six holes along the base frame and proceed to drill the marked holes. It is recommended to secure the slide at equally spaced points across the base frame for optimal stability.
- Re-position the slide in place, and pull out the tray to expose the mounting holes.
- Secure the slide with the provided fasteners, starting from the rear and moving forward, using the pre-drilled holes.
- If the tray does not move smoothly, loosen the fasteners slightly. This may occur if the fasteners are causing uneven pulling on the base frame, resulting in the slide rails angling inwards. Adjust as needed for smooth operation.

Note: DO NOT attempt to install the slide with your fridge mounted; only mount the fridge after the slide is securely positioned and bolted down.

FRIDGE MOUNTING

- Position the fridge on the fridge tray.
- Secure the fridge in place by using the provided four tie-down straps. Thread these straps through the handles of the fridge and the slots located on the fridge tray.




FRIDGE SLIDE OPERATION

- Depress the two release levers to unlock the fridge tray.



- Pull the tray out completely until it clicks into position.

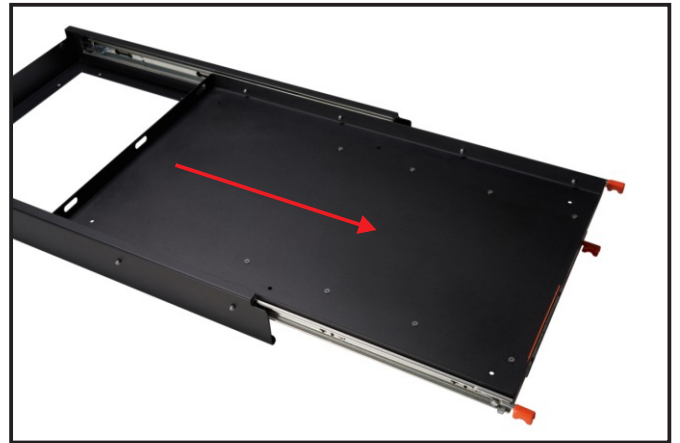


- To return to its closed position, depress the release levers again to unlock the tray, then push it back until it clicks securely into position.

Note: Moving the tray back and forth may cause the inner rails to become locked, preventing it from being pushed back in. You can release it by depressing the release levers.

SLIDE-OUT TABLE OPERATION

- Depress the release lever to unlock the table.
- Pull the table out completely until it clicks into position.

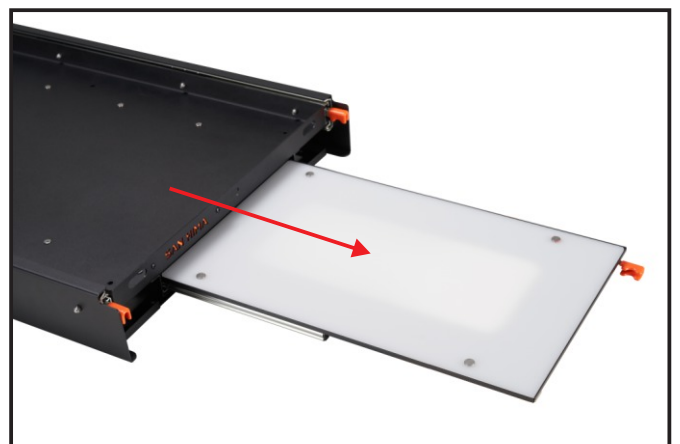

- To retract, depress the release lever again to unlock the table, then push it back until it clicks securely into position.

SPECIFICATIONS

	SH-FS75L-BLK	SH-FS95L-BLK
Product Weight:	23.2kg	32kg
Product Dimensions:	86 x 53.5 x 9.5 cm	95 x 58.5 x 11.5 cm
Slide Extended Length:	166.3 cm	183.7 cm
Tray Dimensions:	82.5 x 49.4 x 3.6 cm	90 x 53.5 x 4.5 cm
Table Dimensions:	50 x 31 x 0.8 cm (0.6cm Thick Cutting Board)	50.5 x 41 x 0.8 cm (0.6cm Thick Cutting Board)
Mounting Surface to Tray Base:	5.5 cm	6.3 cm
Weight Capacity:	90 kg	120 kg
Slide Material:	Powder Coated Steel	
Rail Material:	Galvanized Steel	
Cutting Board Material:	Food-Grade PP	
Strap Material:	Polyester	

WARRANTY

San Hima ("Manufacturer") warrants to the original purchaser ("User") that its fridge slide, if purchased from manufacturer or an authorized distributor or dealer, will be free of defects in material and workmanship under normal usage from the date sold and for the duration (the "Warranty Period") for 1 YEAR.

This warranty shall ONLY be effective for the original purchaser and apply ONLY to the San Hima fridge slide that is correctly used for which it is intended.

San Hima will either replace the product or provide you with a refund at our discretion provided that the fault is found to have been caused by a design or manufacturing defect that results in its failure to perform correctly as described. The limited warranty is the only one that applies to this product, and it sets forth all the responsibilities of San Hima.

EXCLUSIONS:

This warranty does not cover problems resulting from:

- accident, abuse, neglect, shock, extreme temperature, improper operation or maintenance;
- any misuse contrary to the instructions and warnings in the user manual;
- improper selection of our fridge slide in terms of size and weight capacity for the intended application;
- normal wear and tear, cosmetic damage;
- damage caused by liquid contact, fire, or natural disasters;
- use of the product for commercial or industrial purposes;
- damage caused by attempted repairs or modifications by unauthorized personnel;
- damage due to the user's fault or lack of knowledge.

CLAIMS:

If a San Hima product is suspected of being defective, you'll need to provide proof of purchase (e. g. a screenshot of the order) and a picture and a video of the damaged goods in their entirety to sales@sanhima.com. If the product is found to be defective and covered by this limited warranty, the remedy is replacement or refund, at San Hima's option. No charges will be accepted for external labour or materials.