

EP2 use precautions

1、 Screen

- a. The power must be turned off before connecting and unplugging the control cables
- b. When hanging the screen, be sure to hang the hook to avoid the hook off the screen.

2、 Remote control operation

- a. There is a switch on the right side of the remote control. When using it, pull it to "N". When not in use, pull it to "F".
Please don't keep it on, avoiding misuse!
- b. Always pay attention to the operation of the remote control during lifting, and let the lifting rod stop when encountering abnormal conditions!
- c. When using the "1 control multi", the remote control recommends pressing 2-3 times each time.
Avoid individual products that are not receiving information in time without being controlled!
- d. After each rise and fall, you should press the "□" stop button on the remote control again!
- e. If you find that the remote control cannot control the rise or fall, immediately turn off the main power supply, then power on and try to check the cause!
- f. When the remote control is found to be less sensitive or often uncontrolled, the remote control battery may be insufficient or the remote control may be damaged, pls replace in time!

3、 Electric lifting

- a. The "POWER" button on the control box is to control lifting rod. It can only turn off lifting rod, cannot turn off the screen. It only opens when the lifting rod is required to be lifted and lowered.
Please turn it off when not in use to avoid accidents caused by accidentally pressing the remote control!
- b. The lifting should be completed several times in sections. During the lifting process, pay attention to the lifting rod, back pull wire rope, screen body, Cables, etc. will not got stuck, always pay attention to stop lifting!
- c. After fully lowering, the back pull wire rope should be taken off to avoid accidents