 




## INSTRUCTIONS



Hussar Series JJ-G265

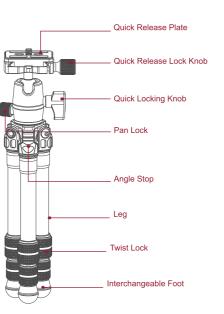


# Tripod Angle Adjustment

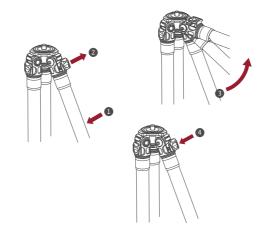

- 1.Push the foot tube inward slightly
- 2.Pull out the gear adjustment sheet
- 3. The tripod has three angle adjustments
- 4. Adjust to the appropriate angle and press the sheet

### Basic Tripod Use

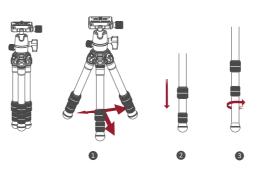

- 1.Swing out all three legs.
- 2.Grab all twist locks with one hand and rotate one quarter turn. Pull leg until fully extended.
- 3. Tighten teist locks. Repeat on all legs.
- 4.TO collapse, loosen twist locks and collapse leg. Grad all twist locks with one hand and tighten.

### Allen Key

# Spiked And Rubber Feet




To satisfied with customer's demands for the tightness of the tripod leg. GVM tripod special Supply the allen Key to the customer. can be adjust the tightness of the tripod leg use the allen key



Tripods can be configured with either screw-in rubber feet or stainless steel spiked feet available separately to meet the needs of your shooting locations and conditions.

#### 1/4 external screw hole

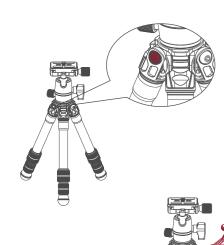


This series of tripods is equipped with 1/4 external screw holes, which can be equipped with magic bracket arms external photographic equipment. It is recommended to use GVM magicbracket arms.

#### Functions of locking system and locking knobs



Ball Locking Knob

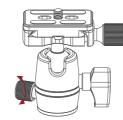

Pan Lock

### User Notice

Thank you for choosing GVM. Please read this general instruction sheet before using, to avoid any accidental damage.



Do not exceed the load capacity of this products, (see the specifications).



Always ensure the locks and devices are in safety condition to avoid accidental damage of the camera and other equipement.



Do not use the product at tempreture less than -20°C or more than + 70°C. It is not recommended to use in



Avoid leaving the product in high tempreture, e.g. in the sun for long time or in a car near the car window for hours.



Ensure keeping the product out of reach of children when working at the public place in case any accidental hurt. Use it carefully in dangerous place.



Do not scrub the spirit-level , the precision could be lost temporarily.



Remove the equipment from the products during



It is not necessary to do regular lubrication, but if required, the standard lubricant oils and grease is ok for the



After using in the wet, dusty, sandy, windy days, it is recommentded to clean and dry the tripod with soft cloth. The dirt, dust, and sand in all leg locks, threads, should be removed after use. Clean with mild detergent or alcohol.



For your own safty, don't let this products near any electrical power source and chemical substances.



Website: www.gvmled.com TEL: +1 (650) 5348186 Email: bh@gvmled.com 4301 N delaware ave unit D.Philadelphia. PA. 19137