



 










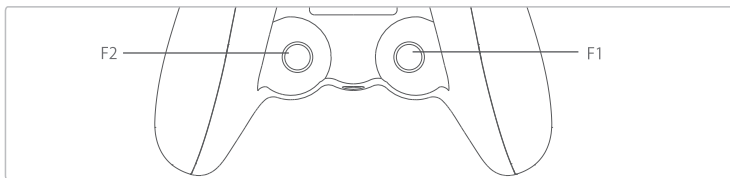 





# Back Buttons Programming

Fn=F1/F2, (F1=L2、F2=R2) by default



Setting Modes	Description	E. g
Programming setting	F1& F2 are the two programming buttons. 1. Press and hold SHARE + Fn key (any key of F1-F2) until the light bar flashes to enter into programming mode.2. Press the F1/F2 and any button that you want to assign to, the light bar stays on, you've successfully complete the programming setting.	1. In programming mode, press the  key, then press the F1 key, the light is on, you can use the F1 to replace the  key. 2. In the programming mode, if no operation over 10 seconds, the programming mode will be turned off.
Clear programming	When the bluetooth is turned on, press and hold the SHARE+ Fn until the lightbar flashes to turn off the programming setting, Fn keys are back to default setting (F1=L2、F2=R2)	
Cancel programming	When the controller is connecting to the system, press and hold the Option+Turbo until the lighter flashes and stays on. It stops the programming setting, no any programming keys working. Press Option+ Turbo key combination once more, it reactivate programming setting to be default mode.	
Programming memory	The programming settings will remain when you turn off your controller.	
Programmable button	The following buttons can be programmed:  ,  ,  ,  ,  (Up),  (Down),  (Left),  (Right), L3, R3, L1, R1, L2, R2	

# Vibration Setting

---

If your controller is not vibrating as expected, the controller's vibration function may be turned off. To turn it back on:

Go to Settings > Devices > Controllers > Enable Vibration.

# Audio Setting

---

If you have headphones plugged into the 3.5mm headphone jack on the controller and you hear no audio, or the audio from the headphones is very faint, make sure the headphone plug is pushed all the way in. Unplug and then firmly reinsert the headphones.

To route all audio output to headphones:

1. Go to Settings > Devices > Audio Devices.
2. Select Output to Headphones > All Audio.

Highlight the Volume Control (Headphones) option and press Right on the 'D-pad' to make sure the controller's volume is turned up.

 
If output to Headphones is greyed out, that means the headphones are not detected by the controller.

# How to Reset

---

If your controller won't pair, won't respond, or is displaying a flashing light, please follow the instructions on how to reset the controller.

1. Turn off and unplug your Console.
2. Locate the small reset button on the back of the controller near the shoulder button.
3. Use a small, unfolded paper-clip or small tools to push the button (the button is inside a tiny hole).  
Hold the button down for a few seconds and release.
4. This will prompt the controller to resync.

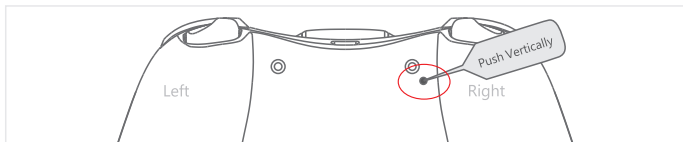

# Package Includes

---



Controller x1



Micro USB Cable x1



User Instruction x1



Warranty Card x1

Warranty: 12 months warranty for a risk-free purchase plus Lifetime Technical Support.

# Upgrade

---

We promise to provide sustainable upgrade service for our products.

If your purchased product can not pair the newest version of the consoles, Please visit our 'Help Center' or contact us directly, we'll walk you through how to upgrade it.

Get help: [www.teriosgaming.com/pages/support](http://www.teriosgaming.com/pages/support)

# Precautions

---

## **NOTICE: Please Read the Precautions Carefully**

- ⊘ DO NOT use this product near fire sources;
- ⊘ DO NOT place the product in a humid or dusty environment;
- ⊘ DO NOT expose to direct sunlight or high temperature;
- ⊘ DO NOT use chemicals such as gasoline or thinner;
- ⊘ DO NOT hit the product or make it fall due to strong impact;
- ⊘ DO NOT bend or pull the cable parts strongly;
- ⊘ DO NOT disassemble, repair or modify.

\* The image on the packaging may differ from the actual product.




\* The manufacturer reserves the right to change the product design or specifications without notice.

\* PS4 is registered trademark of Sony Interactive Entertainment LLC. All rights reserved. All other trademarks are property of their respective owners. This product is sold by a 3rd party and not distributed under official license form or approved, sponsored or endorsed by Sony Interactive Entertainment LLC. This product is not manufactured for Sony Interactive Entertainment LLC.



REVOLUTIONIZE YOUR GAMING EXPERIENCE

Having problem? SCAN for Help!

-  Visit us: [www.teriosgaming.com](http://www.teriosgaming.com)
-  Like us on Facebook: [@teriosofficial](https://www.facebook.com/teriosofficial)
-  [support@teriosgaming.com](mailto:support@teriosgaming.com)



[www.teriosgaming.com](http://www.teriosgaming.com)