IK206 GPS Tracker

User Manual V1.0



Preface

Congratulations on choosing the icar GPS IK206 asset GPS tracker. This manual shows how to easily program and setup the tracker for best results. Make sure to read this manual carefully before using this product, so as to avoid delays or confusion with it's operation. Please note that specifications and instructions are subject to change without notice to facilitate product improvement. Updates and changes will be integrated into the latest release. The manufacturer assumes no responsibility for any errors or omissions in outdated documents.

1. Overview

IK206 is an Asset GPS tracker.

2. Features

- Real-timing tracking
- GPS+AGPS+LBS+GLONASS Positioning
- History record check
- Geo-Fence alarm
- Low battery alarm
- Shock Alarm
- Power saving mode
- PC & Mobile App tracking
- Long standby time
- IP67 Water resistant

3. Applications

- Bag tracking
- Luggage tracking
- Cow tracking
- Goat tracking

4. Specifications

ltem	Specifications		
Dimension	48*27*21 mm		
Weight	41g		
Charging mode	USB charging DC 5V		
Backup battery	3.7 V 1000mAh		
Power consumption	40mA standby current		
Working temperature	-20°C to 65°C		
Item	Specifications		
Cellular Bands	GSM: 850/900/1800/1900Mhz		
Positioning	GPS, AGPS, LBS		
Tracking Sensitivity	-162 dBm		

1

IK206 User Manual V1.0

Sensor	Accelerometer
LED	RED/GREEN/BLUE
SIM Card interface	Micro SIM
Waterproof	IP67

5. IK206 interface



6. In the box

- 1* IK206 GPS Tracker
- 1* charging cable
- 1* Quick Start Guide

7. Installation

7.1 SIM Card installation

- Get ready a Micro Sim Card that support GSM&GPRS with 30MB data per month
- Open the housing by screw driver
- Insert Sim card to sim card slot correctly
- Press power button for 3 seconds to power ON (green led will blinking).
- After that the device will be ready.

7.2 **LED Indications**

	Fix	Flash	Off
Green Light	GSM/GPRS conversation start	No GPRS signal	Power off or in sleep mode
Blue Light	GPS location successful	No GPRS signal	Power off or in sleep mode
Red Light		charging	Full battery or charged full

8. SMS Commands List

Function	Command Format	Reply	for example
APN	apn+123456+space+content	apn ok	apn123456 cmnet
	apnuser+123456+space+content	apnuser ok	
	apnpasswd+123456+space+content	apnpasswd ok	
admin number	admin123456+space+admin phone nu	admin ok	admin123456 186******
Domain	IP+space+domain+space+port	Set IP ok	IP <u>www.icargps.net</u> 7700
upload frequency	FREQ,123456,30	ОК	FREQ,123456,30
Voice monitor	88	Monitor OK	88
Position	G123456	Google map	
Restart GPS	CQGPS	GPS reset OK!	CQGPS
Restart Devic	CQ	system reset OK!	CQ
Check	CXZT	details of device	CXZT
Back to facto	Format	ОК	

9. App & PC Tracking platform

9.1 App install & Login

 Search "ICAR GPS" in Google Play or iOS store(or scan the following QR code) to download the Mobile APP;





ICAR GPS APP

ICAR GPS APP

- Choose the" Login by Device No.,
- Input your device's ID number and password(default is 123456) to login.





- Choose the" Login by User name.,
- Input your user name and password(default is 123456) to login.

9.2 PC login

- Web: www.icargps.net, Choose "ID No."
- Input your device's ID number and password(default is 123456) to log in



- Web: www.icargps.net, Choose "Account"
- Input user name and password(default is 123456) to log in



10. FAQ

- Q: Start up Fail?
- A: Check the device power on or not.

IK206 User Manual V1.0

- Q: The device can not obtain location information?
- A: Place the unit at the open area to test.
- Q: How to choose SIM card?
- A: the SIM card must support GSM&GPRS, and ensure t hat the card has enough currency and credit.
- Q: How to use in the foreign countries?
- A: please set the APN before use, please edit the text "A PN123456 CMNET " and send it to the SIM card of the d evice, CMNET is Chinese operator's APN, Replace the corr esponding APN when use in other countries, APN details, please consult your local SIM card carrier.