




**CROSS BARS ROOF RACK FOR  
VEHICLE WITH RAISED SIDE RAILS  
INSTRUCTION MANUAL**

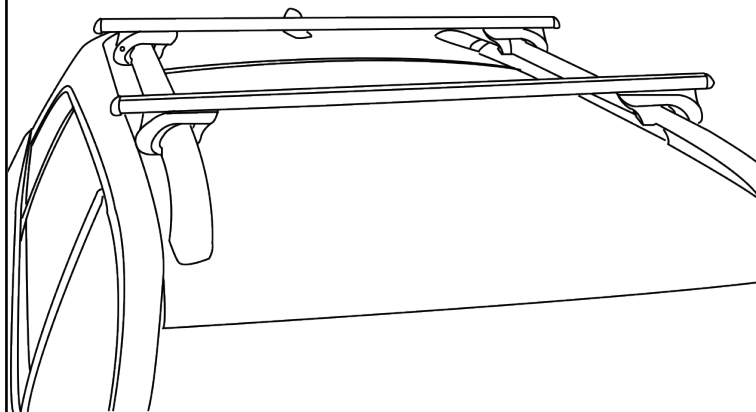

**CROSS BARS ROOF RACK FOR  
VEHICLE WITH RAISED SIDE RAILS  
INSTRUCTION MANUAL**

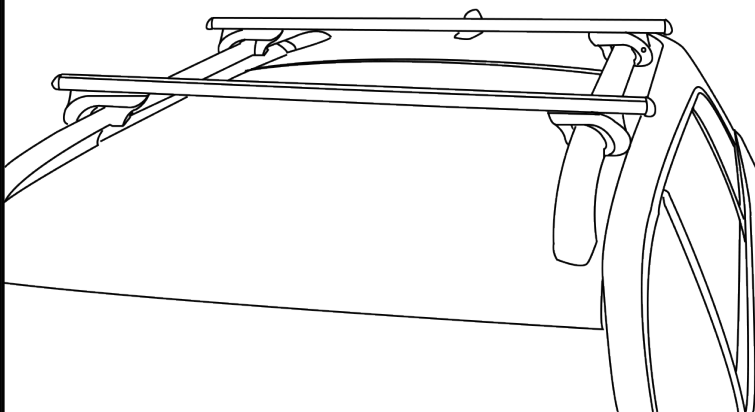

## PACKAGE INCLUDE:

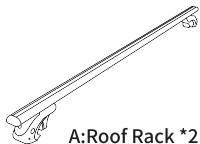

A: Roof Rack \*2



B: Allen Head Wrench



C: Key \*2






D: End Cap \*4

## Installation Manual:

1. Open the package and check if the parts are missing. (If the parts are missing, please contact us in time)

2. Install the end caps on both ends of the crossbar. Please note that these are intentionally tight-fitting so they will not be lost at highway speeds. Simply position the end cap correctly and pound it into position.




3. Turn the L key counterclockwise to move the inner bracket outward. If it is locked, use the key to unlock it.

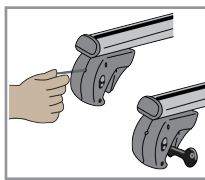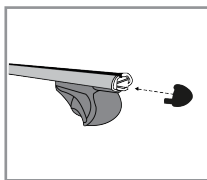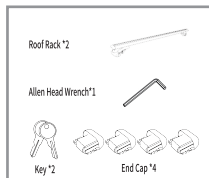


4. Before mounting the crossbar to the rail, adjust the bracket to the proper position according to the position of the rail.

5. Mount the bracket to the rails, making sure that the rails are fully seated between the inner and outer brackets.


6. Place the crossbar in the center of the roof. The minimum distance required is 28 inches (about 70 cm).

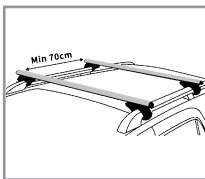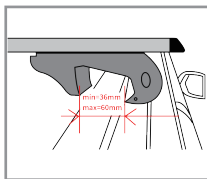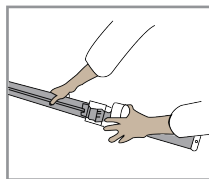


7. Finally, the rail is completely fixed in the inner and outer brackets. Please note that the rails should be mounted in the outline of the outer bracket and the other side of the rail should be firmly seated on the inner bracket.

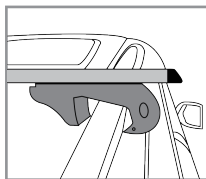


10. After fixing the inner and outer brackets on both sides of the rail, please check the safety by testing if the crossbar is movable. Re-tighten with an Allen key.

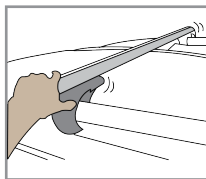


8. On the other side, by rotating the L key clockwise, the inner bracket moves closer to the outer bracket.

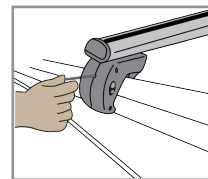


11. This shows the correct installation of the crossbar. Make sure they are at the center of the roof, at least 28 inches (about 70 cm) apart and securely fastened to the rails.

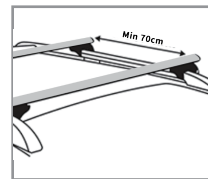

9. Finally, the rail is completely fixed in the inner and outer brackets. Please note that the rails should be mounted in the outline of the outer bracket (indicated by bold line) and the other side of the rail should be firmly seated on the inner bracket.

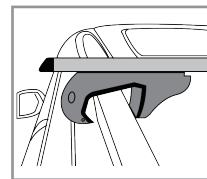

12. To prevent theft, use the key to turn the lock knob to the off position. Please check it carefully by rotating the lock.

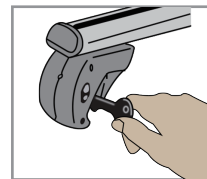

### CAUTION:

- ☆ This roof rack kit was designed for vehicles with isolated style roof rail, not for unibody style.
- ☆ The maximum load is 150LBS (68KG). Safety speed when loaded is 50 mph (80 kph).
- ☆ Check the stability before uses.
- ☆ There is an ID number printing on the lock cylinder. If you lost the key, please contact us with the key ID to get the spare key.
- ☆ Please obey the local and nation laws when using roof rack.