 

 








Indication Guide



When it is removed from Find My app and not paired for 3 minutes, it automatically switches to Power Off.

Function Button & Buzzing Sound Indication

Status	Function Button	Sound
Power On	Press Once 	Chord tones Melody 
Ready to Connect	Press two (2) times rapidly 	One (1) sound Beep 
"Play Sound" to locate	-	Thirteen (13) sounds Beep...Beep...Beep...Beep... Beep...Beep...Beep...Beep... Beep...Beep...Beep...Beep... Beep... 
Remove	-	Chord tones Melody 
Reset	Short press four (4) times rapidly, then hold it a fifth time until you hear a chord tone chime. 	Chord tones Melody 
Power Off	Press and hold for at least 3 seconds 	Two (2) sounds Beep...Beep... 