



# **Owner's Manual**

Coredy R300

# Table of Contents

<b>1</b>	<b>Important Safety Information</b>	<b>01</b>
1.1	Use Restrictions .....	01
1.2	Battery and Charging .....	02
<b>2</b>	<b>Product Diagram</b>	<b>04</b>
2.1	Robot .....	04
2.2	Accessories .....	06
2.3	Charging Dock .....	07
2.4	Remote Control .....	08
2.5	Dust Bin .....	09
<b>3</b>	<b>Operating and Programming</b>	<b>10</b>
3.1	Notes Before Cleaning .....	10
3.2	Quick Start .....	11
3.3	How Coredy R300 Cleans Your Home .....	13
3.4	Floor Mopping Cleaning .....	14
3.5	Cleaning Schedule .....	16
<b>4</b>	<b>Regular Robot Care</b>	<b>18</b>
4.1	Emptying Robot's Bin .....	19
4.2	Cleaning Robot's Filter .....	19
4.3	Cleaning Robot's Water Tank and Mop Cloth (Sold Separately) .....	20
4.4	Cleaning Robot's Side Brush .....	21
4.5	Cleaning Robot's Cliff Sensors and Charging Contacts .....	21
4.6	Cleaning Robot's Floor Tracking Sensor .....	22
4.7	Battery and Charging Information .....	23
<b>5</b>	<b>Troubleshooting</b>	<b>25</b>
<b>6</b>	<b>Specifications</b>	<b>28</b>
<b>7</b>	<b>Customer Service</b>	<b>29</b>

# 1 Important Safety Information

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The robot must be used in accordance with the directions in this Instruction Manual. CoreDy inc cannot be held liable or responsible for any damages or injuries caused by improper use.

To reduce the risk of injury or damage, keep these safety precautions in mind when setting up, using and maintaining your robot:

- Read all safety and operating instructions before operating your robot.
- Retain the safety and operating instructions for future reference.
- Heed all warnings on your robot, battery, charging Dock and in the owner's manual.
- Follow all operating and use instructions.



The symbol on the product or its packaging indicates:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local or regional waste authority for more information on collection, reuse and recycling programs.

## 1.1 Use Restrictions

- Your robot is for indoor use only. Do not use the robot outdoor, commercial or industrial environments.
- Before using this device, pick up objects like clothing, loose papers, pull cords for blinds or curtains, power cords, and any fragile objects. If the device passes over a power cord and drags it, there is a chance an object could be pulled or a table or shelf.

- Your robot is not a toy. Do not sit or stand on this device. Small children and pets should be supervised when your robot is operating.
- Store and operate your robot in room temperature environments only.
- Do not use this device to pick up anything that is burning or smoking.
- Do not use this device to pick up spills of bleach, paint, or other chemicals, or anything wet.
- If the room to be cleaned contains a balcony, a physical barrier should be used to prevent access to the balcony and ensure safe operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the robot. Cleaning and maintenance shall not be performed by children without supervision.
- Do not place anything on top of your robot.
- Be aware that the robot moves on its own. Take care when walking in the area that the robot is operating in to avoid stepping on it.
- Do not operate the robot in areas with exposed electrical outlets in the floor.

 
## **1.2 Battery and Charging**

 
 
- Use only rechargeable battery packs with the correct specification approved by Coredy.
- Charge using a standard outlet only. Product may not be used with any type of power converter. Use of other power converters will immediately void the warranty.
- Do not use a Charging Dock with a damaged cord or plug. If the cord or plug is damaged, it must be serviced by the manufacturer or similarly qualified persons.
- Always charge and remove the battery from your robot and accessories before long-term storage or transportation.
- Charge indoors only.

- Your robot's Charging Dock may be protected with a surge protector in the event of severe electrical storms.
- Never handle the Charging Dock with wet hands.
- Always disconnect your robot from the Charging Dock before cleaning or maintaining it.
- Please ensure voltage rating for enclosed Charging Dock matches standard outlet voltage.
- Used battery packs should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- Before every use, check the battery pack for any sign of damage or leakage. Do not charge damaged or leaking battery packs.
- If the battery pack is leaking, contact Coredy Customer Service for disposal.
- The battery pack must be removed from the robot before disposal.
- Do not crush or dismantle battery packs. Do not heat or place the battery pack near any heat source.
- Do not incinerate the battery pack. Do not short-circuit the battery pack.
- Do not immerse the battery pack in any liquid.


## 2 Product Diagram

### 2.1 Robot

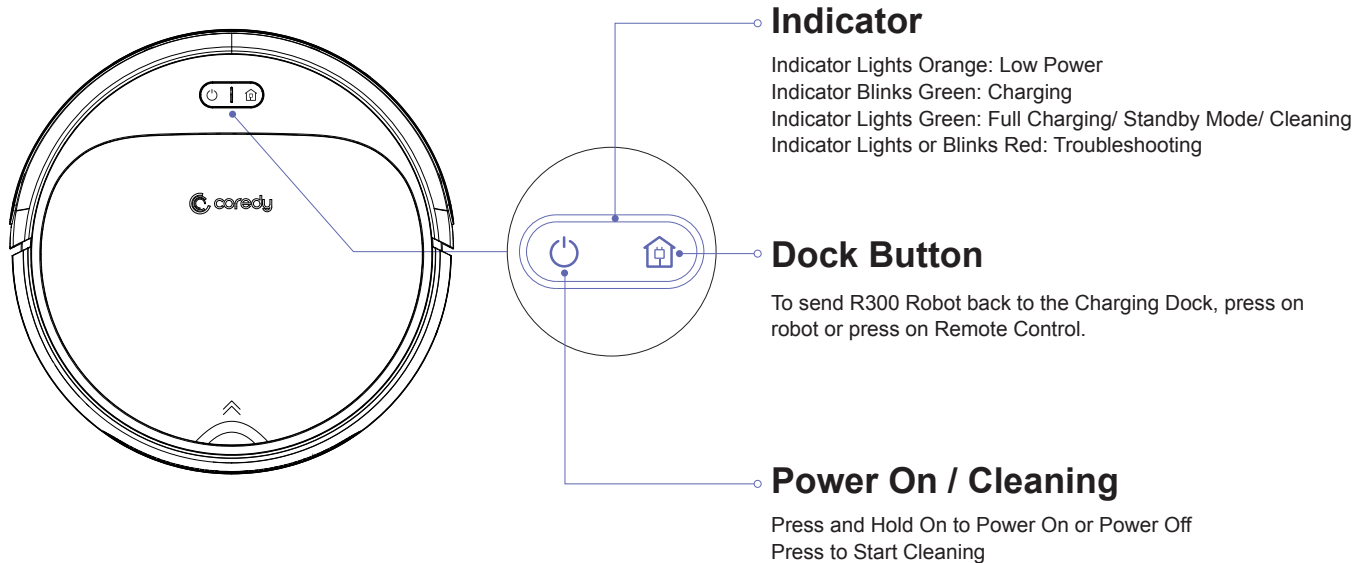


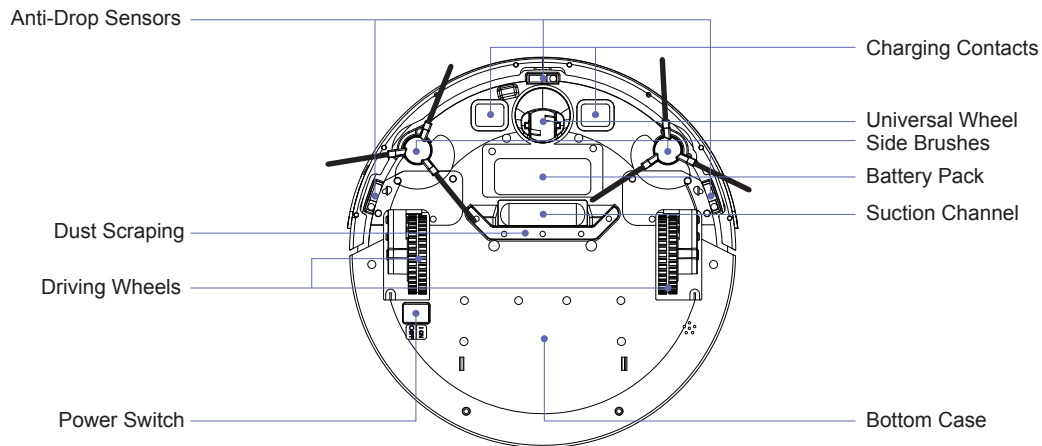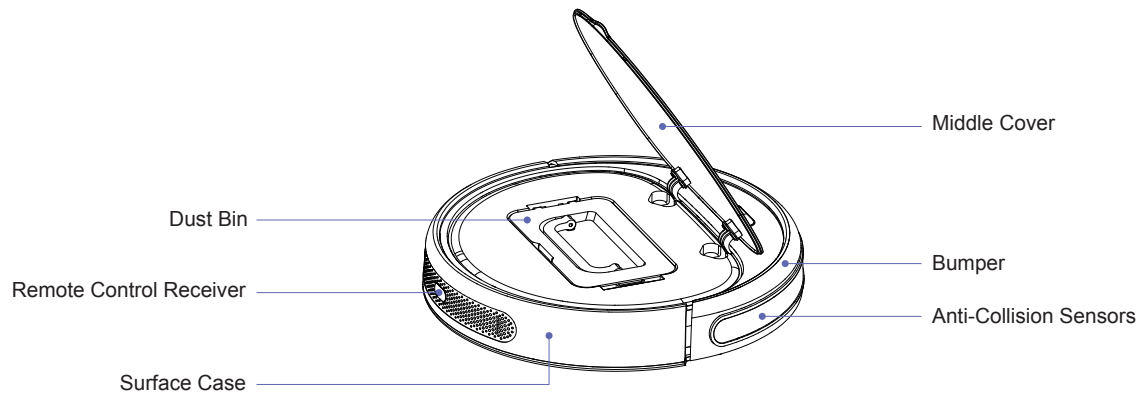

## 2.2 Accessories

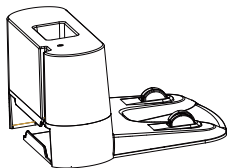 


1 x Charging Dock

 


1 x Adapter



 
1 x Remote Control  
(with 2 x AAA batteries)

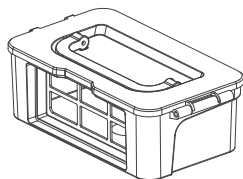


1 x Dust Bin

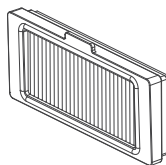 


1 x High Efficiency Filter

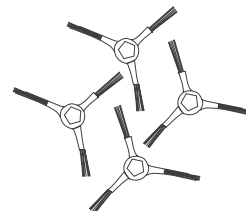 


4 x Side Brushes

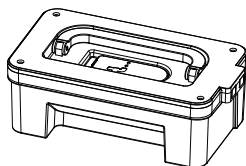 

1 x Water tank (sold separately)

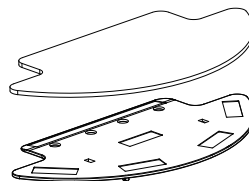 

 
1 x Mop Cloth and Holder (sold separately)




1 x Cleaning Brush




## 2.3 Charging Dock

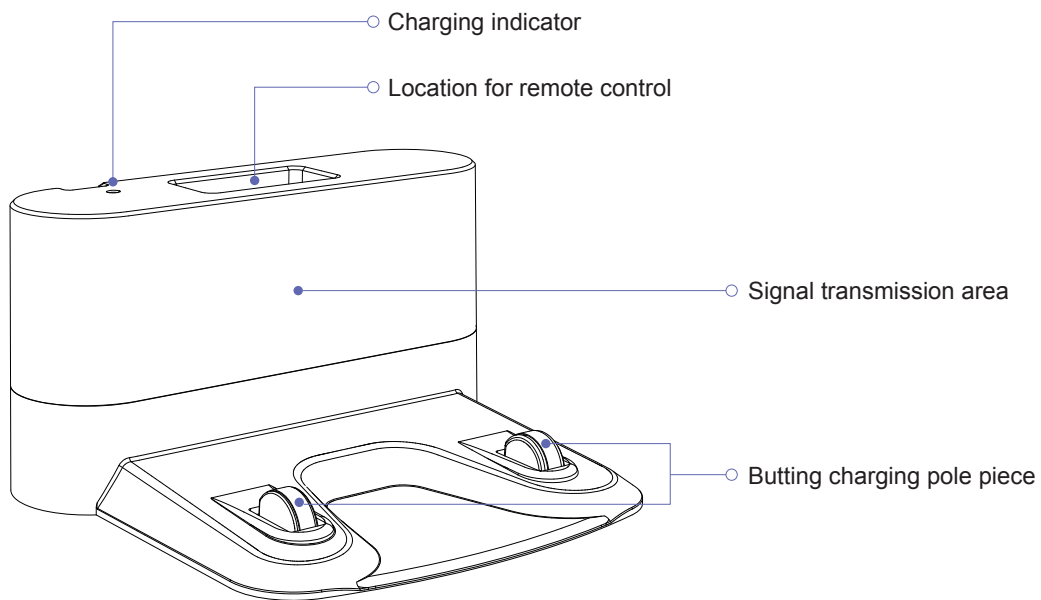 

## 2.4 Remote Control


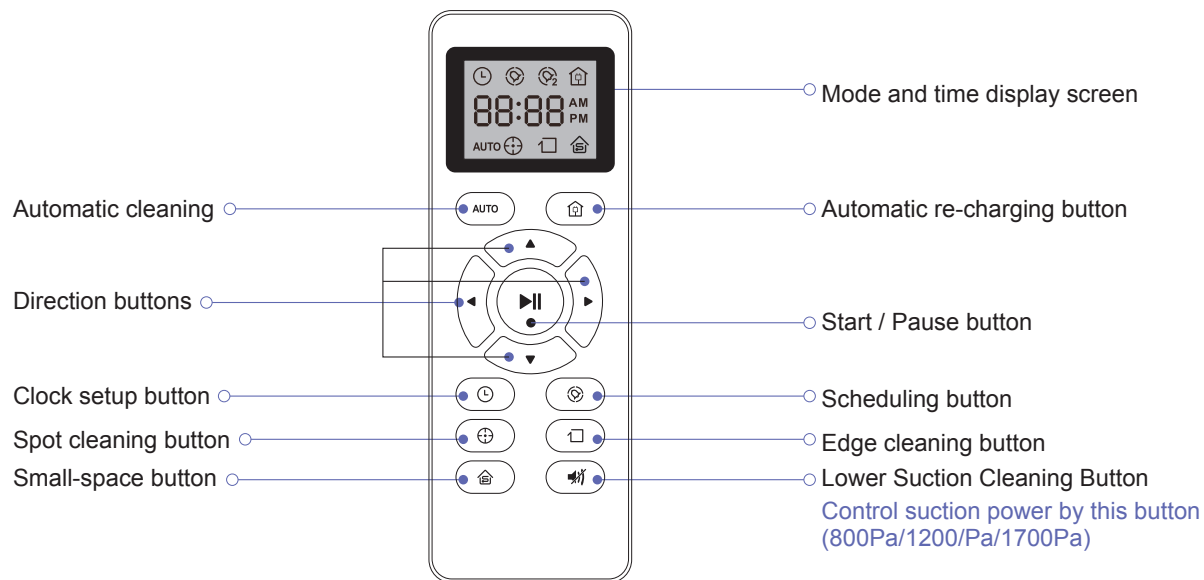 


## 2.5 Dust Bin


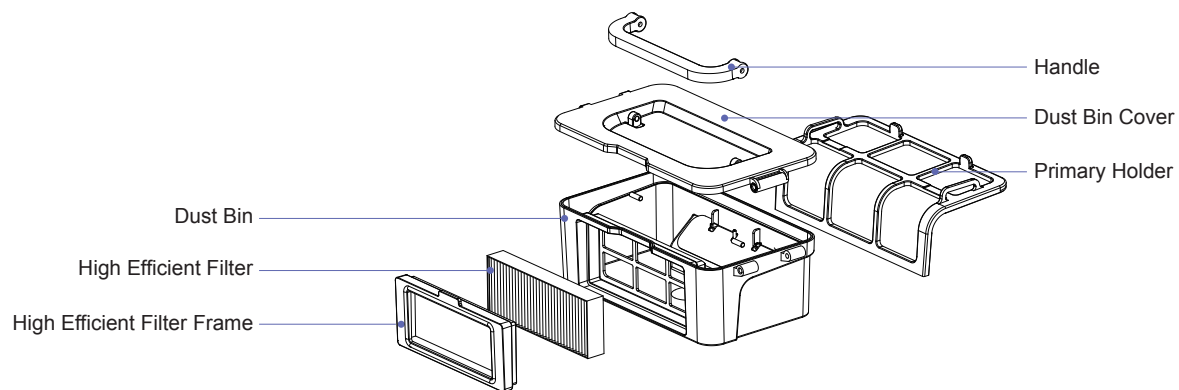 


## 3 Operating and Programming
  
### 3.1 Notes Before Cleaning

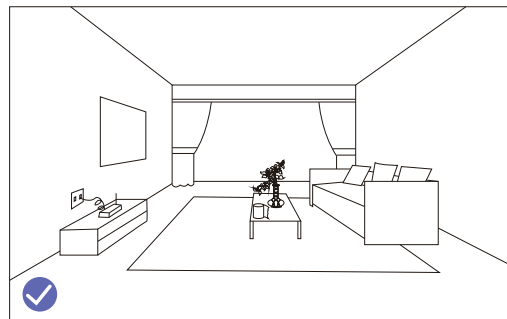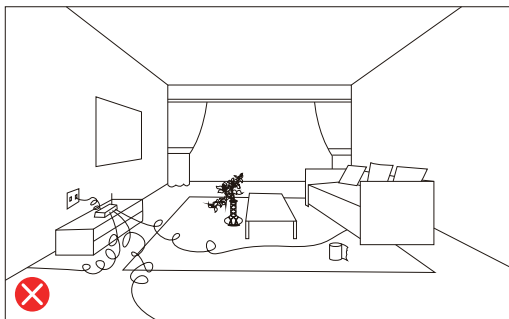

  Before using Robot, pick up objects like clothing, loose papers, pull cords for blinds or curtains, power cords, and any fragile objects. If the Robot passes over a power cord and drags it, there is a chance an object could be pulled off a table or shelf.

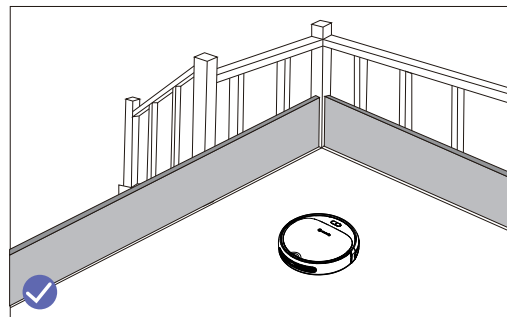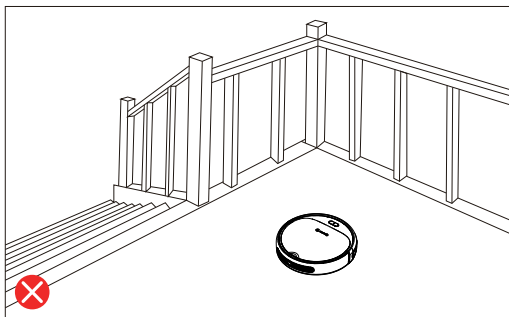


If the room to be cleaned contains a balcony, a physical barrier should be used to prevent access to the balcony and ensure safe operation.


## 3.2 Quick Start

 1. Plug in the Charging Dock and place the remaining wire into the trunking at the bottom of the Charging Dock

**Note:** Failure to place the remaining wire into the trunking, may cause Robot to become stuck while charging or cleaning.

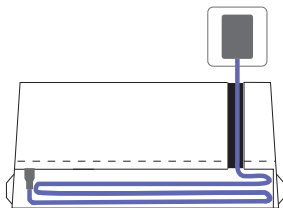

 
2. Place the Charging Dock on a hard level surface and against a wall.

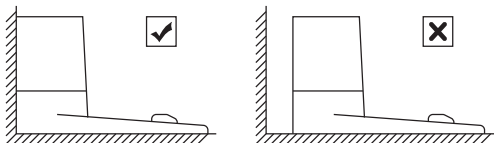

3. Charging Dock Position


Place the Charging Dock against the wall and make sure it is in an open and uncluttered area leaving at least:

 - 2 meters (6.5 feet) in the front of the Charging Dock.
- 1 meter (2.3 feet) on both sides of the Charging Dock.

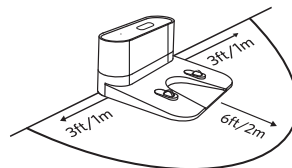

4. Install Side Brushes

 
Attach Side Brushes to the bottom of Coredy R300 by pressing a brush into each slot until it clicks.


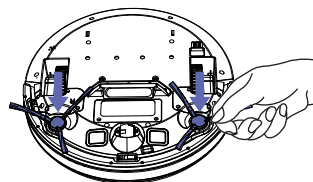


5. Activate the Robot




Place Coredy R300 onto the Charging Dock, making sure the metal charging contacts on the Charging Dock match up with those underneath the robot.

  **Note:** Initial Use, Switch on the Power Button on the Bottom.

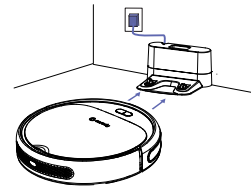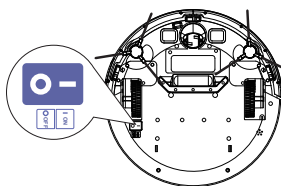If successful, you will hear a series of tones. Once the  Power button illuminates, Coredy R300 is ready for use.





## 6. Start Cleaning Cycle

  - Press the  power button once to wake up the robot.
- Press the  power button again to start a cleaning cycle (or  button on Remote Control).





If its battery gets low before finishing a cleaning cycle, robot returns to the Charging Dock to recharge.

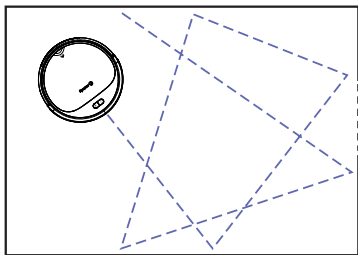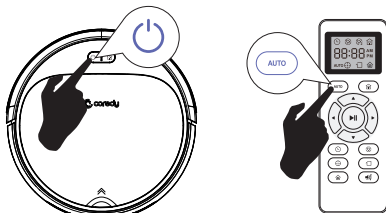If the Charging Dock is inaccessible, Robot will not be able to recharge, please place the robot manually on Charging Dock for charging. **(Refer Activate the Robot)**


**Note:** Please refer to section 3.3 for more Cleaning Mode.




## 7. Pause

 
- To pause the robot during a cleaning cycle press the  button on robot or press the  button on the Remote Control.
- To resume the cleaning cycle, press  button again.
- To send robot back to the Charging Dock, press  button.

**Note:** The actions listed above can also be managed from the Remote Control.

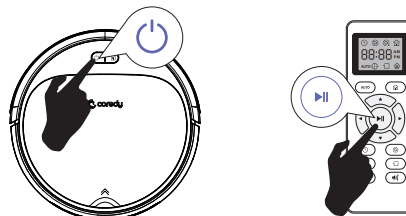

## 8. Power OFF

 - To end the cleaning cycle and put robot in standby mode, press and hold  button until robot's indicators turn off.

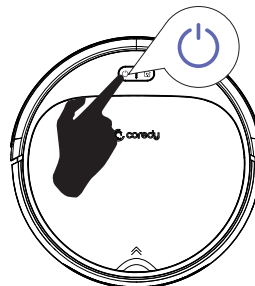


## 3.3 How Coredy R300 Cleans Your Home

Coredy R300 is designed to intelligently navigate and clean an entire level of your home. It's a multifunctional Robot with Cleaning-Sweeping, Vacuuming function.


### 1. Auto Cleaning

 
- Working in random pattern for seamlessly and thoroughly clean.
- At various times throughout the cleaning cycle, Coredy R300 touches up around the edges of the room, as well as chair legs and other furniture.
- Coredy R300 continues this process until it has cleaned an entire level of your home. If its battery gets low before finishing a cleaning cycle, Coredy R300 returns to the Charging Dock to recharge.
- Once Coredy R300 finishes its cleaning cycle, Coredy R300 returns to the Charging Dock to recharge.

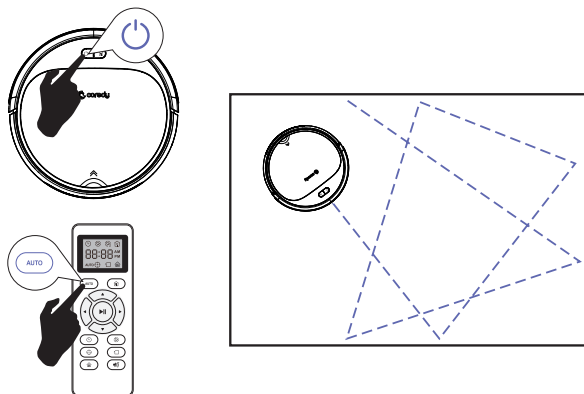


## Cleaning Preferences


### 2. Spot Cleaning

 
When you select Spot Cleaning, robot intensely cleans a localized area by spiraling outward about 3 feet (1 meter) in diameter and then spiraling inward to where it started. When Spot Cleaning, robot boosts its vacuum power to provide the best cleaning possible where you need it. To use Spot Cleaning, place robot on top of the localized debris and press  (Spot) on the Remote Control.

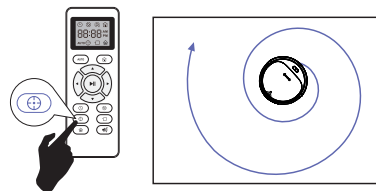


### 3. Lower Suction Vacuuming Cleaning


Robot reduce its vacuum power to provide a lower suction clean when press the  button on Remote Control.

 **Note:** Vacuuming cleaning suction is 1200Pa by default, change the cleaning suction to reach max vacuuming 1700Pa by pressing  button on Remote Control as well.

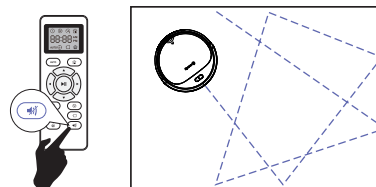


#### 4. Edge Cleaning

 
After robot finishes cleaning the open areas of your floor, it uses Edge Clean to ensure that it has cleaned along walls and around furniture legs. If you prefer a quicker edge cleaning, press the  button on Remote Control.

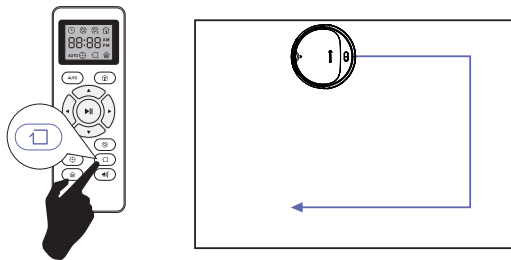

#### 5. Single Room Cleaning

Coredy R300 intensively cleans one single room and stops after 30 minutes. Select this mode only when one specific room needs to be cleaned. Make sure to confine Coredy R300 to the room by closing the door.

 Press  on the remote control to start cleaning in Single Room Mode.

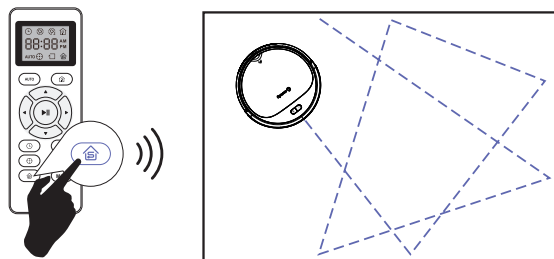


### 3.4 Floor Mopping Cleaning


Coredy R300 support wet mopping function ( Required a water tank and mopping cloth, you can shop on <http://shop.coredy.com> ), the robot can mop floor for your home.

**Note:** Water tank and mopping cloth sold separately.

 1. Attach the mop cloth to the holder and fill the water tank with water.

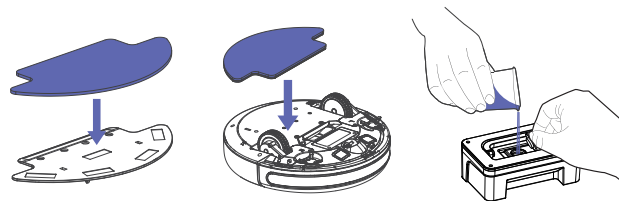


  2. Remove the dust bin from the robot.

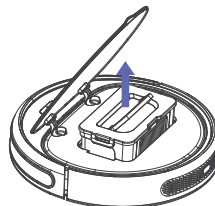



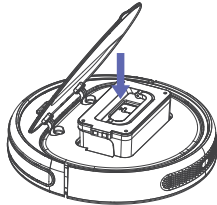

### 3. Put back the water tank to robot.

 


**Note:** If you are using a dry sweeping cleaning, skip to fill water in water tank.

### 4. Start Mopping Cleaning

Press the  power button to start mopping cleaning (or  button on Remote Control).


- \* Please remove the water tank after mopping.
- \* Robot cannot auto detect and avoid the carpet, please manually carry it down from carpet if the robot climbs to carpet.

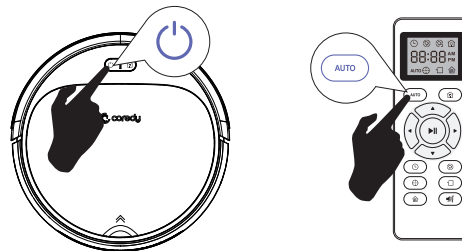

### 5. Select a Cleaning Mode

The robot has 4 cleaning modes for your choice under mopping cleaning function: Auto, Random, Spot and Edge, use remote control to select the desired cleaning modes to achieve optimal cleaning for your home.

 Default cleaning mode: Auto





## 3.5 Cleaning Schedule

 
Coredy R300 has cleaning schedule settings which allow you to customize when Robot cleans your home. These settings are available only through the Remote Control.



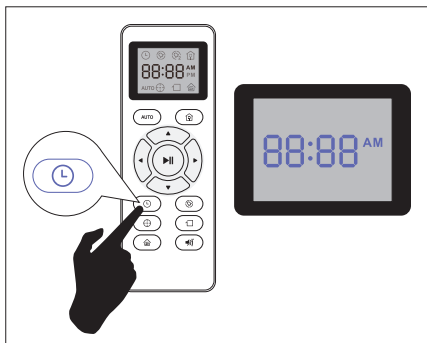

**Note:** Please make sure the Remote Control near by the Robot while setting the Clock or Schedule.


### 1. Set the Remote Control's Clock

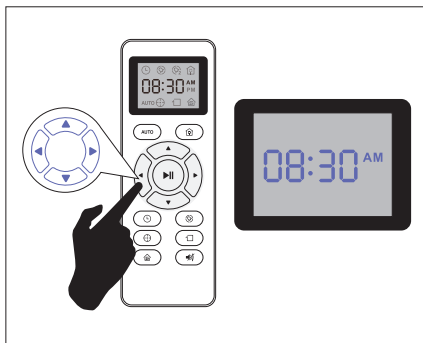 

Press  button on Remote Control, and then the hour section begins to flash in the clock display setting window.




  
Press  or  button to select the desired figures. Press the  or  button to select the minute or hour section.

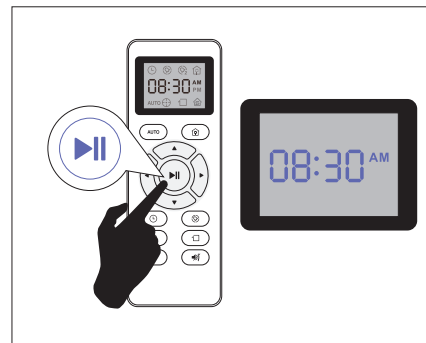 





 
And then press the  button, the Robot will “BEEP” when the clock setting completed.

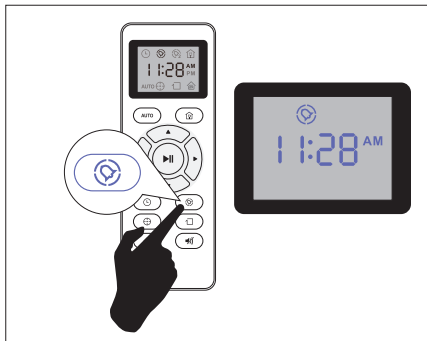
## 2. Setting Cleaning Schedule

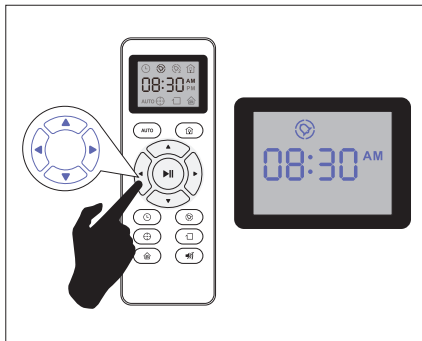

 
Press  button on Remote Control, and then the hour section begins to flash in the Cleaning Schedule display setting window.




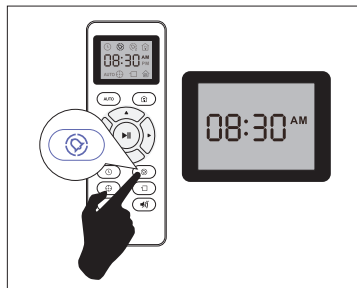 
Press  or  button to select the desired figures. Press the  or  button to select the minute or hour section.

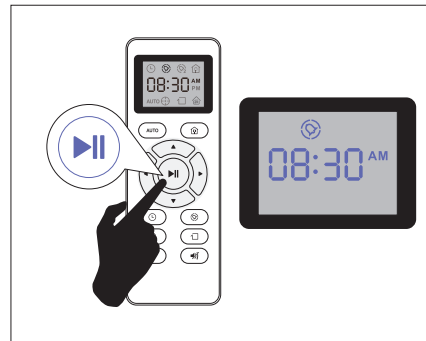

And then press the  button, the Robot will “BEEP” when the Cleaning Schedule setting completed.

## 3. Cancel the Cleaning Schedule

Press and hold  button approximately 4 seconds on Remote Control, the Robot will “BEEP” when the Cleaning Schedule process cancel completely.



## 4 Regular Robot Care

 
To keep robot running at peak performance, perform the following care procedures. If you notice robot picks up less debris from your floor, then empty the bin, clean the filter.

Robot Part	Care Frequency	Replacement Frequency
Filter	Once per week (twice per week in homes with pets)	Every 2-3 Months
Side Brush	Once per week (twice per week in homes with pets)	Every 2-3 months (or when visibly worn)
Dust Bin	After each use	Every 12 months
Water Tank (sold separately)	After each use	Every 12 months
Mopping Cloth (sold separately)	After each use	Every 3-6 months (or when visibly worn)
Cliff Sensors Charging Contacts Floor Tracking Sensor Front Driving Wheel Unversal Wheel	Once per month	—


**Note:** Coredy manufactures various replacement parts and assemblies. If you think you need a replacement part, please contact Coredy Customer Care for more information.

## 4.1 Emptying Robot's Bin

1. Open the middle cover and remove the dust bin.

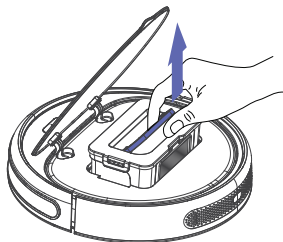


 2. Open dust bin door to empty it.

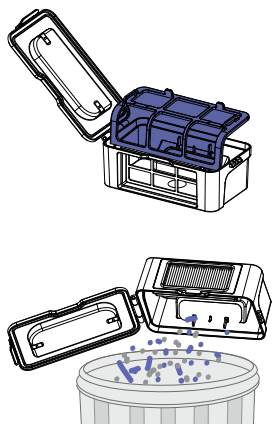

## 4.2 Cleaning Robot's Filter

 1. Remove the filter.

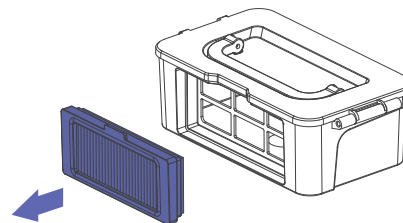


2. Shake off debris by tapping the filter against your trash container.




### 4.3 Cleaning Robot's Water Tank and Mop Cloth (Sold Separately)

 
- 1.** Open the middle cover and remove the water tank.

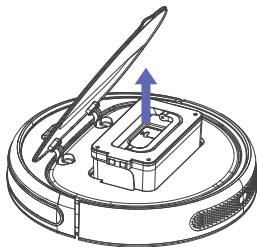

 
- 2.** Remove the cleaning mop cloth from holder, wash and lay flat to dry.

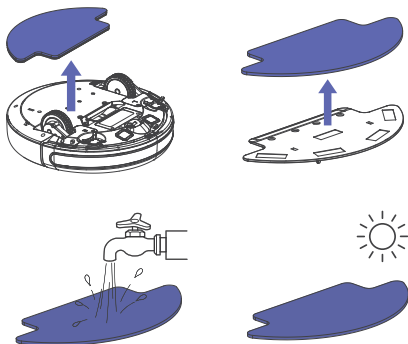

 - 3.** Empty the remaining water from the water tank.

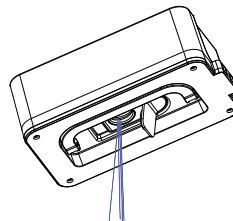


 - 4.** Use soft and dry cloth to wipe the outside of water tank, lay flat to dry. Avoid direct sunlight.

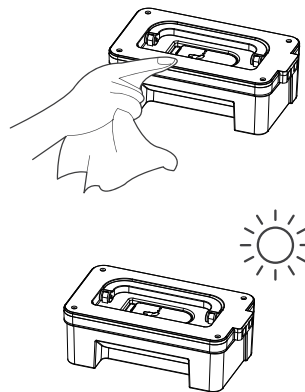


## 4.4 Cleaning Robot's Side Brush

 1. Remove the brush
2. Clean the brush and the brush stand, and reinstall the brush.


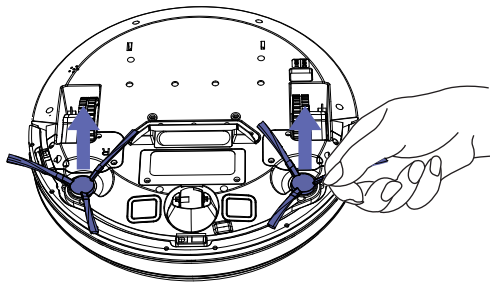


 2. Wipe the charging contacts on Robot and the Charging Base with a clean, dry cloth.

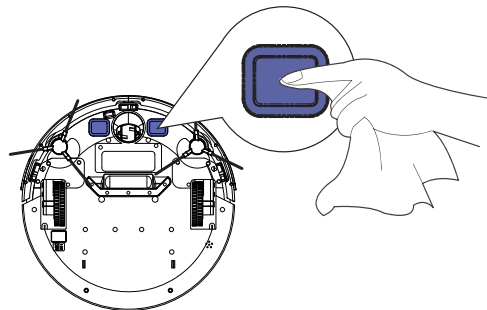

## 4.5 Cleaning Robot's Cliff Sensors and Charging Contacts

  
1. Wipe Robot's Cliff Sensors with a clean, dry cloth.

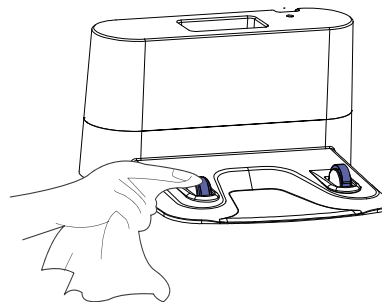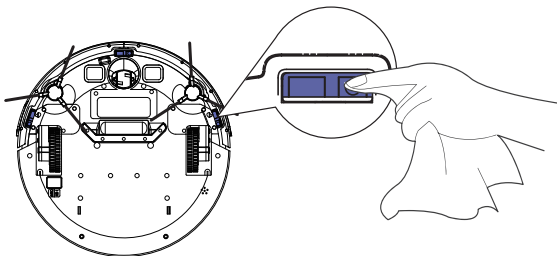

## 4.6 Cleaning Robot's Floor Tracking Sensor

Use a clean, dry microfiber or soft cotton cloth to wipe any debris that has accumulated in the round sensor opening on the right side of the bottom surface.

 Do not spray cleaning solution directly into the sensor entrance.

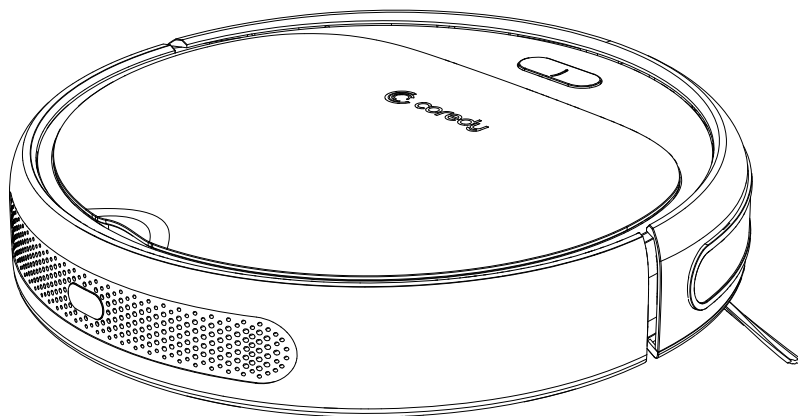



## 4.7 Battery and Charging Information

### Lithium Ion Battery

**Important:** Lithium ion batteries and products that contain lithium ion batteries are subject to stringent transportation regulations. If you need to ship this product (with the battery included) for service, travel or any other reason, you **MUST** comply with the following shipping instructions:

- Remove the lithium ion battery from the product
- Place a piece of tape over the battery's metal charging contacts
- Reinstall the battery (with the tape on it) in the product and secure the battery door
- Package the product in its original packaging or in your own packaging that prevents any movement during transportation
- Ship via ground transportation only (no air shipping)

### Battery Charging

To extend battery life, always keep robot charged on the Home Base when not in use.

### Battery Storage

If storing robot off of the Charging Dock, remove the battery first. Then store robot and the battery in a cool, dry place.

### Battery Disposal

Contact your local waste management authority for battery recycling and disposal regulations in your area.

 
 
### Battery Replacement

You can visit Coredy's website <http://shop.coredy.com> to purchase the battery or other accessories for the robot.


## Battery Removal

Follow these instructions to remove and reinstall robot's battery:


1. Unscrew the door and the two battery screws on the battery door, then remove.

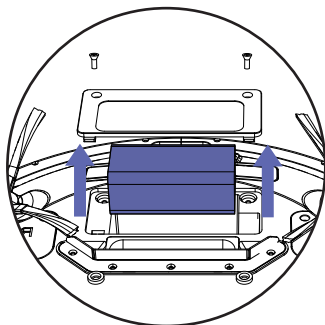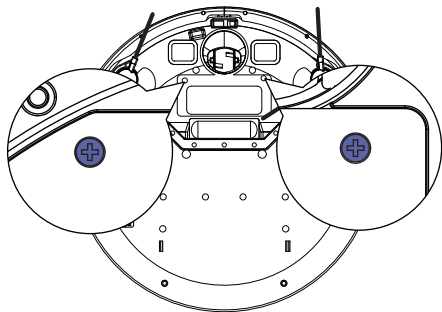

 
2. Reinstall the battery with the battery label and tabs facing up.

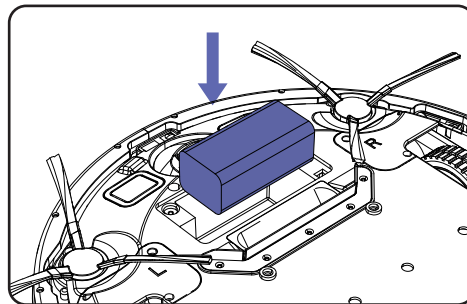

 3. Reinstall the battery door and the two screws. Take care not to pinch the side brush in the battery door when re-installing the battery.

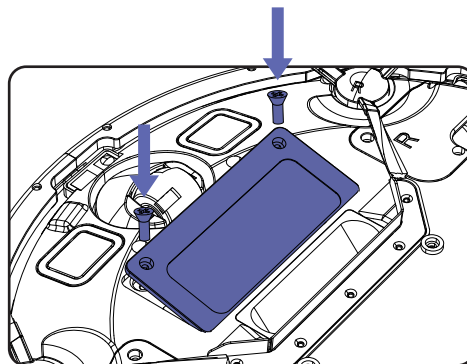

## 5 Troubleshooting

Robot will tell you something is wrong with a two-tone distress sound followed by message. The indicator  will also blink or lit red. Refer to the chart as below to resolve Robot's problem. If the problem is not resolved, please contact our COST FREE customer service team for more assistance.

### Rebooting Instructions

For some errors, rebooting Robot may resolve the problem. To reboot Robot, press the power button on the bottom on Robot, you will hear an audible tone signifying a successful reboot.

### Indicator Lighting Red

Robot Blinks and Says		Likely Cause	What to Do
Indicator Lighting Red	One beep	<ul style="list-style-type: none"><li>• Robot's front driving wheel is stuck.</li></ul>	<ul style="list-style-type: none"><li>• Clean the front driving wheel, then press the power button to restart the robot.</li></ul>
	Two beeps	<ul style="list-style-type: none"><li>• Robot's side brush is stuck.</li></ul>	<ul style="list-style-type: none"><li>• Clean the side brush, then press the power button to restart the robot.</li></ul>
	Three beeps	<ul style="list-style-type: none"><li>• Robot's vacuum fan is stuck or its filter is clogged.</li></ul>	<ul style="list-style-type: none"><li>• Remove and empty robot's dust bin.</li><li>• Clean robot's filter, then briskly tap the bin to loosen any remaining trapped debris.</li><li>• Make sure the vacuum inlet is not blocked by any hair or debris.</li></ul>

## Indicator Flashing Red



 


Robot Blinks and Says		Likely Cause	What to Do
Indicator Flashing Red	Two beeps	<ul style="list-style-type: none"> <li>Robot's bumper is stuck.</li> </ul>	<ul style="list-style-type: none"> <li>Tap robot's bumper several times to dislodge any debris that might be trapped underneath.</li> <li>Press robot's bumper 5-10 times to ensure bumper contracts freely.</li> </ul>
	Three beeps	<ul style="list-style-type: none"> <li>Robot's cliff sensors are dirty.</li> <li>Robot is hanging over a drop, or it is stuck on a dark surface.</li> </ul>	<ul style="list-style-type: none"> <li>Clean robot's cliff sensors gently with a dry cloth.</li> <li>Start cleaning in a new location if robot is hanging over a drop, or on a dark surface.</li> <li>Use boundary strip or a physical barrier to block off the problem area.</li> </ul>
	Four beeps	<ul style="list-style-type: none"> <li>Robot's battery power level is too low.</li> <li>Robot cannot return to its charging dock.</li> </ul>	<ul style="list-style-type: none"> <li>Manually take the robot on the charging dock to charge.</li> <li>Ensure there are no obstacles in front of the charging dock or starting position, wipe the charging contacts on both of the charging dock and robot with a clean, dry cloth.</li> </ul>

## Frequently asked questions

Problems	Solutions
Coredy R300 cannot be activated.	<ul style="list-style-type: none"> <li>• Make sure the main power switch is in the ON position.</li> <li>• Make sure the battery is fully charged.</li> <li>• Replace the batteries (2 AAA) in the remote control.</li> <li>• Make sure the remote control is within range (16 ft/5 m) of Coredy R300.</li> <li>• If you still have trouble, turn off the main power switch and then turn it back on.</li> </ul>
The remote control does not work.	<ul style="list-style-type: none"> <li>• Replace the batteries in the remote control.</li> <li>• Make sure Coredy R300 is turned on and fully charged.</li> </ul> <p>Note: Limited workable range distance is 5m/16.5ft.</p>
Coredy R300 stops working suddenly.	<ul style="list-style-type: none"> <li>• Check if Coredy R300 is trapped or stuck on an obstacle.</li> <li>• Check if the battery level is too low.</li> <li>• If you still have trouble, turn off the main power switch, wait for 2 seconds, and then turn it back on.</li> </ul>
You cannot schedule cleanings.	<ul style="list-style-type: none"> <li>• Make sure the main power switch on the bottom of Coredy R300 is turned on.</li> <li>• Make sure the time, time of day (AM/PM), and the scheduled time have been set correctly.</li> <li>• Check if Coredy R300's power is too low to start cleaning.</li> </ul>
Suction power is weak.	<ul style="list-style-type: none"> <li>• Check if any obstructions are blocking the suction inlet.</li> <li>• Empty the dust collector.</li> <li>• Clean the filters with a vacuum cleaner or a cleaning brush.</li> <li>• Check if the filters are wet due to water or other liquid on the floor. Air-dry the filters completely before use.</li> </ul>
Coredy R300 cannot be charged.	<ul style="list-style-type: none"> <li>• Check if the indicator on the Charging Base lights up. If not, contact the Coredy service center to repair or replace the Charging Base.</li> <li>• Dust off the charging contact pins with a dry cloth.</li> <li>• Check if you can hear a beep when Coredy R300 is docked onto the Charging Base. If not, contact the Coredy service center to repair or replace the Charging Base.</li> </ul>

Problems	Solutions
Coredy R300 cannot return to the Charging Base.	<ul style="list-style-type: none"> <li>Remove objects within 3 ft/1 m to the left and right side and within 6 ft/2 m of the front of the Charging Base.</li> <li>When Coredy R300 is in the vicinity of the Charging Base (distance within 26ft/8M), it returns more quickly. However, if the Charging Base is located far away (distance over 26ft/8M), Coredy R300 needs more time to return. Please be patient as it walks back.</li> <li>Clean the charging contact pins.</li> </ul>
Coredy R300's movements or travel path are abnormal.	<ul style="list-style-type: none"> <li>Clean the sensors carefully with a dry cloth.</li> <li>Restart Coredy R300 by turning the power switch off and on.</li> </ul>

## 6 Specifications

	Product Model	R300
	Input	19 V  0.6 A
	Battery Voltage	DC 14.4 V
	Power Consumption	28 W
	Battery Type	DC 14.4 V Li-ion 2600 mAh
	Dust Collector Capacity	0.3 L
	Cleaning Time	Max. 110 mins
	Charging Time	180-240 mins
	Input	19 V  0.6 A
	Output	19 V  0.6 A

## 7 Customer Service

---

US COST FREE Tech Support:

**+1 (800) 999 8470**

UK COST FREE Tech Support:

**+44 (808) 134 9909**

E-mail: [support@coredytech.com](mailto:support@coredytech.com)

Website: <http://shop.coredy.com>

---



@coredytech



@CoredyOfficial



@coredy\_robotvacuum



@Coredy Official



---

US COST FREE Tech Support:

**+1 (800) 999 8470**

(PST Mon-Sun 06:00-24:00)

UK COST FREE Tech Support:

**+44 (808) 134 9909**

(GMT Mon-Sun 14:00-08:00)

MODEL: R300

E-mail: [support@coredytech.com](mailto:support@coredytech.com)

Website: <http://shop.coredy.com>

---

V2.6