



# Remote Control

(Non-Screen Model)

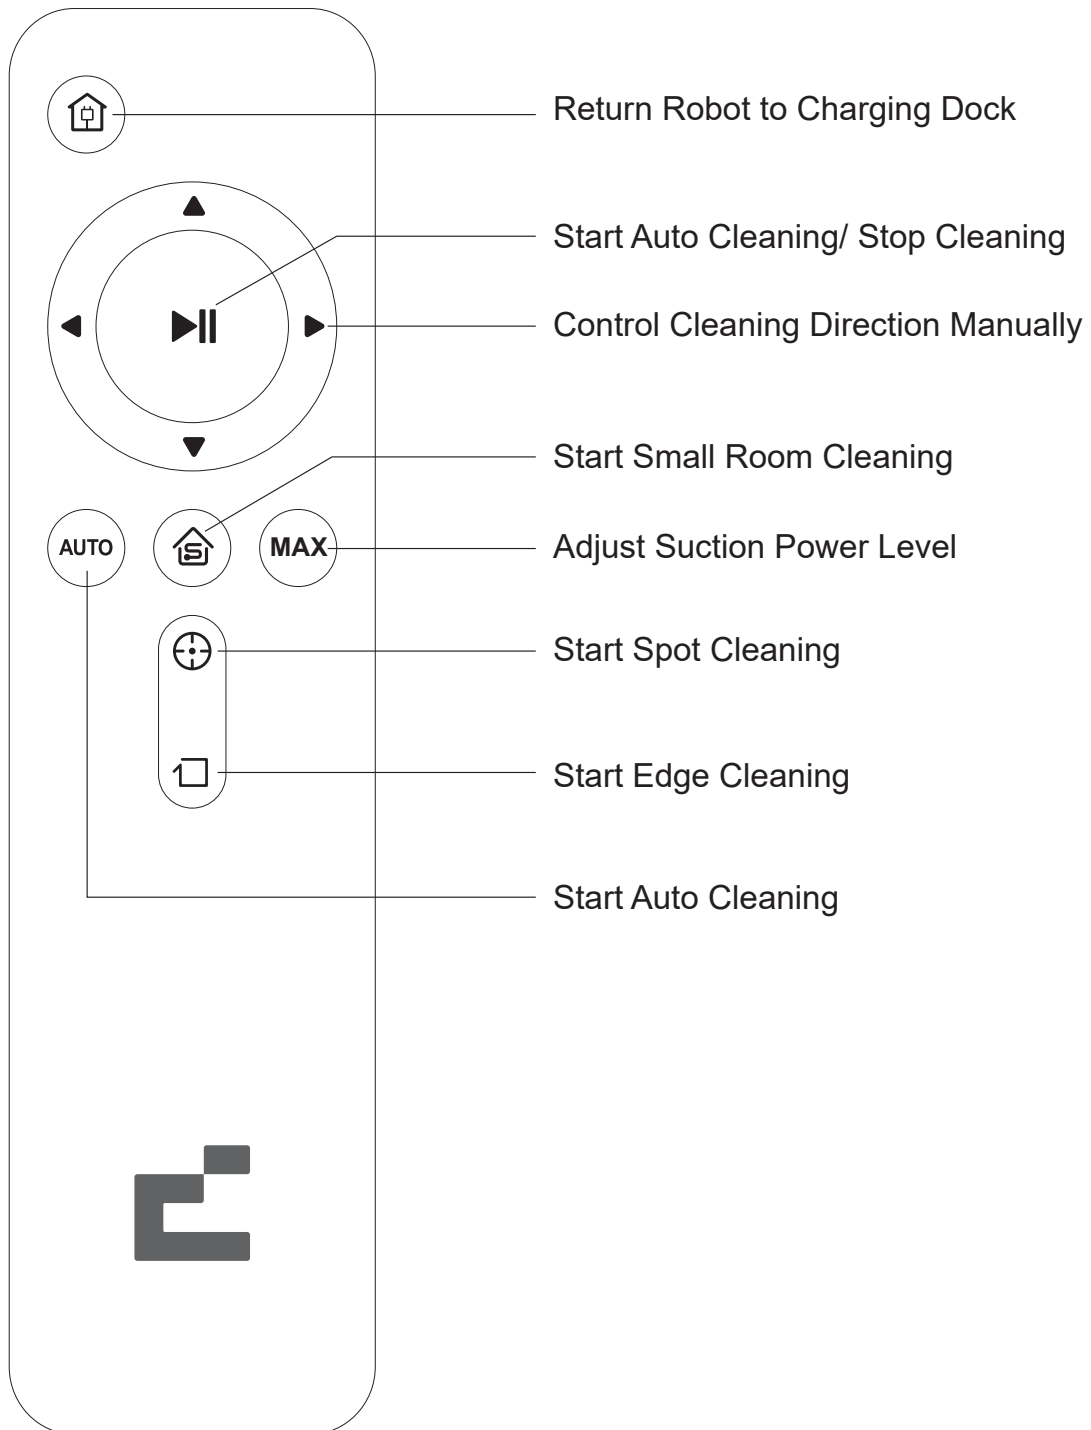

Please install the battery before using the remote control.

## ● Adjust suction power level

To adjust your robot's suction power, please start your robot first. Once the robot starts cleaning, point the remote at the robot and press the  button to change the suction power.

There are three suction power modes:


**Quiet:** robot will emit one beep when the suction power mode is adjusted to this mode.


**Standard:** robot will emit two beeps when the suction power mode is adjusted to this mode.


**Max:** robot will emit three beeps when the suction power mode is adjusted to this mode.

## ● Select cleaning mode

To change your robot's cleaning mode, please start your robot first. Once your robot is cleaning, point the remote at the robot and press the following buttons to select your desired cleaning mode.

 **Auto Cleaning:** robot will auto start a cleaning cycle until its battery is low.

 **Spot Cleaning:** robot intensely cleans a localized area by spiraling outward about 3 feet (1 meter) in diameter and then spiraling inward to where it started.

 **Edge Cleaning:** robot will clean along edge of walls.

 **Small Room Cleaning:** robot will intensively clean one small room and stops after 30 minutes.

## ● Manually control robot's cleaning direction

To manually control your robot's cleaning direction, please first start your robot. once the robot is cleaning, point your remote at the robot and press any of four directional arrows to change its cleaning direction.

**Contact the Coredy support team at +1 800 999 8470 for assistance with any questions you may have on using this remote control.**