NEEWER®

TTL Wireless Trigger

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio

radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is

• Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer

could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

About This Manual

3.Nomenclature


A TTL 0.0 B TTL 0.0 C TTL 0.0 D M 1/128 E M 1/128


Zm/CH SYNC ALL MO

Thank you for purchasing the **NEEWER®** TTL Wireless Trigger. The manual will cover the following:

I the basic operation procedures and functions of the Wireless Trigger. I the application environment and safety use of the Wireless Trigger.

the installation of the accessories of the Wireless Trigger.

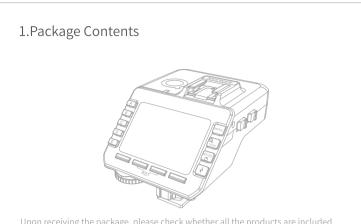


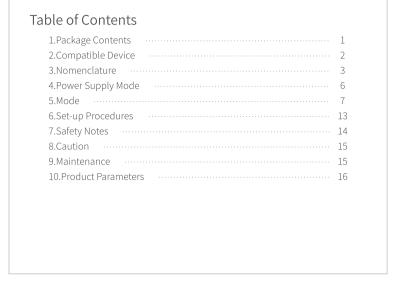



Flash Hotshoe

AF-assist Switch

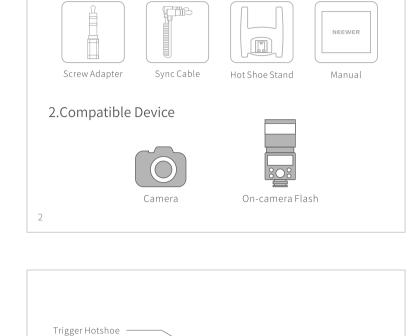


Accessories

Release Button

Setting Dial

The state of

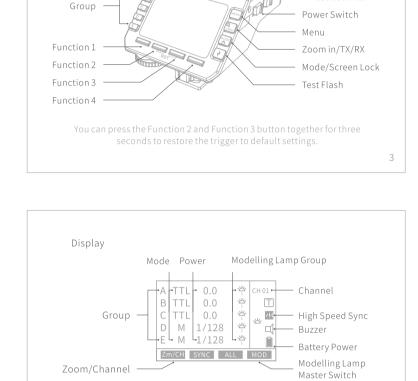

A TTL

Multiple Group Display Single Group Display

Zoom AUTO

Zm/CH SYNC Gr


 \Box


STBY-F


BEEP LIGHT OFF ON


CLEAR SET


Menu Display

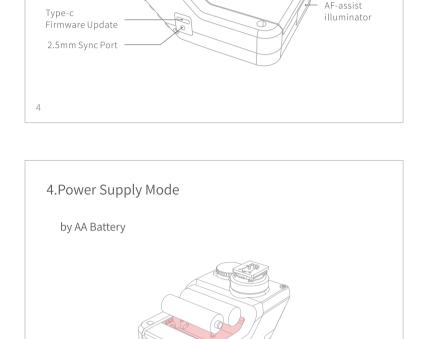


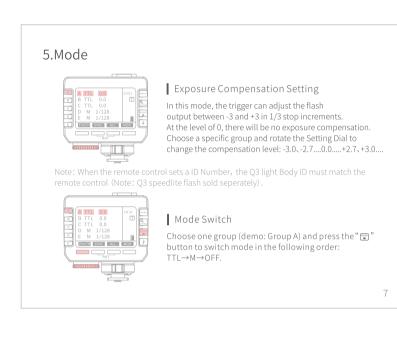


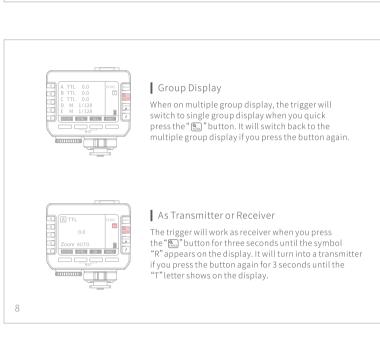


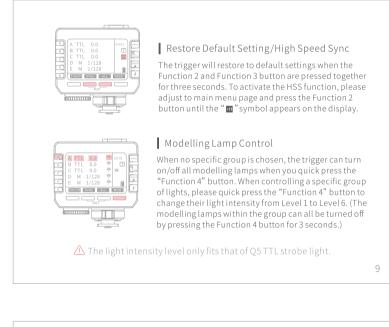


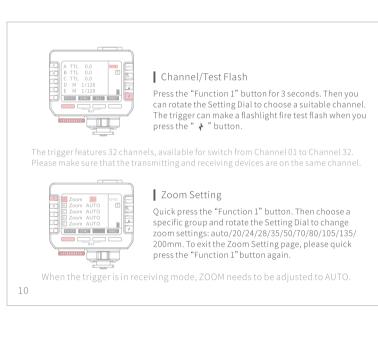

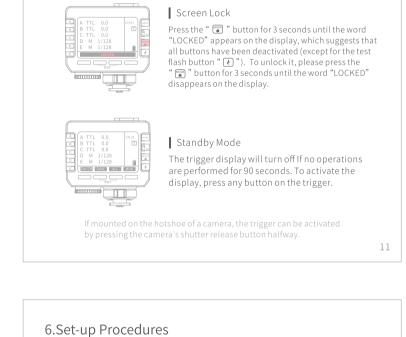


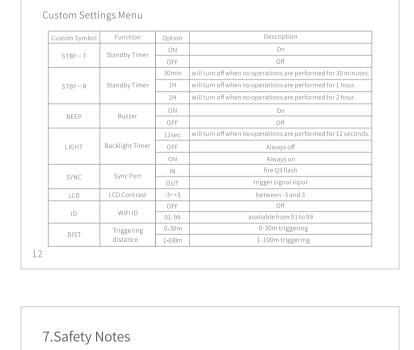

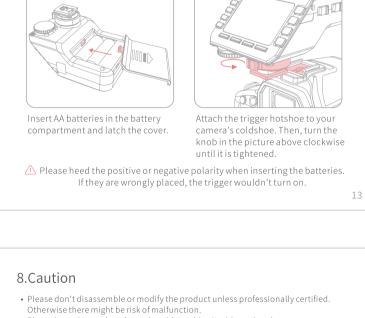

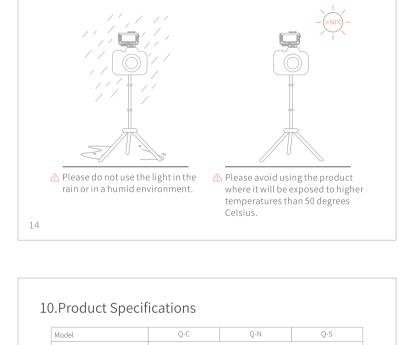

0.0441011	
 Please don't disassemble or modify the product unless professionally certified. Otherwise there might be risk of malfunction. Please keep the product dry and avoid touching it with wet hands. Please don't use the trigger near flammable or explosive items. Please avoid disposing of battery in a fire or keeping it near fire source. Should there be malfunction of the trigger, please turn it off immediately and try to identify the possible cause. Please avoid using new and old batteries together or different types of battery. Please don't short circuit or dismantle batteries 	
9.Maintenance	
 Soft cloth is recommended to clean the trigger screen. Please remove the batteries when the trigger is left unused for a long period of time The trigger should be kept in a dry and well-ventilated environment. Please avoid using the trigger in close proximity to magnetic devices and strong electrostatic field, such as radio transmitter, otherwise the trigger might malfunction. 	
	15

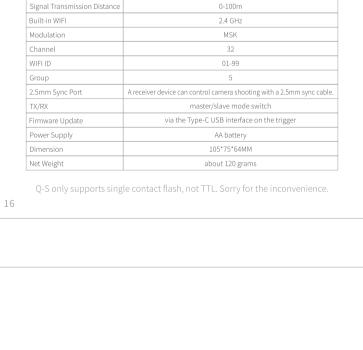



粉色177C