



air purifier | MANUAL







#### Message

It is a great honor to have you choose our air purifier.

Please read the "Important Items" in this user manual carefully

before using.

Please keep it after reading.

----







#### **CATALOGUE**

01	IMPORTANT ITEMS	
	DANGER	2
	WARNING	2
	ATTENTION	3
02	PRODUCT SPECIFICATION	
	PRODUCT PARAMETERS	5
	PRODUCT COLOR	6
	PACKING LIST	7
03	PRODUCT INTRODUCTION	
	PRODUCT DESCRIPTION	8
	MANIPULATION DESCRIPTION	9
04	OPERATION GUIDE	
	OPERATION GUIDE	10

05	CLEANING AND MAINTENANCE	
	CAUTIONS	14
	CLEANING PLAN	14
	FILTER REPLACEMENT	15
06	PRODUCT QUALITY	
	PRODUCT CERTIFICATION	16
07	TROUBLE SHOOTING	
	TROUBLE SHOOTING	17
38	AFTER SALES SERVICE	
	WARRANTY SERVICE	19
	MANIPULATION DESCRIPTION	20







### 01 IMPORTANT ITEMS

#### **DANGER**

- Do not allow water or any other liquid or (flammable) cleaner to enter the product to avoid electric shock or fire.
- Do not spray any combustible materials such as insecticides or perfumes around the product.

#### WARNING

- Check the voltage marked on the product matches the local supply voltage before connecting adapter to the power supply.
- Please stop using the product if adapter, power cord, or the product damaged.
- If the power cord is damaged, it must be replaced by the manufacturer or after- service department or a dedicated person to avoid danger.
- Do not block the air inlet and outlet, for example, do not place objects on the air outlet or in front of the air inlet port.
- Make sure that foreign matter does not enter the inside of the product through the air outlet.





### 01 IMPORTANT ITEMS

#### **ATTENTION**

- This product is not a substitute for normal ventilation, daily vacuuming, or range hoods used during cooking.
- If the power outlet to the machine adapter is not properly connected, the plug of the adapter may
- Make sure that the connected power outlet is in good contact.
- Be sure to place and use machine on a dry, firm, flat and level surface.
- Allow at least 5 cm of space around the product and at least 20 cm above the product.
- Do not place anything on this product.
- Do not place the product directly under the air conditioner to prevent condensation from dripping into the product.
- Make sure the filter is properly installed before the product is in normal use.
- Use an original filter designed specifically for this product. Do not use any other filters.
- Burning the filter may cause irreversible damage to humans or other organisms. Do not use the filter as a fuel or similar.





### 01 IMPORTANT ITEMS

#### **ATTENTION**

- Do not hit the product with hard objects (especially the air inlet and outlet).
- Do not insert your fingers or objects into the air outlet or air inlet to prevent physical damage or malfunction of the product.
- Do not use this product when you use indoor spray repellent or where it is full of oil, flammable gas or chemical fumes.
- Always unplug the power cord after using the product, cleaning the product, or performing other maintenance.
- Do not use this product in a room with a large temperature change to avoid condensation inside the product.
- Do not use this product in a humid or high temperature environment (eg bathroom, toilet, etc.).
- This product does not remove carbon monoxide (CO) or helium (Rn), so it cannot be used as a safety device in the event of a burning or hazardous chemical accident.







# 02 PRODUCT SPECIFICATION

#### PRODUCT PARAMETERS

Input Voltage	AC100-240V   50-60Hz
Output Voltage	DC12V   1A
Power	8 W
$CADR_{Smoke}$	110 m³/h   65 cfm <sup>^</sup>
$CADR_{Smoke}$	100m³/h   59 cfm "
Suggested Room Size	8.5 m <sup>2</sup>   91 ft <sup>2</sup>
Noise	≤53 dBA
Product Net Weight	1.45 Kg
Product Size	180*180*298 mm
Packing Size	215*215*335 mm

\* Filter paper specifications: H11

\*\* Filter paper specifications: H13





# 02 PRODUCT SPECIFICATION

#### PRODUCT COLOR

The product is available in black and white.







# 02 PRODUCT SPECIFICATION

#### **PACKING LIST**



Host 1PCS



Filter 1PCS



Adapter 1PCS



Manual 1PCS



## 03 PRODUCT INTRODUCTION

#### PRODUCT DESCRIPTION

This machine is a desktop air purifier that can absorb and decompose various air pollutants (including particulate matter, dust, pollen, odor, bacteria, allergens, etc.), effectively improve air cleanliness, improve indoor air quality, and create healthy and comfortable Office and residential environment.

- A. Display / Control panel
- B. Air outlet
- C. Body
- D. Ornament
- E. Air inlet
- F. Base












## 03 PRODUCT INTRODUCTION

#### **MANIPULATION DESCRIPTION**

- G. Power button (on / off)
- H. Night Light
  - Timer Display
- I. Timer button
- K. Working mode indicator
- L. Working mode selection button

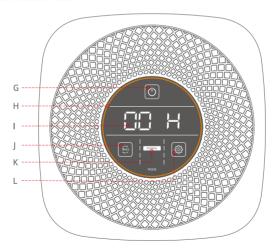







1. After the product is connected to the power supply, the product is in the standby state, the power button ( ) is displayed in red, touch the power button ( ) lightly, the power button ( ) changes from red to white, and the product enters the working state;







 Touch the work mode selection key ( ) for cycle operation (Normal-MAX-NIGHT LIGHT-SLEEP-Normal), and touch this key to switch the work mode;

Mode-Normal: The product enters the normal purification state, and the fan works in the mid-range;
Mode-Max: The product enters a high-efficiency purification state, and the fan works at ultra-high speed;
Mode-Sleep: If you do not perform any operation on the product for 10 seconds, the screen display turns
off and the fan works at a low speed. To wake up the screen, touch any button on the screen to wake up
the screen:













Mode-Night Light: If no operation on the product for 10 seconds, the night light status indicator lights becomes orange, the screen display turns off, and the fan works at low speed; if you need to wake up the screen, touch any button on the screen to wake up the screen;



10 seconds later







3. Touch the TIMER key ( ), the product enters the timing setting, and the time cycles between 00H-01H-02H -04H-08H-12H-00H:

The product defaults to 00H, meaning no timing, the product is always on:

Touch the TIMER button ( ) lightly to display 01H, 01H flashing, 2 seconds no operation, 01H constant light. 1 hour timing completed:

If the TIMER key ( 📵 ) is lightly touched again when flashing for 01H, the screen will display for 02H.

No operation for 2 seconds, 02H constant light, 2 hours timing completed.

If the TIMER key ( 🌚 ) is lightly touched again when flashing for 02H, the screen will display for 04H.

No operation for 2 seconds, 04H constant light,4 hours timing completed.

If the TIMER key ( 🐻 ) is lightly touched again when flashing for 04H, the screen will display for 08H.

No operation for 2 seconds, 08H constant light,8 hours timing completed.

If the TIMER key ( 🔤 ) is lightly touched again when flashing for 08H, the screen will display for 012H.

No operation for 2 seconds, 04H constant light,12 hours timing completed.

If the TIMER key ( 🐻 ) is lightly touched again when flashing for 12H, the screen will display for 00H.

No operation for 2 seconds, 04H constant light, the product turns on normally open mode;











5. When the remaining time of the filter is less than 72 hours, the TIMER key ( ) is displayed in red to remind consumers to replace the filter in time to avoid affecting the purification effect of the product.

After the filter is replaced, touch the TIMER button ( ) for 3 seconds, the TIMER button ( ) changes from red to white and the product filter re-starts timing;







6. If you need to turn off the machine, tap the power button ( ) and the product will return to standby.







## 05 CLEANING AND MAINTENANCE

#### **CAUTIONS**

- Always turn off the adapter plug before cleaning.
- Never immerse products and accessories in water or any other liquid.
- Never use abrasive, corrosive or flammable detergents (such as bleach or alcohol) to clean any part of the product.
- The air purification filter should not be washed or vacuumed.

CLEANING PLAN		
Frequency	Cleaning method	
When necessary	Clean the surface of the product with a dry soft cloth, air inlet and outlet	
Every two months	Clean the air quality sensor air inlet and outlet with a dry soft cloth or soft brush	







## 05 CLEANING AND MAINTENANCE

#### FILTER REPLACEMENT

- After the product is powered off, unscrew the filter cover according to the direction of the base filter cover switch, and take out the air purification filter whose service life has ended, and put it into the corresponding garbage can.
- 2. Remove all packaging materials from the new filter and put the removed filter back into the product.
- Screw the filter cover in the direction indicated by the base screen cover switch to place the product on a stable table.
- 4. Insert the adapter into the socket. After the product is powered on, tap the power button to make the product work normally. Touch the timer button for 3 seconds. The timer button changes from red to white. The remaining life timer is reset.

Note: The used air filter contains contaminants collected from the air. Do not touch the filter cotton directly or smell the filter.







## 06 PRODUCT QUALITY

#### PRODUCT CERTIFICATION

Certificate		
Product name		
Manufacturer		
Production date		
Quality inspector		
After inspection, the quality of the products is qualified and the factory is allowed to leave the factory.		

16



## 07 TROUBLE SHOOTING

This chapter summarizes the problems you most often encounter when using the product. If you are unable to resolve the issue based on the information below, please contact the Customer Service Center in your country.

Frequently Asked Questions	Confirmation	Treatment
	The area is out of power.	Please wait to resume power supply.
	Whether the circuit breaker of the place of use is open?	Please wait for the power supply to resume.
Unable to power on	Is the adapter connected properly?	Please make sure the adapter AC plug is properly connected to the outlet.
		Please ensure that the adapter DC plug is properly connected to the product host.
	Whether the air inlet is covered?	Please remove the cover.
Air outlet is not exhausted Air outlet volume is	Whether the air inlet has residual dirt?	Please clean the air inlet.
significantly weaker than	Whether the filter is covered?	Please remove the cover.
when purchased	Whether the filter has residual dirt?	Please clean the filter. If there is no obvious improvement, please replace the filter.









## 07 TROUBLE SHOOTING

Frequently Asked Questions	Confirmation	Treatment
The air volume at the air outlet is significantly enhanced compared to	Whether the filter is installed correctly?	Please install the filter correctly.
the purchase	Is the filter damaged?	Please replace it with a new one.
	Whether the filter is installed correctly?	Please install the filter correctly.
After the product has been running for a period of	Is the filter damaged?	Please replace it with a new one.
time, there is no significant improvement in air quality	Whether the filter has residual dirt?	Please clean the filter. If there is no obvious improvement, please replace the filter.
	PM2.5 detector air inlet and air outlet residual dirt.	Please clean the PM2.5 detector air inlet and outlet.
The air quality display	Whether the filter is installed correctly?	Please install the filter correctly.
remains the same	PM2.5 detector air inlet and air outlet residual dirt.	Please clean the PM2.5 detector air inlet and outlet.
Product operation noise is	Whether the air inlet is covered?	Please remove the cover.
too large	Whether there is foreign matter left in the air outlet?	Please clean the air outlet.









### 08 AFTER SALES SERVICE

#### WARRANTY SERVICE

Within two years after the date of purchase, you will receive a free warranty for any damage caused by manufacturing processes or components that have been confirmed by the company's authorized service station personnel.

This free service does not include purifier filters, auxiliary equipment, transportation costs and on-site service fees that need to be replaced from time to time.

Users please keep this link.

Please bring along this card and the original invoice when repairing. This certificate will be void if it is altered.

Warranty is a guarantee of free repairs within the specified time limit and conditions and does not limit the legal rights of consumers.

Free services will not be available in the following cases:

- Man-made damage caused by improper use, such as improper power supply, improper use
  of accessories, improper installation, use without instructions, misuse or negligence.
- 2. Damage caused by transportation and other accidents.
- $_{
  m 3.}$  Repairs and modifications not approved by the company.
- 4. Other damage caused by force majeure (such as natural disasters, voltage anomalies, etc.).
- 5. Damage caused by general use outside the home (eg industrial, commercial).
- 6. Aging, abrasion, etc. of the product caused by normal use, but does not affect the normal use of the product.





#### MANIPULATION DESCRIPTION

Please fill in the following carefully:

Product name	
Client's name	
Customer phone	
Customer address	
Purchase date	
Purchase address	
Dealer name	
Warranty record	

Service hours: Monday to Friday, 9:00-18:00 (except holidays)





