

ELECTRIC SMOKELESS GRILL INSTRUCTION MANUAL

GEBBQE005C-U

Dear Gevi customer

Gevi have focused on creating perfect home appliance for our customer. In the past years, it took us time, lots of research and many prototypes to achieve our goal. We would like to give you a different using experience. Thanks for purchasing our Gevi products, you could search from our official website, to learn more products information.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, temperature-controlling plug or plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.

10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Household use only.
15. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

SAVE THESE INSTRUCTIONS.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way, If the plug does not fit fully into the outlet, reverse the plug, If it still does not fit, contact a qualified electrician, Do not attempt to modify the plug in any way.


If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally;

- 3) If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

JUST USED BY THE FAMILY

THE PRODUCT CHART

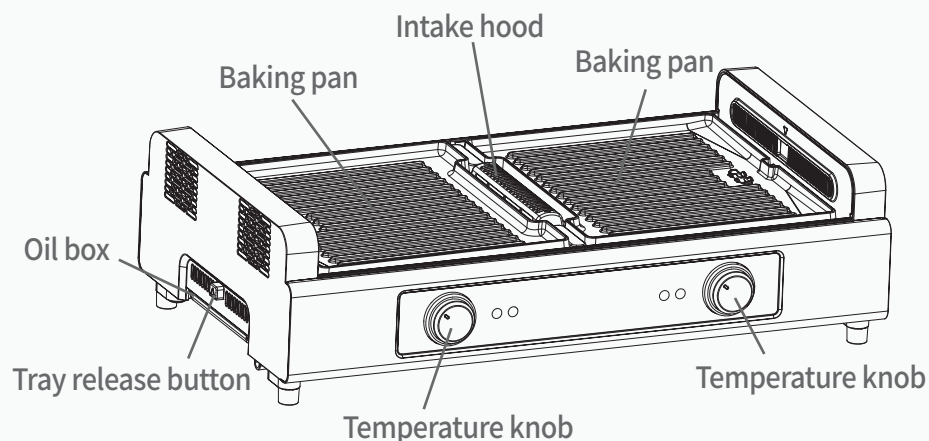

Electrical parameters: 120V AC 60Hz 1800W

BEFORE YOUR FIRST USING

Please use a wet cloth to clean the grill.

● Prepare to grill:

1. Prepare the concerned food (cucumber or tomato .etc).
2. Cut the prepared grill food to 25mm thickness.
3. Open the grill ,wiping a thin oil and butter, then close it .Don' t use low-fat to wipe the food ,or it will cause burning.

● Set up the temperature:

1. Connect the power ,when the temperature control knob point at the needed setting , the power light will be white .

2. The unit start to work and heat, when temperature reaching set value, thermostat cut off, status indicator extinguish.
3. Just knob according to requirement to preheat firstly, after blue indicator extinguish, put food.
4. The unit could adjust the top temperature 230°C,According to food sort to choose proper grill temperature.

● Put on the food:

1. When achieve to the pre-heating time, the temperature is the highest one.
2. Place the food on the lower grill plate with the shovel or plier. Roasted for a few time, using a shovel or tongs to flip the food.
3. The thermostat knob of left and right grill could control the its temperature.

● Cooking time:

The cooking time is general 10 min, the longest time is 15 min. When the food is cooked, please move the grill plate.

● Put out the food:

1. Check the food whether is cooked. If not confirm, the food should be cooked for longer time.
2. Put out the food with the wooden or plastic plate.

● After the food cooked:

1. When the food has cooked, adjust the thermostat to the min-setting. If not pull out the plug, the power light also is on.
2. Pull off the plug.(if the plug is switch style, switch off the plug switch)

● Other:

1. Wear the glove, take out the oil box carefully, and pour the oil draff into the bowl, and clean the oil box with the cloth, and then place to the back of the grill plate.(Remark: Before take out the oil box, the oil and oil draff should be cooled below 40°C, avoid burning.
2. If not using again ,adjust the thermostat to the min-setting, the heating pipe will stop heating ,if you want open the unit again , please adjust the thermostat to the max setting
- 3.NOTE: the temperature of the grill is still high ,it should be cooled for a little time.

CLEANING AND MAINTENANCE

1. Cut the power and cool the grill before cleaning and accumulating
2. Disassemble and take out the grill pan.
3. After disassemble the grill pan , clean the grill plate with the warm suds or dishwasher.
4. Before assembled the grill plate again, dry it first.
5. Clean the oil box with the warm suds or the upper dishwasher.
6. Clean the other parts with the cleaned and wet cloth.

7. Wipe off the hard-cleaning dirt with a paper which is added some oil.
8. Grill plate assembled:
 - The unit must not immerge into the water or other liquid.
 - The unit must not be cleaned with the rough or abrasive cleanser or solvent cleanser.
 - The unit must not be clean with the cleaning tool, steel velour or soap ban.

PLEASE PROTECT THE ENVIRONMENT



Please cooperate to protect the environment.
Remember to comply with the rule: please hand the broken unit to the suitable castoff handling centre.

