

COFFEE GRINDER
INSTRUCTION MANUAL
GECGI406B-U7



CONTENTS

1. WELCOME.....	2
2. DESCRIPTION OF THE APPLIANCE.....	2
3. IMPORTANT SAFEGUARDS	3
4. CORD & PLUG INSTRUCTION	5
4.1 SPECIAL NOTES ON PLUG	5
4.2 SHORT CORD INSTRUCTION.....	5
5. COFFEE GUIDE OVERVIEW	6
6. MAIN OPERATION FUNCTION INSTRUCTION	6
6.1 THE THREE MODES OF THE COFFEE GRINDER.....	6
6.2 HOW TO USE THE BY CUP FUNCTION.....	7
6.3 HOW TO USE THE BY TIME FUNCTION	10
7. CLEANING AND MAINTENANCE	13
7.1 DAILY TIPS FOR CLEANING AND MAINTENANCE.....	13
7.2 THE STEP OF OPERATION	13
8. TIPS FOR PERFECT BARISTA	16
9. TROUBLESHOOTING	17


1. WELCOME

Thanks for purchasing our Gevi products. Gevi has focused on creating perfect home appliances for our customers. In the past few years, it took us time to do lots of research and many prototypes to achieve our goal. We would like to give you a different user experience. If you want FAQs and more information, please feel free to contact us.

2. DESCRIPTION OF THE APPLIANCE

MODEL: GECGI406B-U7

Electrical parameters: 120V~ 60Hz 200W

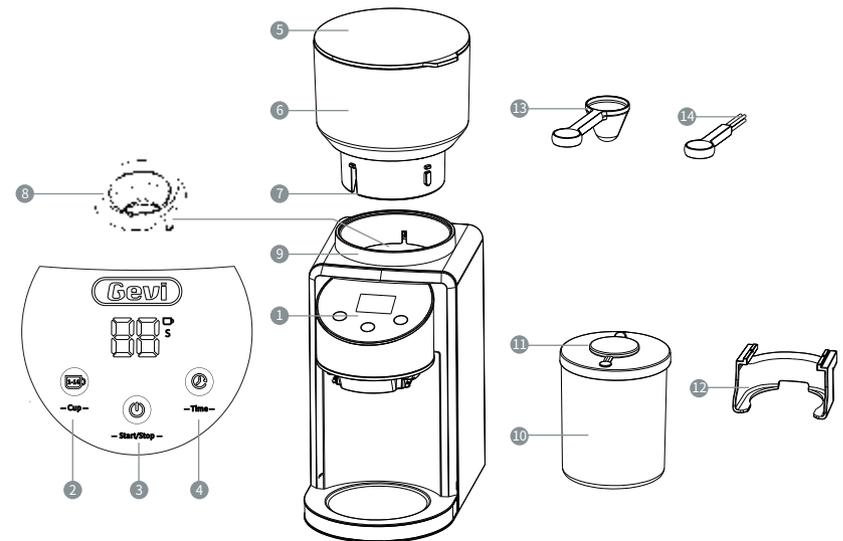

Re.	Description	Re.	Description	Re.	Description
1	LED touch panel	6	Bean hopper	11	Silicone cover
2	Cup selection icon	7	Bean outlet	12	Portafilter support
3	Start/Stop icon	8	Conic burr	13	Coffee spoon
4	Time selection icon	9	Grind size ring setting	14	Brush
5	Hopper lid	10	Powder chamber		

3. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. Read all instructions.
- 2. To protect against risk of electrical shock do not put in water or other liquid.
- 3. Close supervision is necessary when any appliance is used by or near children.
- 4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- 5. Avoid contacting moving parts. Do not attempt to defeat any safety interlock mechanisms.
- 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- 8. Do not use outdoors .
- 9. Do not let cord hang over edge of table or counter.
- 10. Do not let cord contact hot surface, including the stove.
- 11. FOR HOUSEHOLD USE ONLY
- 12. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to

ensure that they do not play with the appliance.

—13. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

—14. Check hopper for presence of foreign objects before using.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY .

4. CORD & PLUG INSTRUCTION

4.1 SPECIAL NOTES ON PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet in only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

4.2 SHORT CORD INSTRUCTION


- a) A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk of entanglement or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as large as the electrical rating of the appliance;
 - 2) The power cord should be arranged so that it will not dangle on the countertop or desktop, so as not to be pulled by children or trip over accidentally;
 - 3) If the electrical appliance is grounded type, the extension cord should be a grounded type 3-core wire;

5. COFFEE GUIDE OVERVIEW


Gevi electric burr grinder has the grind size ring setting ⑧ with 35 different position for 4 main kinds of coffee, that are suitable for a range of brewing methods, from the finest setting for espresso to the coarsest setting for french press. By adjusting the LED touch panel ①, you can choose by cup function or by time function.

6. MAIN OPERATION FUNCTION INSTRUCTION

6.1 THE THREE MODES OF THE COFFEE GRINDER

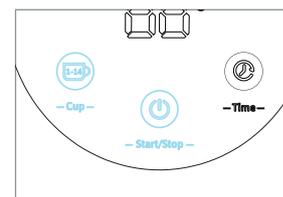


—1. Standby mode: The Start/Stop icon ③ and Cup selection icon ② will be light. Time selection icon ④ don't light up.

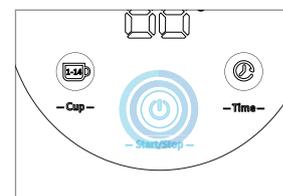

—2. Child-lock mode: The Start/Stop icon ③ will flash slowly, the Cup selection icon ② and Time selection icon ④ don't light up.

- 1) Plug in, the machine switch on, 3 icons will be light and have a beep sound. After 2 seconds, the machine will pass to child-lock mode.
- 2) After finish grinding, long press the Start/Stop icon ③ for 2s to pass to the Child-lock mode quickly.
- 3) Back to the standby mode: Long press the Start/Stop icon ③ for 2s, then the machine will pass to standby mode.

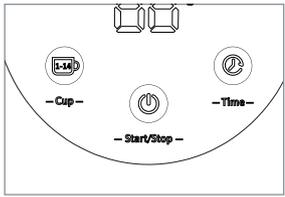

—3. Light-off mode:

- 1) After finish grinding, long press the Start/Stop icon ③ for 4s to enter the light-off mode. (When you press Start/Stop icon ③ for 2s, the machine will have a beep sound, indicating that it is currently in child-lock mode. Continue to hold down for 2s, then the machine will beep again, indicating that it has entered the light-off mode. All light of icons will not light up.)
- 2) If the machine is in the child-lock mode, long press the Start/Stop icon ③ for 4s to enter the light-off mode. The machine will have a beep sound.
- 3) Back to the standby mode: Long press the Start/Stop icon ③ for 2s, then the machine will pass to standby mode.


6.2 HOW TO USE THE BY CUP FUNCTION

The function by CUP is dedicate for grinding powder for: Pour Coffee - Drip Coffee - French Press. You can choose from 1 to 14 cups of coffee as desired by cup function.


△Note: Before first use, clean all parts and accessories. (See “CLEANING AND MAINTENANCE” section).



(1) Assemble the bean hopper ⑥ by match the white arrow “ ▼ ” with the white lock “ 🔒 ” mark in the ring. Rotate the bean hopper ⑥ clockwise to lock it and the grind size ring setting ⑨ can be adjusted.

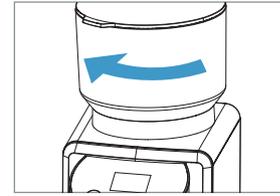


△ Note: The bean hopper ⑥ can be removed when the icon “ ▼ ” at the bean hopper ⑥ aligns with the icon “ 🔒 ”).

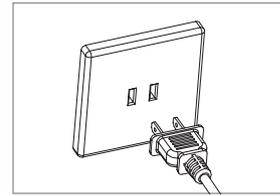


(2) Plug in.




(3) The appliance switch on. (Three icons will be light.) After 2 seconds, the machine will be enter to child lock mode.

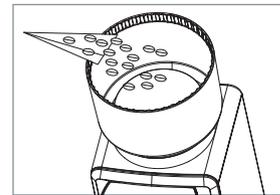


(4) Open the hopper lid ⑤ . Add beans into the bean hopper ⑥ . (The maximum quantity is 8.5oz/240g)

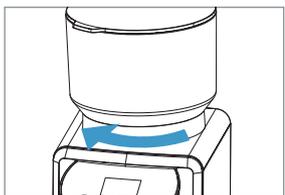


(5) Setting your preferred size by rotate the grind size ring setting ⑨ from 15 to 35 that is the range between Pour/Drip Coffee and French Press.

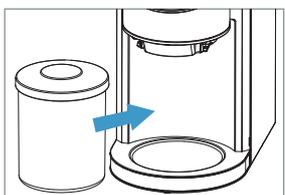


(6) Place the powder chamber ⑩ or portafilter(using the portafilter support ⑫ together) under the ground coffee outlet.

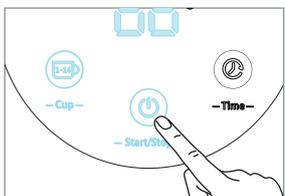

(7) Long press the Start/Stop icon ③ 2s to enter the standby mode. The default function is directly BY CUP.

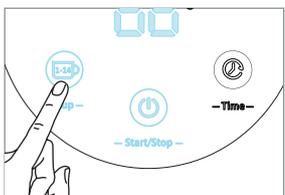

(8) Press the cup selection icon ② to set the number of cups that you need.

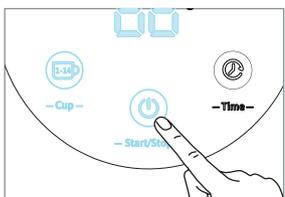

(9) Press Start/Stop icon ③ to start grinding. Then the machine will count down the cup number automatically. If you want to pause halfway, press the start/stop icon ③ to stop.

(10) Wait the machine grind the beans. The grinder stop to grind automatically when finish the setting cup. The machine will also have a double beep.

(11) Remove the powder chamber ⑩ . Your coffee powder is ready now.

(12) Long press the Start/Stop icon ③ for 2s to enter into the child lock mode quickly.(If there is no operation after 5 minutes, the appliance will pass to child lock mode.)


△Note: The grinder can grind from 1 to 14 cups. The default setting is 8 cups. Touch the Cup selection icon ② to set the number of cups, single touch increase just one cup, long press have the fast increase.

6.3 HOW TO USE THE BY TIME FUNCTION


△Note: Before first use, clean all parts and accessories. (See “CLEANING AND MAINTENANCE” section).




(1) Assemble the bean hopper ⑥ by match the white arrow “ ▼ ” with the white lock “ 🔒 ” mark in the ring. Rotate the bean hopper ⑥ clockwise to lock it and the grind size ring setting ⑨ can be adjusted.

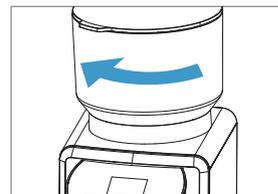


△ Note: The bean hopper ⑥ can be removed when the icon “ ▼ ” at the bean hopper ⑥ aligns with the icon “ 🔒 ”).

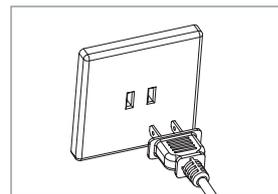


(2) Plug in.

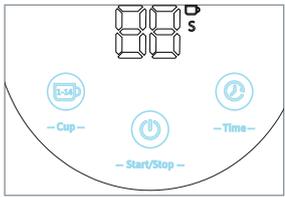


(3) The appliance switch on. (The Cup selection icon ② , Time selection icon ④ , and Start/Stop icon ③ will be light.) After 2 seconds, the machine will be enter to child lock mode.

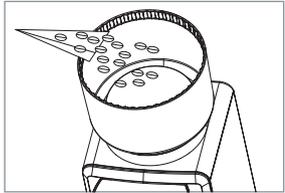


(4) Open the hopper lid ⑤ . Add beans into the bean hopper ⑥ . (The maximum quantity is 8.5oz/240g)

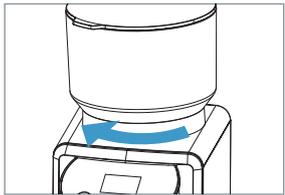


(5) Setting your preferred size by rotate the grind size ring setting ⑨ from 15 to 35 that is the range between Pour/Drip Coffee and French Press.

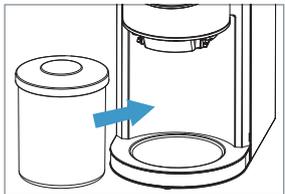


(6) Place the powder chamber ⑩ or portafilter(using the portafilter support ⑫ together) under the ground coffee outlet.

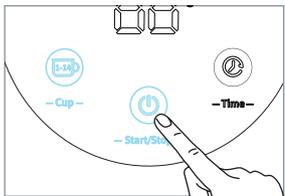

(7) Long press the Start/Stop icon ③ 2s to enter the standby mode. The default function is directly BY CUP.

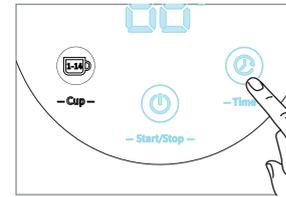

(8) Press the Time selection icon ④ to set the second of the grinding function as you want.

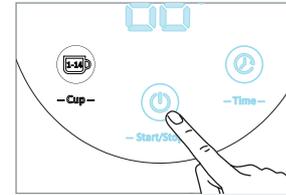

(9) Press Start/Stop icon ③ to start grinding. Then the machine will count down the second automatically. If you want to pause halfway, press the start/stop icon ③ to stop.

(10) Wait the machine grind the beans. The grinder stop to grind automatically when finish the setting cup. The machine will also have a double beep.

(11) Remove the powder chamber ⑩ . Your coffee powder is ready now.

(12) Long press the Start/Stop icon ③ for 2s to enter into the child lock mode quickly.(If there is no operation after 5 minutes, the appliance will pass to child lock mode.)

△Note: 1. The grinder can work from 1 to maximum 60 second. The default setting is 25s. If we touch time by time (the Time selection icon ④), single touch increase just 1 second every time, long press have the fast increase.


2. The function by TIME is particularly indicated for grinding powder for Espresso, because the perfect combination between the fine setting of the size and the detailed setting about the time (1 second by 1 second) can allow the users to combine the two parameters for the best final result of powder for brew the correct espresso.

7. CLEANING AND MAINTENANCE


7.1 DAILY TIPS FOR CLEANING AND MAINTENANCE

- 1. Unplug the coffee grinder before cleaning.
- 2. To avoid damage, never wash or immerse the main body of coffee grinder, conic burr ⑧, or power cord in water, or place in the dishwasher. Because if it is not dry well, the water have a strong bad effect in the grinder function. Never match water with the grinder!
- 3. If you want to try a new kind of beans or a different kind of roasting, please remove the previous beans and also remove all residual powder inside.
- 4. If you plan to not use the grinder for a long time, so before storage, the grinder is better to remove all the beans and clean all residual powder inside.
- 5. Wipe the main body of coffee grinder with a soft, damp cloth. Dry thoroughly with a soft dry cloth.


7.2 THE STEP OF OPERATION

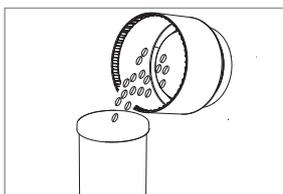


- (1) Open the hopper lid ⑤, then take out the beans from the bean hopper ⑥.

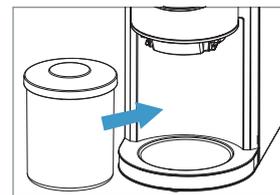


- (2) Place powder chamber ⑩ under the powder outlet. Assemble the bean hopper ⑥.

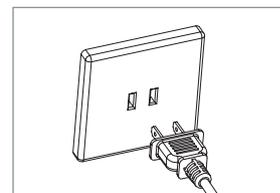


- (3) Plug in.

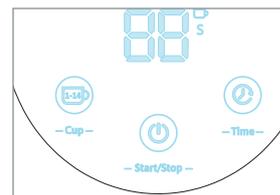


- (4) The appliance switch on. (The Cup selection icon ②, Time selection icon ④, and Start/Stop icon ③ will be light.)

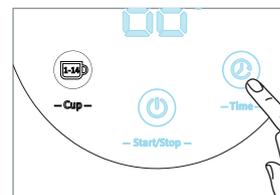

- (5) Setting a long time grinding to remove completely all the beans and the powder on the bean hopper ⑥.

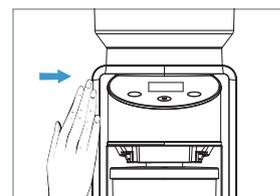

- (6) After finish to grinding all the beans, beat the front part of the grinder carefully and softly to help drop all the residual powder. Then remove the powder chamber ⑩.

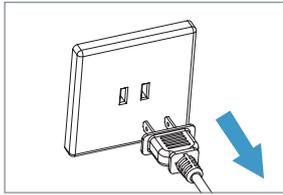

(7) Unplug the coffee grinder.



(8) Disassemble the bean hopper ⑥ . Take the brush ⑭ from the hopper lid ⑤ .



(9) Remove the inside conic burr ⑧ , and also remove the silicone ring.



(10) Remove all residual parts of beans and powder with brush ⑭ .

△ WARNING: It's very important for the cleaning only use the brush ⑭ .


(11) Clean the silicone ring carefully.




(12) Brush the inside cavity and be careful of the front powder dropper.



(13) Clean the full outside surface with a dry cloth.

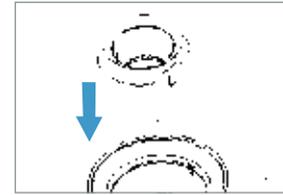

(14) Assemble the conic burr ⑧ and silicone ring in the grinder. (Make sure white dot match with a white line in the Grinder.)

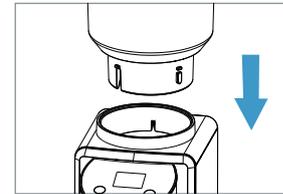

(15) Assemble the bean hopper ⑥ by match the white arrow with the white lock mark in the ring and rotate.

(16) Now the grinder is clean and ready for use again with new or different beans, or is possible storage for long time not use.

8. TIPS FOR PERFECT BARISTA

The following are BARISTA TIPS for use in a best way of the grinder and have the best quality of ground powder:

- 1. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- 2. Grind the bean every time before brew espresso in case you ever used coffee powder. The bean's hopper can allow to keep the flavour of the beans (thankful to the UV Protection design and the lid) for around 1 Week, but we suggest that every time use the beans more fresh that is possible. You must keep the unused coffee powder in a cool, dry place.
- 3. Do not reuse coffee powder since this will greatly reduce the coffee's flavor.
- 4. If we don't use all the ground powder in this moment, keep the ground powder in the powder chamber ⑩ , and close the silicone

cover 11 to keep the flavour.

–5. Tips about the residual powder that is inside the Grinder:

1) If you don't change any setting about size of grinding and time, a good suggestion is, before grinding a new powder, grinding a few second to remove the previous powder that is inside the grinder (from may by one day) and really use only fresh powder every time;

2) If you change the setting of the grinding, and the inside of grinder have some residual powder with different size. (For example if you already grinding for Drip Coffee previously and now you want Espresso, the powder for Espresso require a very fine grinding). So, the best use is, after setting, you need to grinding a few second to remove the previous powder (may be old and for sure not correct size). Now, if you want grinding and use the powder, you have the correct size for the coffee you want actually brew.

9. TROUBLESHOOTING

Problem	Picture	Cause	Solution
The coffee grinder cannot turn on.	/	1.The power outlet is not plugged well.	Plug the power cord into the wall outlet correctly.
		2. Not install the bean hopper 6 or install it incorrectly	Assembly the bean hopper 6 to the coffee grinder before plug in.
		3. Continuous grinding for more than 3 minutes within 10 minutes.	Because the grinder is in protection status, let the appliance rest for 30 minutes to cool down. Or unplug the grinder/take out the bean hopper 6 to exit the protection status.

Problem	Picture	Cause	Solution
Can't grind beans.	/	Some powder stuck in the conic burr 8.	Stop the operation and immediately turn off the coffee grinder. Clean the conic burr refer to “CLEANING AND MAINTENANCE” section for detailed information. If the conic burr 8 is worn, please contact with the authorized service facility for assistance.
The powder not drop well			

Do not take apart the appliance by yourself if the cause of failure is not found, it's better to contact certified serving center.