

AIR FRYER INSTRUCTION MANUAL

GEDFG006TD-U



Dear Gevi customer

Gevi have focused on creating perfect home appliances for our customers. In the past few years, it has taken us time for lots of researches and many prototypes to achieve our goal. We would like to give you different using experience. Thanks for purchasing our Gevi products, you could search from our official website if you would to learn more our product information.

If you want FAQs and more information, here's how we can connect via WhatsApp !



IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage of wall outlet correspond to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquid.
5. The use of accessory not recommended by the manufacturer may cause injuries to persons.
6. Do not touch the hot surface. Use the handle or the button.
7. Do not use the appliance for other than intended use.
8. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Do not leave the appliance unattended when it is being operated.

11. Children should be supervised to ensure that they do not play with the appliance.
12. The appliance must not be immersed.
13. Unplug from outlet when not in use and before cleaning. Allow to cool down before putting on or taking off parts, and before cleaning the appliance.
14. Use special gloves when moving the appliance.
15. Before use, always ensure that the frying tank is positioned correctly.
16. Though the detachable frying tank can be completely immersed in water and clean, it must be thoroughly dried before next use to prevent electric shock.
17. To prevent fire, do not place the appliance close to flammable materials such as curtains, and do not place anything above the appliance.
18. Make sure all papers, cardboard or plastic have been removed before frying food.
19. The appliance can not be used for storing things, especially papers, cardboard or plastic.
20. Always disconnect the appliance from the supply before close the appliance.
21. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

 
22. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

NOTES ON THE POLARIZED PLUG


This appliance has a polarized plug, to reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way, if the plug does not fit fully into the outlet, reverse the plug, if it still does not fit, contact a qualified electrician, do not attempt to modify the plug in any way.

KNOW YOUR AIR FRYER

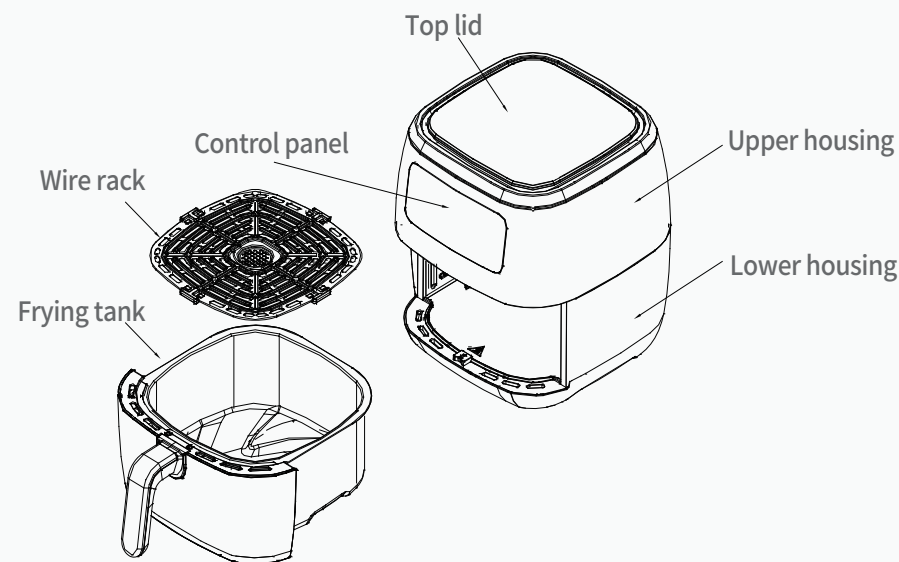

Electrical parameters: 120V ~ 60Hz 1700W

 CONTROL PANEL

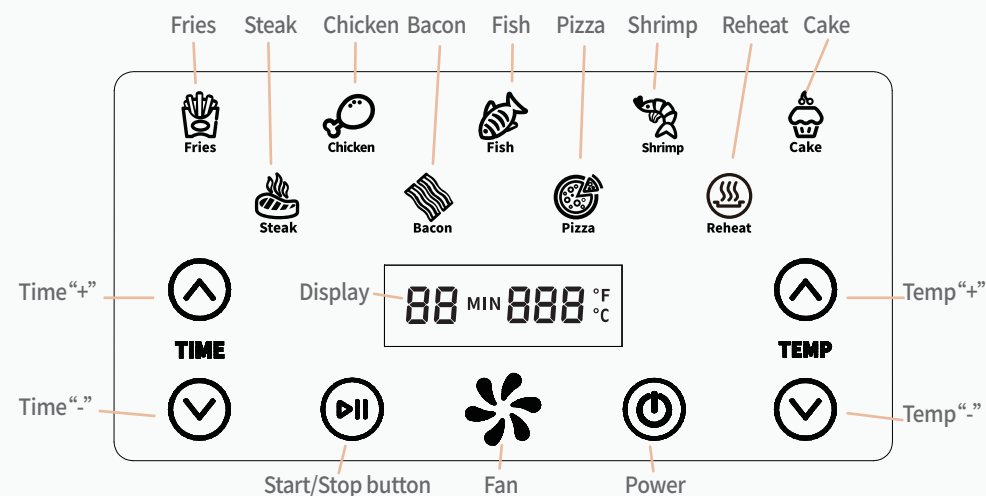

INTRODUCTION FOR MENUS

Menu Functions	Default temperature	Suggested cook time	Food flipping	Adjustable time
Fries	400°F	15mins	Yes	1-60mins
Chicken	380°F	20mins	Yes	
Fish	350°F	10mins	Yes	
Shrimp	370°F	8mins	Yes	
Cake	350°F	15mins	/	
Steak	400°F	10mins	Yes	
Bacon	350°F	8mins	Yes	
Pizza	380°F	9mins	/	

Reheat Function	Default temperature	Suggested cook time	Food flipping	Adjustable time
Reheat	170°F	10mins	/	1-30mins

NOTE: Please flip the food by following the operation as below if necessary.

- **FOOD FLIPPING**

To assure even cooking/browning, move the frying tank out when half of the cooking time is reached, and then check, turn or vigorously shake foods on the wire rack.

• IMPORTANT:

The appliance should be powered off when you take the frying tank out of the air fryer. Reload the frying tank within 15 minutes and the appliance will continue to work .



USING FOR THE FIRST TIME

 

1. Before using the appliance for the first time, remove all the packaging materials, labels and/or stickers from the appliance.
2. Remove all the detachable parts and wash them in soapy water, and then rinse them with clean water and dry them with a clean cloth or paper towel.
3. Assemble all the parts of the appliance well in position and place the appliance on a suitable position. Do not put the appliance in the closet or at a place which is close to the wall.
4. Connect the appliance with power source. When the appliance is used for the first time, odor or smoke will occur, which is caused by the protective film on the heating element. This is normal. So it is recommended that the appliance should work without load for about 15 minutes remove the odor. Please open the door and window and make the room be ventilated when the appliance is used for the first time.

OPERATION INSTRUCTION

NOTE: Make sure all the packaging materials are removed before adding food. The frozen food need to be defrosted. And please immediately cook the food which has been defrosted.

1. Place the machine on a flat surface;
2. Put the wire rack in the frying tank;
3. Put the food on the wire rack;
4. Install the frying tank assembly into the machine
5. Plug in the power
6. This machine has 8+1 functions to select from: 8 menu functions including "Fries", "Chicken", "Fish", "Shrimp", "Cake", "Steak", "Bacon", "Pizza". 1 other function "Reheat". Among them, the "Reheat" function can be used alone or combined with any other menu functions.
7. Select any functions by pressing the function icon directly, the selected function icon will flash, and the screen displays its the default time and temperature. If you want to adjust the time and temperature, press "TIME ⬆️⬇️⬆️" and "TEMP ⬆️⬇️⬆️" to set your demand time and temp directly. You can long press the "TIME ⬆️⬇️⬆️" and "TEMP ⬆️⬇️⬆️" to increase or decrease the adjustment.
8. The "Reheat" function can be combined with any menu functions before or during the operation. When the "Reheat" function is combined with any menu function, both the




"Reheat" icon and the selected menu function icon will flash at the same time. (e.g. You want to make Fries combined with Reheat function, both the " Fries" and "Reheat" icons will flash). And the screen flashes to display the default time and temperature of the Reheat function, touch "  " and "  " to adjust the time and temperature as soon as possible. If without any adjustment, the screen will changes to display the menu function (e.g. "Fries" function) time and temperature after 5 seconds.

9. Press the Start/Pause button "  " to start operation, and the “  ” Wind icon will start to show up and rotate;

10. There are 2 ways to pause during operation.

1) Pull out the frying tank directly and then reinsert it without pressing any buttons. The machine will continue to operation after reaching the required temperature.

Note: You should reinsert the frying tank no longer than 1 hour, otherwise the machine cannot continue to operate your last menu function.

2) Touch the Start/Pause button "  ", the machine will stop working. Press the Start/Pause button "  " again to continue the operation. If you need to end the operation advance, press the Power button "  ".

11. When the operation is over, the screen will display OFF and there will be a buzzer prompt, when the fan stops running, the display will return to the default state.
12. After use, please unplug the plug.

DEFAULT STATE

1. Control panel: There are 8+1 function icons, Power and Start/Pause button lit.
2. Screen display: off.

SLEEP MODE

1. When plugged in the machine and press the Power button, if there is no operation within 15 minutes, the machine will get into sleep mode. Only remaining the Power button is on.
2. Press the Power button to wake up the screen.

MEMORY FUNCTION

1. After adjusting the time and temperature of any functions, the machine will remember the adjustment.
2. When the frying tank is pulled out during operation (less than 1 hour), then inserted into the frying tank, the machine will remember the function/temperature/remaining time before pulling out, and will continue to run after reaching the preset temperature.

3. Restore the default settings: Long press one of the function icon to restore the original default time and temperature.

SWITCH TEMPERATURE UNIT

When selected one of the function, press and hold the “up” and “down” buttons of TEMP at the same time to switch between °F and °C. The default unit is °F.

CLEANING AND MAINTENANCE

1. Unplug the appliance and allow it to cool down thoroughly before cleaning. Clean all accessories such as wire rack and frying tank by hot water with detergent.
2. Immerse the wire rack and frying tank into the water for cleaning thoroughly. Do not use a abrasive cleaning tool to clean, otherwise, the coating on the surface will easily fall off.
3. Clean the inner wall of the appliance regularly. Gently wipe off the oil with a warm cotton cloth, then dry it with a dry cloth.
4. Never immerse the appliance into water for cleaning.
5. Do not clean the frying tank with any metal tool to avoid its surface coating being damaged.