ZEROXCLUB

Installations manual & Owner's Guide



ZEROXCLUB Wired Camera System Model # BY702A

Any questions or suggestions please send an email to customer service via sales@uszeroxclub.com

Ī

Before Using

Make sure you have the following listed items included in the packaging. If any item is damaged or missing, contact us at sales@uszeroxclub.com. It would be better if you wrote the order number from Amazon include photos of the damaged or missing part in your email, so that we can handle the problem much more quickly.

What's in the box



Test the System

To ensure that all components are working properly, please test the system before installation.

- 1. When the monitor is powered, the indicator light and buttons will light to indicate that the monitor is on and ready to work.
- 2. Perform a system function test by temporarily connecting the system. Test camera, monitor, and all functions of the monitor system. If the system seems to not be operating properly see troubleshooting or contact our customer service at sales@uszeroxclub.com.

Table of contents

Before L	Jsing	.II
Test the	System	Ш
1. Safety	Information	.1
2. Install	ation	. 1
2.1 Insta	Illation Safety Precautions	.1
2.2 Wirin	ng	. 1
2.3 Moni	tor Installation	. 3
2.4 Cam	era Installation	. 4
2.4.1 Rea	ar Camera	4
2.5 Cam	era-Cables Installation	5
2.6 Testi	ng the System	6
3. Opera	tion	. 7
-	rate the Monitor	
3.2 Oper	rate the Mini Remote Control	.8
4. Displa	ay Settings	9
4.1	Move Mode	9
4.2	Still Quality	
4.3	Clock Settings	L 2
4.4	Media Tool	L3
4.5	General Settings	L3
	eshooting1	
7.Warranty21		

1. Safety Information

Incorrect installation can cause personal injury or property damage. For assistance contact **ZEROXCLUB** customer service.

NOTE: Handle all components with care. Inspect regularly for damage to components and cabling.

NOTE: Do not apply excessive force to any of the components contained within this kit. Excessive force used before, during or after installation that will result in damaged or non-functional parts.

- Do not disassemble or attempt to repair any part of the camera system.
- There are no user-serviceable parts inside the ZEROXCLUB camera system. Contact ZEROXCLUB customer service at sales@uszeroxclub.com if the part is ever compromised
- Children should be supervised to ensure that they do not play with the appliance.
- To avoid an electrical shock hazard, relevant actions should be performed by qualified and certified professionals. Disconnect all sources of power to the camera before installing.
- To reduce the risk of fire, NEVER test when smoking. Never use a flame.
- Use this product within the voltage range specified. Failure to do so can cause electronic shock or product malfunction.
- •Where the power cable may touch a metal case, cover the cable with a friction tape. A short circuit or disconnected wire may cause a fire.
- •Do not install the monitor where it may obstruct drivers view or obstruct an air bag device.
- •Do not operate the monitor while driving, as it may cause an accident.
 - Dropping the unit may cause possible mechanical failure.

2. Installation


2.1 Installation Safety Precautions

- Ensure the power supply circuit has circuit protection
- Connect the rear camera to a 12-14V DC circuit only
- Use insulated tools when working with power supply
- · Use correct safety equipment when working at elevated levels
- Ensure correct polarity of 12V DC power supply to the camera.

Red = Positive.Black=Negative.

- Do not allow water to enter the LCD Display.
- Excessive heat can be caused by a loose connection.

2.2 Wiring

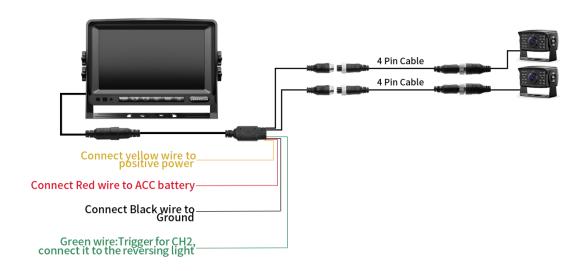

The wiring method when product use, as follows:

(1) Connect the Yellow wire to positive power(12-24V)

NOTE: The Yellow wire needs to be powered for a long time. If the Yellow wire has no power, the system will lose all the settings you made on the screen. We recommend that you connect the Yellow wire to the (+) positive terminal of the car's battery so that the

system can save the settings and you will not have to reset them the next time the system is enabled.

(2) Connect the **Red** wire to ACC

The **Red** wire is connected to the car ignition wire ACC switch (which is the gear switch before starting up the car's motor), when the car key is turned on, the device will start automatically, and if the vehicle key is turned off, it will automatically turn off.

- (3) Connect **Black** wire to negative power/ Ground / Sheet Metal
- (4) Connect Green wire(CH2 trigger) to reversing light.

NOTE: This **Green** wire is used to trigger CH2 to display the reverse guideline. If the system as a continuous observation use, please ignore this wire and connect the camera to CH1. If as a reverse viewing with parking guideline only, please connect this wire to the reverse trigger ACC circuit and connect the camera to CH2.

NOTE: Connect the **Green** wire, the buttons on the display will be locked and cannot be operated, so please complete the screen operation before connecting the **Green** wire.

The wiring method when product test, as follows:

- (1) Connect Yellow wire and Red wire together to the positive power (12-24V)
- (2) Connect Black wire to Ground
- (3) Ignore the Green trigger wire

NOTE: Connect the **Green** wire, the parking guide lines will appear. If you don't need it, ignore this the **Green** wire.

^{*} Before installing it by professional person, please test it if works well, like image display,

just in case and save your precious time. Please contact **ZEROXCLUB** Customer Service at **sales@uszeroxclub.com** if you have any question Anytime.

2.3 Monitor Installation

U Bracket Installation

1.Put on the	②Adjust the	⊚Take out all the
sunshade as the	sunshade	tools
blue dotted line		
④Put the bracket on	⑤ Align the screw	⑥ Fix or adjust the
the fixed directions	holes	screen angle and
as the blue dotted		screw on the knob
lines shows		bolts

Suction Cup Mount Installation:



2.4 Camera Installation

2.4.1 Rear Camera

The camera comes equipped with an adjustable flat mount base. You can adjust the lock-screws on the sides of the camera to adjust the lens of camera with a small Phillips screwdriver. A short 4 -pin aviation video cable is attached to the body of the camera.

Mark camera mounting position. Screw on according to the mark. Tighten the screws on both sides of the camera. Adjust the camera angle as needed.





2.4.2 Adjust the Camera View

- You can use the camera mount to mark where to drill holes which is wide enough for the 4 pin connector.
- Adjust the camera to the correct angle as needed. The camera should be adjusted to a horizontal position relative to the ground in order to provide the best view of the objects behind the vehicle.
- •When the preferred view for each camera is obtained, tighten the screws to prevent the camera angle from deviating due to vibration during driving.

NOTE: One important thing to note here is that the camera should face backward and that its view is not obstructed in any

way. You should also make sure that the camera sits properly, and that a simple car bump or jerk, will not loosen it in any way. The third caution is making sure that the installation spot is not too far away and that it fits the cable length.

2.5 Camera-Cables Installation

- Define the routing of each of the camera cables. Connect the camera cable to the extension cable provided in the system (you can coil up the unused part if you need shorter feet), and run the extension through the car to the dash area.
- Connect the extension wire to 4pin plug from the monitor. All the cables you will need will come provided in the backup camera kit.
- Do not pull aggressively on the connector head of the cable when you are routing the cables though channels or tight spaces as this may damage the fine wires in the cable. Use a fish tape to thread the cables though these areas. Tape the cable securely to the fish tape to distribute the load when the tape is pulling the cable though the tight spots.
- When you install the 4pin cable, please target every pin to the hole, avoid breaking the pin. When the system is set-up the cables may now be properly secured and stowed.
- Align the detent channel and the 4 pins to the 4 holes, then push the connectors together. Screw the collar into position.



4-Pin Aviation Video Cable

- After connecting the wires, pay attention to the insulation between the power cables to prevent the power cables from short-circuiting the battery.
- Use plastic split-shield cable covers where appropriate to protect the cables in open areas.
- Secure the cables using adhesive 3M type ¼" cable clips and/or

zip ties.

- You may have surplus cable length remaining in your installation. If this is the case, find a convenient place to bundle the cable with zip ties and securely hide it out of site. We do not recommend shortening the cable by cutting and rejoining it.
- You should also make sure the monitor only starts after ignition, so that you can preserve your battery. You can find the corresponding connection for the fuse box according to the manual for your car and model.

NOTE:

- 1) Before connecting, you need to confirm that the voltage of the battery is between 12-24V.
- 2)Rear cameras are usually powered by the reverse lights.

This makes them more convenient to use as the monitor and the camera will automatically turn on when you shift the gear into reverse.

2.6 Testing the System

If you are using a car charger, simply start the ignition and the camera will be activated. If you are using a DC Power Pigtails Cable, you will also need to change to reverse gear and your backup camera image should come on.

NOTE: If there are any issues, then do not panic. Slowly check every single connection, and make sure that everything is correct. Make sure that the red/positive ends of a cable connect to red/positive on other cables, and that black/negative connects to

black/negative as well. Also, check the power sources to make sure that they are correctly connected, and that no fuse has blown.

Conclusion

If you strictly follow this backup camera installation guide and all goes well, then your backup camera system should be correctly installed and fully functional.

3. Operation


3.1 Operate the Monitor



①POWER	A power button turns the display device on or off.	
24	A Up/Increase button. Select forward in display	
	operation	
3√☆	A Down/Decrease button. Select backward in display	
	operation.	
4CH	A Channel Switch button.	
5MENU	A Menu/Return button. Press to access menu or return	
	to the previous panel.	
⑥SEL	A Confirm/Recording button. Press to confirm the	
	option or to star/stop recording or to start/pause	
	playback file.	
⑦IR	IR Connector	


3.2 Operate the Mini Remote Control

The system comes with a mini remote control, only need to unplug the transparent plastic sheet at the bottom, you can use it.

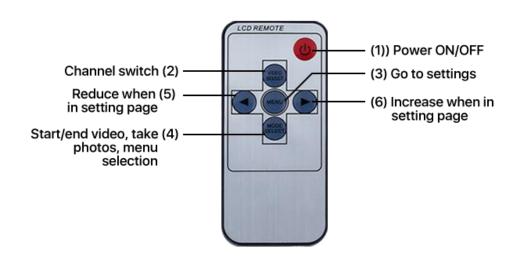

4. Display Settings

Display settings allow you to adjust various aspects of your display to ensure that the display works well with your camera.

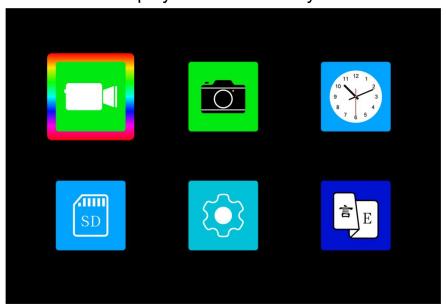

NOTE: If the screen is recording, please stop recording firstly, otherwise it can't enter the menu panel. (Press **SEL**, then the red dot on the display disappears, which means recording has stopped.)





Press **MENU** \rightarrow Go into the **Move Mode** \rightarrow **SEL** \rightarrow + \diamondsuit (Skip to next option)//- \diamondsuit (Back to the previous option) \rightarrow **SEL** (confirm) \rightarrow + \diamondsuit /- \diamondsuit


(Increase/ decrease)→**MENU** (Back to the previous panel)

- (1) Movie Quality: Super Fine/Fine
- (2) **Movie Clip Time**: Off/ 1min/ 2min/ 3min/ 5min/ 10min

 Time per recorded video file. If you choose "Off", then the system will keep recording a long video until you stop or power off it.
- (3) **Movie Off Time**: 0min/ 5sec/ 30sec/ 1min/ 3min Recordable time for the screen when the engine is off.
- (4) Auto Record: On/Off

If turn it on, the screen will automatically record when it is turned on.

- (5) Sound Record: (Please ignore this function. In order to make our camera more robust and waterproof, the camera doesn't have a built-in microphone, so our system cannot record sound. Thanks for your understanding.)
- (6) **To Movie Playback:** You can go to the playback panel and see the recorded video files.

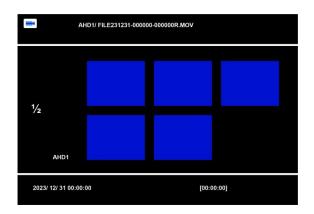

You can switch to the AHD1 or AHD2 video playback panel by

pressing the **CH** button.

Under the AHD1/AHD2 video playback panel, press +☆/-☆ to select the video to be played and press **SEL** to confirm.

During video playback, press +☆ to speed up playback, press -☆ to rewind.

Note: Press **MODE** button to play/pause the recording video.

When in playback panel, press **MENU** to pop up the playback setting window, you can choose to delete file, protect file, switch back to the monitor page.

panel.



Delete: Delete one/ Delete All

Protect: Prevent accidental deletion of video files.

To Preview Mode: Exit the current panel





Press **MENU** \rightarrow Go into the **Move Mode** \rightarrow **SEL** \rightarrow + \Leftrightarrow (Skip to next option)//- \Leftrightarrow (Back to the previous option) \rightarrow **SEL** (confirm) \rightarrow + \Leftrightarrow /- \Leftrightarrow (Increase/ decrease) \rightarrow **Menu** (Back to the previous panel) \rightarrow Until last complete set

(1)Still Quality: Super Fine/Fine

You can choose the quality of photo

(2)To Photo Playback: Same as "To Movie Playback"



Change the Date and Time.




Press **MENU** \rightarrow Go into the **Clock Settings** \rightarrow **SEL** \rightarrow + \diamondsuit /- \diamondsuit (Increase time/ decrease time) \rightarrow **SEL** (confirm and go to the next

date/time settings)→Until last complete set

NOTE: Press the MENU button once to return to the menu, press twice to return to the camera view.


NOTE: In this panel, the SEL button is a button that moves to next option.

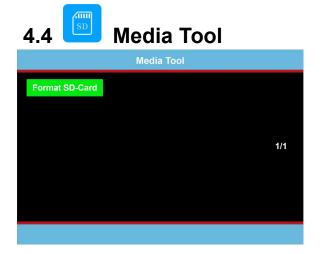

Press **MENU** →Go into the **Media Tool**→**SEL**→+☆/-☆→Yes/No **Note**: Make sure you have saved the important videos to the computer when you use this.

4.5 General Settings

More advanced display settings are available in the General Settings" panel.

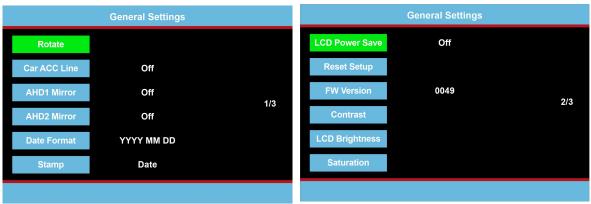



Press **MENU** →Go into the **General Settings**→**SEL**→**+**☼ (Skip to next option)//-☼(Back to the previous option)→**SEL** (confirm)

(1) **Rotate**: This will rotate the image and the text will also rotate. If you accidentally use it and flip the screen and text, please select this option and press the **SEL** button several times, it will return to the original normal screen.

(2) Car ACC Line: On/Off

NOTE: Only the AHD2 screen will be triggered for full screen with Parking Lines through Green wire.

NOTE: We recommend you connect the Green wire to the reverse light, then CH2 screen can be triggered with parking lines to help you reversing.

(3) AHD1 Mirror: On/Off

The AHD1 image can be set Mirrored with this function.

(4) AHD2 Mirror: On/Off

The AHD1 image can be set Mirrored with this function.

- (5) **Date Format**: None/YYYY MM DD/ MM DD YYYY/ DD MM YYYY
- (6) **Stamp**: This feature is not yet active, please ignore

(7) LCD Power Save: Off/ 1min/ 3min

The screen will automatically turn off at the set time.

If set to 1 min, the monitor will standby after 1 minute when no operation is performed.

(8) Reset Setup: Yes/ No

If yes, all setting will be deleted

(9) Contrast: Adjust the Contrast to the desired level.

(10) **LCD Brightness:** Adjust the brightness to the desired level.

(11) **Saturation:** Adjust the Saturation to the desired level.

(12) Color Temp: Off, Warm, Cool. The default is Off

You can select the screen color temperature according to your habit

(13) **VCOM DC:**It can change the brightness of the screen. It is "40" by default. And we don't recommend you to change this parameter.

4.6 Language

You can switch language to English/ Russian/ Chinese(Simplified)/
Chinese(Traditional)



Press **MENU** →Go into the **Language Settings**→**SEL**→**+**☼ (Skip to next option)//-☆(Back to the previous option)→**SEL** (confirm)

5.FAQ

- (1) How to return interface while viewing the file?
- A. 1.Automatically return to the playback panel after video playback ends.
- 2. Press the Menu button, then choose "**To Preview Mode**" and it will back to the monitor page.
- (2) How to rotating the image ?A.Menu-General Setting "Rotate" or "AHD1/AHD2 Mirror".
- (3) How to record video?

A.Press the **SEL** button, then the red point will come that means the monitor recording.

- (4) Why monitor can't use the menu and switch channel?
- A. When you want to operate the screen buttons, make sure that the monitor does not stay in the recording state, and that the green cable is not triggered.
- (5) What is the function of Trigger wire?

A. If you connect the trigger cable to the reversing light, the screen will automatically switch to the camera that connected to the reversing light when you reverse.


You don't need to manually switch to the camera channel.

(6) How to find the SD card video on the computer?

A: Plug and play. Using a card reader that can read SD cards then plug it to your computer.

(7) How to view in split screen?

A.Press the CH- button

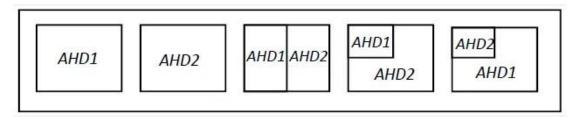

(8) What is the part number of the single camera?

A: The rear camera is B0BG7Z3Z47, and side camera is B0BG7Z3Z47

6.Troubleshooting

The display will not turn on

- Check 12v+ to monitor and check the display to ensure that it is powering. (the power indicator LED lights is on/off)
- 2. Check if the power button on the display will turn on the light. and press the monitor's power button waiting 2-4 seconds then to see if there is any image?
- 3. If use the DC power pigtails cable, check if the positive and negative connections are reversed when connecting the red and black wires. If

use the car charger, check this one is normal. 4. Check ground connection. Ensure the cables and connections in your backup camera are firmly connected and not damaged 5. Check the pins of the 4 pins cable of the camera if is aligned and broken. If the pins are awkward, you can gently straighten it, then the camera will work well. 6. Check this product within the voltage range(12-24V) specified. 7. Could you please check the camera that if get power? You can hold the sensor of the camera with your hand and see if the infrared light will light up. 8. If it still can't work well after try, please contact in time us at sales@uszeroxclub.com with the picture of the issue and your Amazon Order ID. Blurry camera 1. Check the external lenses. Fix this by simply wiping off the dirt. 2. Check if there any loose or faulty connections triggering such mishaps. 3. There is moisture inside the camera's lenses, please contact us in time at sales@uszeroxclub.com with the

	picture of the issue and your Amazon Order ID.	
Have a problem with SD cards error	Remove current micro SD card a	
	installed a different micro SD card to see in	
	the system has the same problem.	
	If not, there may be a problem with the SD	
	card. Please email us at	
	sales@uszeroxclub.com for a replacement	
Blue on monitor	SD card.	
screen	1. Do a hard reset, unplug all cables, leave them out for 1 minute, and then	
	re-connect them.	
	2. Check to ensure that the connection to	
	the camera is tight.	
	3. Ensure camera cable is plugged into	
	port labeled CH1/CH2.	
	4. Ensure that the car charger or the red	
	positive trigger on power pigtails cable	
	is put to power 12v+.	
	5. If it still can't work well after try, please	
	contact us in time at	
	sales@uszeroxclub.com with your	
	Amazon order ID and the issue picture,	
	we will help you solve it.	
The screen appears color cast or line	Check the wiring firstly.	
	2. If there is still no improvement, maybe	
	the screen has been subjected to some	
	collision during transportation or use,	
	please contact us in time at	

		sales@uszeroxclub.com with the
		picture of the issue and your Amazon
		Order ID
The picture flashes frequently	1.	Check the wiring firstly, or change
nequentry		another camera for testing, or switch
		the screen for another viewing mode,
		to see whether it still flashes or not.
	2.	Remove the micro SD card and see if
		there is flickering.
	3.	Check if the voltage is stable and keep
		at 12V+
	4.	If there is still no improvement, maybe
		power cord gets wrong during use,
		please contact us in time at
		sales@uszeroxclub.com with the
		picture of the issue and your Amazon
		Order ID
The monitor shows	1.	The monitor enters parking mode,
parking lines and the buttons can't work		please disconnect the Green wire for
buttons can t work		try. (Under parking mode, other buttons
		will be locked and can't be used for
		safety.)
	2.	If it still can't work well, please contact
		us in time at sales@uszeroxclub.com
		with your Amazon Order ID
<u>i</u>		

If you have any questions not mentioned above, just feel free to email us at sales@uszeroxclub.com. We're always there for you!

7.Warranty

ZEROXCLUB offers a full 18 months warranty and replacement policy. We also provide lifetime technical support to ensure that you

enjoy your modern backup camera for many years to come. To

obtain warranty support, or if you are not satisfied in any way, or

have any issues with your purchase, please contact us first for help,

we will try our best to make you satisfied. We promise that you will

receive the best service from us, and we will try our best to help you

until your problem is solved. Every message will be replied to within

24h. Our contact email is sales@uszeroxclub.com, you can write

it down or add it to your address book.

ZEROXCLUB

Customer Support email: sales@uszeroxclub.com

21