

Trouble Shooting

If You Have Problem Operating this Product, Please Refer To this Section. The Most Common Problems are Listed Below. Along With Likely Cause and Solutions.

Monitor No Power

- Car Engine Has Not Been Started. Start the Car Engine.
- Incorrect Wiring Connection. Check the Wiring.
- Monitor Power is Off in Default, Press Power Button on Monitor to Turn on.

Camera No Power

- Car Engine Has Not Been Started. Start the Car Engine.
- Make Sure Monitor Has Power Firstly.
- Incorrect Wiring Connection. Check the Wiring.

Not Showing Color Image In Monitor

- Make Sure Monitor Setting Right, Go Menu to Find Setting For -System, Make Sure It is NTSC US TV System.
- Find one Place Which Have Good Light or Test It again In Day Tim

Note

If you encounter the following:

1. When opened, it is found to be defective or missing parts;
2. You don't like it when you received;
3. Need technical support and help during the installation process;
4. After completed installation, found it can't work properly;
5. Camera or monitor gets accident during use;
6. Any other after-sales problems that need help.

Please contact us in time, we promise to provide you with the best service and technical support, and help you solve the problems. This is our contact

Email: susanjiying@hotmail.com (24 hours online)

You can write it down if you need, please feel free to contact us!

ZEROXCLUB

Email : susanjiying@hotmail.com

Contact Person : Susan

Warranty : 1Year Factory Warranty

ZEROXCLUB

OPERATING INSTRUCTIONS&INSTALLTION GUIDE

7" Pillow TET-LCD Color Monitor



ERY01


**Before Operating This Set
Please Read These Instructions Completely**



- 1
- 2
- 3
- 4
- 5
- 6


Monitor and Camera

1. Power: Press Power On and Off.
2. Function Up: Press To Increase When In Menu Setting.
3. Function Down: Press To Reduce When In Menu Setting.
4. Video Switch: Press to Change From V1 To V2.
5. Menu: Press to Go In Function Setting Page.
6. Picture Rotation: Press to Make "Upside Down or Normal"

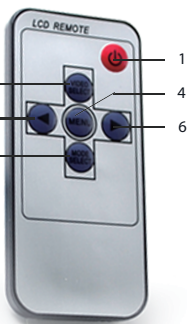

Remote Controller

1. Standby: Press Power On and Off
2. Video Switch: Press to Change from V1 To V2
3. Function Down: Press To Reduce When In Menu Setting
4. Menu: Press to Go in Setting Page
5. Mode Switch: Press to Choose Different Zoom 16:9 or 4:3
6. Function Up: Press To Increase When In Menu Setting

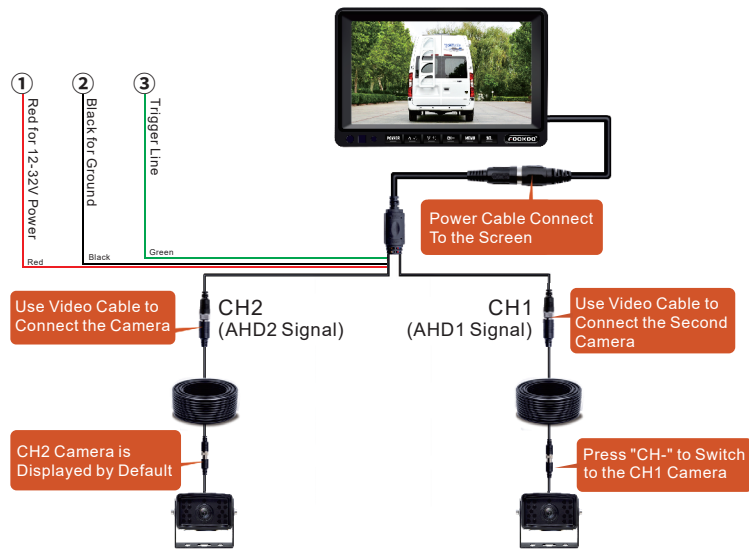

* If you connect the camera to CH1 but you don't see the picture (no signal), press "CH-" to switch the camera. (Because the system displays the CH2 camera by default.)

* The system will remember your settings and no need to set it again next time you use. But the settings of each camera are not universal. (when you connect two cameras)

Installation Guide

- A: Want camera working when in reversing only
 1. Red power cable connect to reversing switch
 2. Black to Ground , meet metal
 3. Ignore the blue wire or connect this blue wire same to the reversing switch as the red wire .
- B: Want camera working once start the car
 1. Red power cable connect to ACC or Battery to get continues power
 2. Black to Ground , meet metal
 3. Ignore the blue wire