

Moment 5M User Manual



PACKING LIST



Moment 5M



Waterproof Housing



Clip 1



USB Cable



Bicycle Handlebar



Tripod Mount Adapter



Short Connector 1



Short Connector 2



Long Connector



Helmet Belt



Battery x2




Helmet Mount x2


MOUNTING



PRODUCT OVERVIEW

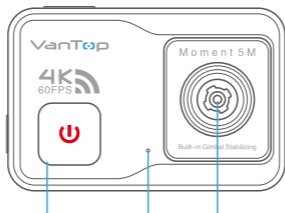


Power/Mode Switch Microphone Lens

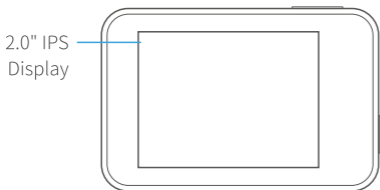

2.0" IPS Display


[Red] Charging Indicator

[Blue] WiFi Indicator

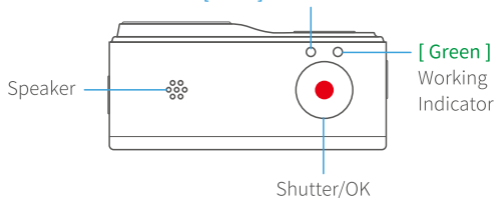


[Green] Working Indicator

Shutter/OK

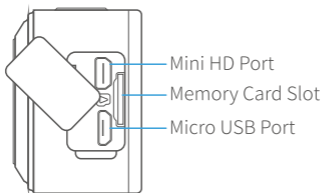

Multi-function Button

- ① Long press to turn on/off WiFi.
- ② In video/photo mode, short press to enter **Video/Photo Settings**.
- ③ Short press to move to next option in Settings.
- ④ In media gallery, long press to bring up the deletion options.

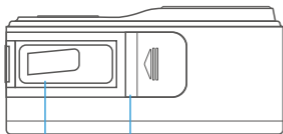

Battery Battery Door



SAFETY WARNINGS

Please be sure to observe the following warnings, as batteries contain flammable substances which may cause heating, rupture or ignition.




- * Keep batteries out of reach of small children.
- * DO NOT dispose of the action camera or the battery in fire.
- * DO NOT use or charge a battery if it shows any sign of swelling, pierced, or damaged. Misuse or mischarge may lead to smoke or even explosion.
- * DO NOT expose the battery to any heat source, direct sunlight or high temperature.
- * Please don't leave battery pack and charger on the wood material or carpet and unattended.
- * Make sure the charging voltage should not exceed 5V and the charging current should not exceed 1A.
- * Only use the ORIGINAL power adapter provided to charge the battery.
- * Remove the battery from the charger once charging is completed.
- * Charge & store the battery in an open and dry area away from furniture or anything flammable.
- * The Li-ion battery in the action camera should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household waste.
- * Dispose of the battery according to your local environmental laws and regulations.

FUNCTION OVERVIEW

Switching Interfaces

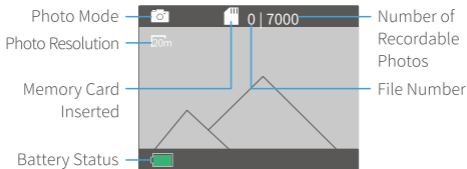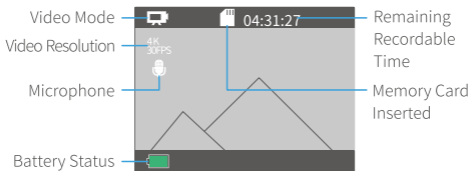


Photo/Video Settings

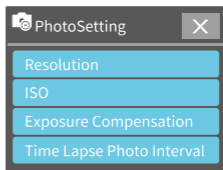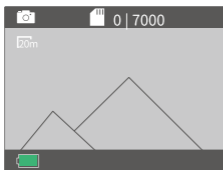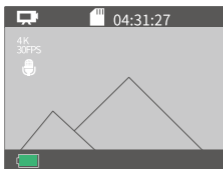

APP

Search **ismart DV** from APP Store/Google Play or scan the QR below to download and install.

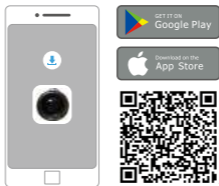



WiFi Connection

1. Long Press
2. Find WiFi Moment 5M in your mobile device's WiFi settings, then input password 12345678 to get connected.
3. Launch the app on your mobile device.

SPECIFICATION

Sensor	IMX258
Display Screen	2.0" IPS LCD
Display Resolution	320*240
Speaker	0.5W
Waterproof	100ft with Waterproof Case
EIS	2-Axis Gimbal Stabilizing
Working Temperature	0°C~40°C
Storage Temperature	-20°C~70°C
Video Codec	H.264
Video Format	MP4
Video Resolution	4K@60fps/30fps/2.7K@30fps/ 1080P@60fps/30fps/ 720P@120fps/60fps/30fps/ VGA/30fps
Photo Format	JPEG
Photo Resolution	20M/14M/10M/8M/5M/2M
Extendable Storage	Up to 128GB (Memory Card Not Included)

MAINTENANCE

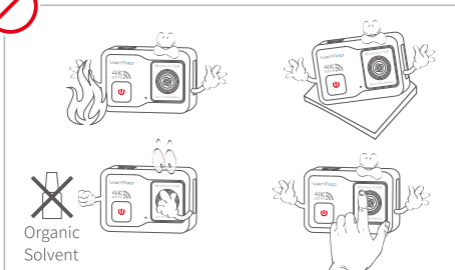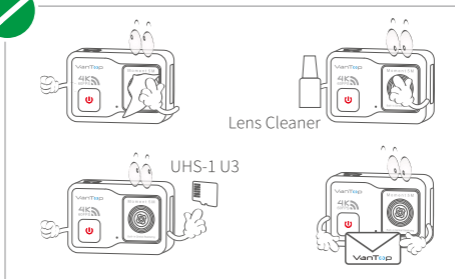



NA support@vantop.com

UK support.uk@vantop.com



www.vantop.com



[@vantopofficial](https://www.facebook.com/vantopofficial)



[@vantop_official](https://www.instagram.com/vantop_official)