


SUPRENT
Haircare, We Care

This manual tries to keep the accuracy and rigor of the information, please in kind prevail if there is any error on images or texts, welcome to point it out for improving.
In addition: If the technical of the flat iron has improved, it will be edited in new specification without notice. The appearance and color of the flat iron take the material objects.



Brand Owner: Shenzhen Eukey E-Business Co., Ltd
Email: support@suprent.com

SUPRENT
Haircare, We Care

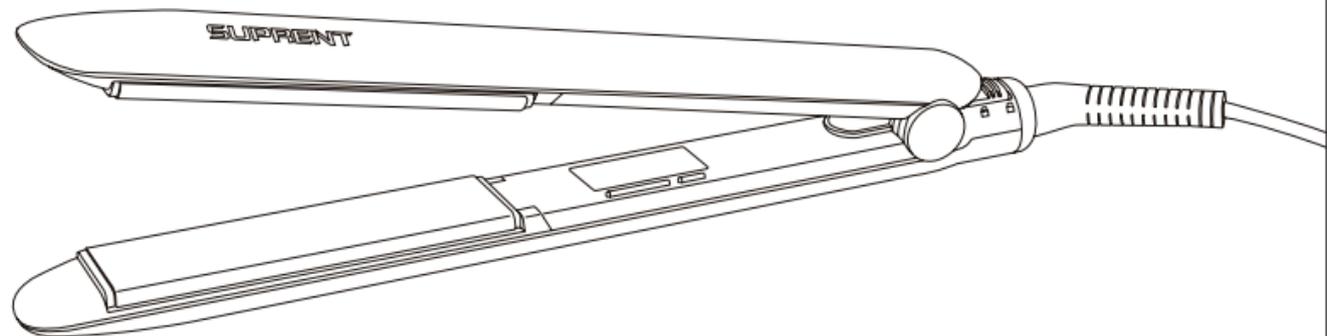

FI235P | SUPRENT Flat Iron

CONTENTS

Safety Instructions	1
Part Identification	4
Before you Use	5
Using	5
Care and Cleaning	9
Troubleshooting	10
Styling Tips	11
Guarantee	12
Warranty Certificate	13

SAFETY INSTRUCTIONS

Before using the appliance for the first time, you must read and understand the user manual completely. Consider the user manual as part of the product and store it in a safe and accessible place. Include this user manual if passing the appliance on to a third party. In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Danger

1. Electricity and water is a dangerous combination and can cause death by electric shock. Do not allow electrical cords to water or other liquids.
2. Do not use the appliance near a bathtub, washbasin or other vessel filled with water.
3. Never place the appliance in water or any other liquid.
4. If the appliance falls into water, unplug it immediately.
5. Electrical appliances are electrically live when plugged in, even if turned off.
6. Always unplug the appliance immediately after use.
7. Do not place or store appliance where it can fall or be pulled into a tub or sink.

SAFETY INSTRUCTIONS

Warning

To reduce the risk of burns, fire, electric shock or injury to persons:


1. Make sure to remove the plug from the outlet after use.
2. Never leave the appliance unattended when plugged in.
3. Do not use if the plug is loose in the outlet.
4. Close supervision is necessary when this appliance is used by, or near children or individuals with certain disabilities.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
6. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.

SAFETY INSTRUCTIONS

7. Do not use an extension cord with this appliance.
8. This styling iron is hot when in use. Do not let bare skin touch the heated surfaces.
9. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
10. Never drop or insert any object into any opening or hose.
11. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
12. Do not attempt to repair the appliance by yourself.

PART IDENTIFICATION

- | | | |
|-------------------------------------|-------------------------------------|---|
| 1.Ceramic coated plates | 4.Adjustable temperature button (-) | 7.Power cord |
| 2.LCD Display | 5.On/Off switch | 8.Temperature display (150°C-230°C) (300°F—450°F) |
| 3.Adjustable temperature button (+) | 6.Plates lock | 9.Lock indicator |

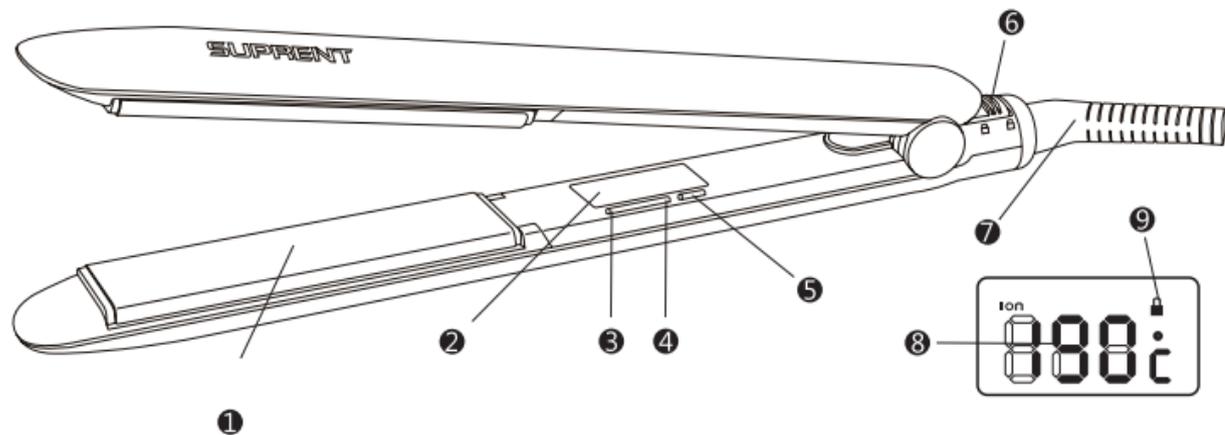

4

BEFORE YOU USE

1. Make sure that all the packaging materials have been properly removed before use.
2. Remove the excess water from hair with a towel, and comb it to disentangle.
3. Before using the appliance, make sure the hair is slightly damp or dry.
4. Never use this appliance to dry your hair, but only to straighten it.

USING

Switching on the Appliance

1. Connect the appliance into the power supply and switch on the appliance using the On/Off switch for 2 mins.
2. The incipient temperature is 190 °C . The temperature as long as the show did not reach the set value, it will have been flashing. When the achieved temperature reaches to its showed, it will stop flashing.
3. Lock / unlock the display and button: double click the On/Off switch to lock/ unlock the display.

5

USING

Setting the Temperature

1. Warning:
Risk of burning your hair if selected temperature is too high!
Depending on your hair to select the suitable temperature by the temperature control regulator, the wrongly selected temperature or improper use of the hair straightener puts your hair at risk of drying out or in the worst case burning.
2. Note:
Higher temperature settings are reached in just a few seconds, a reduction of temperature setting take effect more slowly.
3. Temperature setting: 150°C-230°C (300°F—450°F)
4. Suggestion: Always select the lowest temperature setting (150°C/300°F) when using your hair straightener for the first time.

USING

Straightening Hair

1. Hold the appliance at the handle, always at a safe distance from skin and eyes. Use a mirror.
2. Part your hair into approx. 4 cm strands.
3. Hold the appliance in the hand.
4. Begin at the roots and lay the prepared strands one at a time between the straightening plates.
5. Close the appliance and draw the hair straightener slowly from the roots through to the tips of your hair. Repeat until your hair is as straight as you desire.
6. After finishing styling, let your hair cool down and then comb it through.

Curling Hair

1. In order to curl your hair you must divide your hair into thin strands.
2. Take one strand of hair at a time and curl it around the curling plate of the unit.
(During this time be very careful not to touch the curling plate with your hands)

USING

1. Hold the strand of hair for approximately 5-10 seconds and then release the hair strand.
Repeat this process with the rest of the hair strands until the process has been completed.
2. Do not comb the hair just after curling; wait until it cools down completely.
3. Unplug the appliance from the power supply and allow it to cool down.

Switching off the appliance

1. Unlock the display by double click the On/Off switch.
2. Switch off the appliance using the ON/OFF switch.
3. Note: Unplug it from the power supply and let it cool down completely.

CARE AND CLEANING

1. Your appliance is virtually maintenance free. It contains no user serviceable parts, and no lubrication is needed.
2. Keep heated surfaces clean and free of dust, dirt & hair spray.
3. If cleaning becomes necessary, disconnect the appliance from the power source and let it cool. Wipe the exterior with a damp cloth.
4. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the cord becomes twisted, untwist it prior to use.
5. Handle cord carefully for longer life and do not put any stress on the cord where it enters the handle. Avoid jerking, twisting or straining especially at the plug connections. It could cause the cord to fray and possibly break.

TROUBLESHOOTING

Problem	Possible Cause	Solution/Hint
The appliance does not switch on	The appliance is not switched on	Press the power button on the appliance
	The plug is not fitted correctly into socket	Fit the plug correctly into socket
	The socket is damaged	Connect the appliance to a socket that works properly
	The supply cord may be damaged	The supply cord must be replaced by an authorized technical assistance service or by qualified technicians in order to avoid hazard
The results are not the expected	You have put too much hair on the plates	Make sure that the locks of hair do not exceed 50mm of width and 5mm of thickness

Smoke comes out of the hair or from the appliance during use	You have put products on your hair (for example, mousse, spray or gel)	This is normal if you use products to style. Never put any product in your hair that is not suitable for use with high-temperature appliances. Do not use gel or wax. Use only styling products specifically designed for this purpose
--	--	--

STYLING TIPS

Fine Hair: 300-350°F
150-180°C

Medium Hair: 350-400°F
180-200°C

Coarse Hair: 400-450°F
200-230°C

GUARANTEE

1. This product is guaranteed against defects in material and workmanship for a period of one year from the date of original purchase or receipt as a gift.
2. The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.
3. This guarantee does not include blades, cables, shaver heads, foils and cutters etc. which are consumable parts.
3. If you need service or information or if you have a problem, please visit the SUPRENT website at www.suprent.com or contact the SUPRENT Consumer Support, Email: support@suprent.com, Tel: +86 020 31123605. We are willing to help you.

The following situations will not be free maintenance

1. No warranty card.
2. Fail to explain the reason of breakdown.
3. The following circumstance are not covered by the warranty:
Damage caused by improper use, maintenance and repair.

Warranty Certificate

Product Name	Flat Iron
Product Number	FI235P
Date of Purchase	
Buy Store	
Dealer Stamp	
Customer Name	
Customer Phone	
Customer Address	
Zip Code	

Maintenance Records

Maintenance Date	Fault Conditions	Service Location	Maintenance Results