 


# SUPRENT


Inspire the Next You

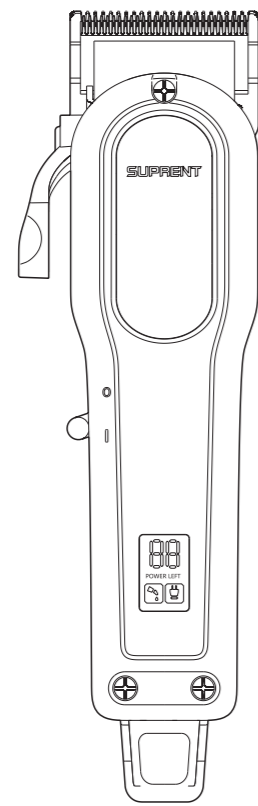

HC295 | HAIR CLIPPER USER MANUAL

1
 
## Components

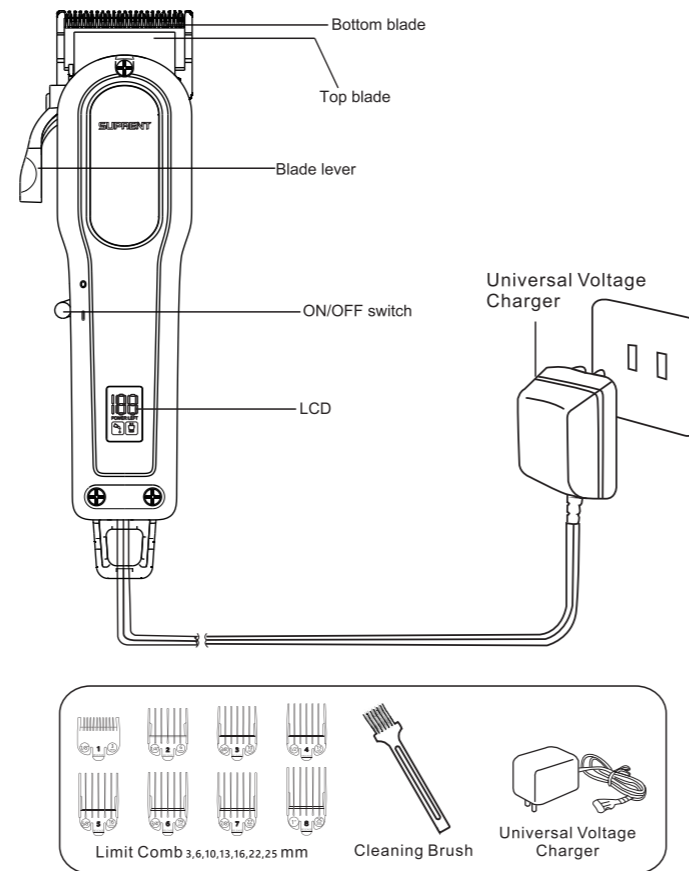

2

## Parameters

Professional Hair Clipper	Motor	Operating voltage: 3.7V
		Centering material: anti-wear brass
	Battery	2000 mA Li-ion battery
		Charging time: about 3 hours
Specific Adapter		Operating time with full charge: about 4 hours
		Input: 100-240V~50/60Hz
		Output: DC 5V==1000mA

## LCD



1. Battery percentage display (1%-100%)



Left Right

 
2. Working over 2hrs, left oil indicator light will be on together with adding oil remind sound.;Right side charging light will flash when power's less than 15%. Please charge immediately.

※ Work while charging is available (Please turn off the machine before charging)


## Fixed-length Function

A: Use of Limit Comb: Cropped hair and hairtrim Feature: (3,6,10,13,16,22,25 mm) four lengths adjustment, control the hair length

- To determine the length of haircut
- To select the appropriate limit comb

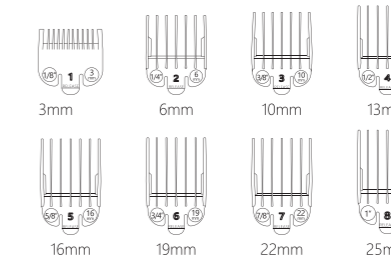


- To fine-tune the cutter

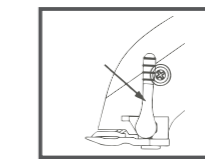 

Adjust the cutter by rotating the adjusting ring from forward to downward

- Mount the limit comb: 1.Align the limit comb with the blade edge 2.Slightly forward push to mount it.

 Disassemble the limit comb: Just pull hard the limit comb

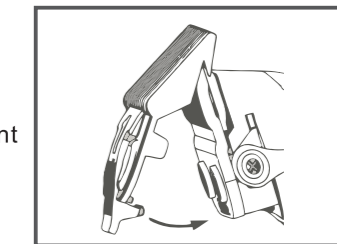

4


## Cutter Assembly and Disassembly

 Sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with tight after the blade is aligned.



- End of the top blade teeth should be 1/32" to 1/16, 0.79mm to 1.59mm back from bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.

- Extreme left hand tooth of top blade must be covering or be to the left of the first small tooth of bottom blade.
- Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade.

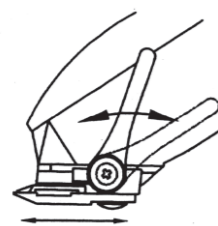


### Taper Lever

Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever downward gradually increases the cutting length.

5


## Cutter Cleaning and Maintenance
 
### Blade Alignment

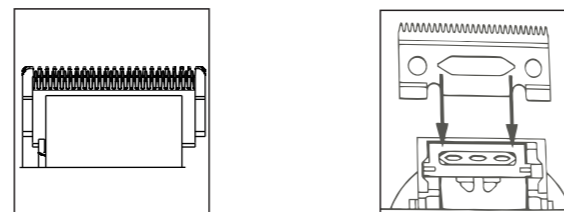

- Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
- Blades must be realign if they have been removed for cleaning or replacement
- To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 0.5-1.0mm back from bottom blade. Compare your clipper blades with the sketch)
- If blade alignment is incorrect, add a few drops of oil to the blade, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned


### Cutter Maintenance

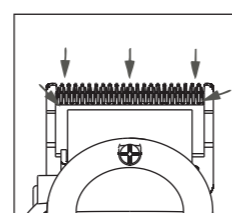 


- To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.

6

## Precautions For Use

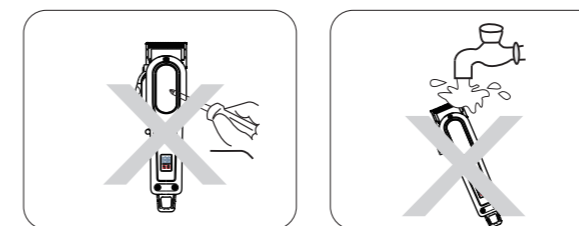 

 - Please do not disassemble the product.
- The hair clipper can not be washed. Please keep it away from wet conditions.

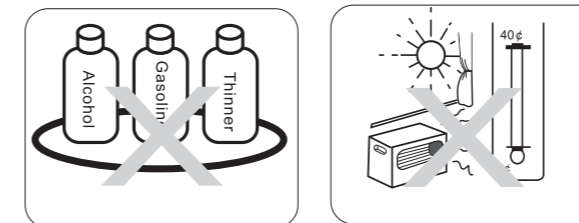

- The product can only be cleaned by cloth with little water or mild soap solution.
- Do not charge the product under environment above 40°C or below 0°C.

- ※ The product can produce little heat during using or charging, which is normal.
- ※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

7

## Warranty Card

Product Name	Professional Hair Clipper	Warranty Period
Product Model		One year from the purchasing date
Purchasing Date	Month    Date    Year	To Month    Date    Year

Customer	Address	Name
		Phone Number
Point of Sale	Address	Name
		Phone Number

## Following Guarantees Provided For the Product

- The product is produced through strict quality management and inspection.
- If malfunction occurred in fair use, the consumer can enjoy free warranty service according to the warranty card in the purchasing store or our repair center. (The battery and blade belong to consumables, not covered by warranty but provided with fee)
- No free services for the following situations:
  - Damages caused by repair or reformation not approved by our company.
  - Damages caused by false or neglectful use, or by accidents.
  - Damages caused by natural disasters or abnormal voltage.
  - Damages caused by ignoring attentions provided within the product specification.
- The product is only guaranteed when provided the warranty card instead of the invoice.

8