

 
SUPRENT
Inspire the Next You

This user manual tries to ensure the accuracy of the information, please kindly point it out for our improvement in the future, if there is any errors on the images or the texts. We'd be very appreciated for your support and effort.

In addition: If the technique of the trimmer has been improved, it will be upgraded and updated in the new version as well as the specification without announcement.

Brand Owner: Shenzhen Eukey E-Business Co., Ltd
Address: Room 201, Building A, Qianwan No.1 Road,
Qianhai Shengang Hezuoqu, Shenzhen, China
Tel: +1 888 2821842
Email: support@suprent.com

SUPRENT
Inspire the Next You


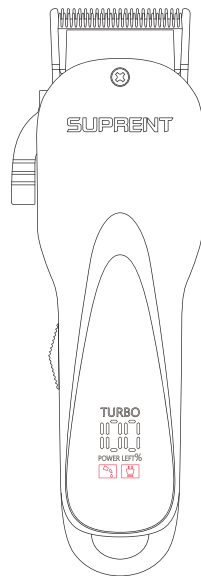


HC355 | SUPRENT Pro Hair Clippers


CONTENTS

Components	1
Parameters	2
LED	2
Fixed-length Function	3
Cutter Assembly and Disassembly	5
Precautions For Use	7
Warranty Certificate	8
Maintenance Records	8

  COMPONENTS

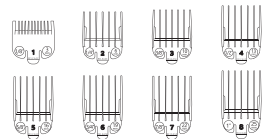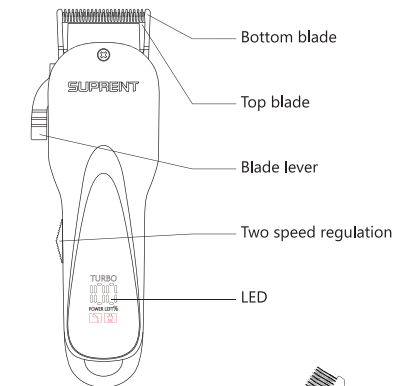

Limit Comb 3-6-10-13-16-19-22-25 mm

 

Cleaning Brush




Universal Voltage
Charger

PARAMETERS


Professional Hair Clipper	Motor	Operating voltage: 3V
		Centering material: anti-wear brass
	Battery	3.7V 2000 mAh Li-ion battery
		Charging time: about 3 hours Operating time with full charge: about 4 hours

Specific Adapter	Input: 100-240V~50/60Hz
	Output: 5V---1000mA

 LED



 1. Battery percentage display (1%-100%)




2. Working over 2hrs, left oil indicator light will be on together with add oil remind sound; Right side charging light will flash when power's less than 1 0%. Please charge immediately.

Work while charging is available
(Please turn off the machine before charging)


FIXED-LENGTH FUNCTION

A: Use of Limit Comb: Cropped hair and hair trim Feature:
(3,6,10,13,16,19,22,35mm) eight lengths adjustment, control the hair length

 1. To determine the length of haircut
2. To select the appropriate limit comb

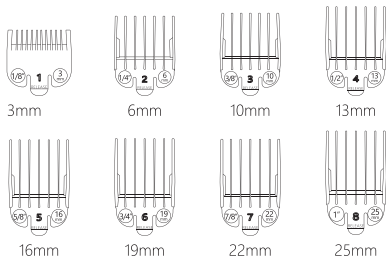


 3. To fine-tune the cutter
Adjust the cutter by rotating the adjusting ring from forward to downward

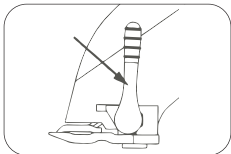


FIXED-LENGTH FUNCTION

 - B: Mount the limit comb:
1. Align the limit comb with the blade edge
 2. Slightly forward push to mount it.

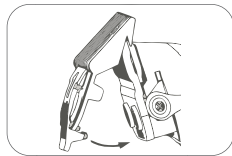


 - C: Disassemble the limit comb:
Just pull hard the limit comb

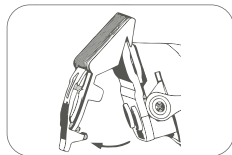


CUTTER ASSEMBLY AND DISASSEMBLY

 Sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with tight after the blade is aligned.




 1. End of the top blade teeth should be 1/32" to 1/16", 0.79mm to 1.59mm back from bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.
2. Extreme left hand tooth of top blade must be covering or be to the left of the first small tooth of bottom blade.
3. Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade.



Taper Lever


 
Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever downward gradually increases the cutting length.



CUTTER ASSEMBLY AND DISASSEMBLY


Blade Alignment

  - Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
- Blades must be realigned if they have been removed for cleaning or replacement
- To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 0.5- 1.0mm back from bottom blade. Compare your clipper blades with the sketch)
- If blade alignment is incorrect, add a few drops of oil to the blade, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned

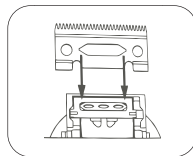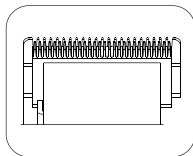


Cutter Maintenance

 - To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.



PRECAUTIONS FOR USE

 
1. Please do not disassemble the product.




2. The hair clipper can not be washed. Please keep it away from wet conditions.



 3. The product can only be cleaned by cloth with little water or mild soap solution.



 4. Do not charge the product under environment above 40°C or below 0°C.



The product can produce little heat during using or charging, which is normal.

Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Warranty Certificate

Product Name	Hair Clippers
Product Model	HC355
Date of Purchase	
Purchase Store	
Dealer Stamp	
Customer Name	
Customer Phone	
Customer Address	
Zip Code	

Maintenance Records

Maintenance Date	Fault Conditions	Service Location	Maintenance Results