

# BESTTEN®

Outdoor Countdown Timer with Remote, Dusk to Dawn Light Sensor, 3 Grounded Outlets and 6-Inch Cord




## User Manual

### Specifications

AC Outlet ..... 3 Grounded  
 Power Cord ..... 6-inch SJTW 14AWG/3C  
 Input ..... 15A/125V  
 Max Rating ..... 1875W Resistive/1250W Tungsten/1/2 HP/TV-5  
 Housing ..... Fire Resistant PC(V-2)  
 Remote Control Range ..... 80-foot  
 Battery ..... 23A(12V)  
 Working Temperature ..... -13 to 104°F(-25 to 40°C)

### Features

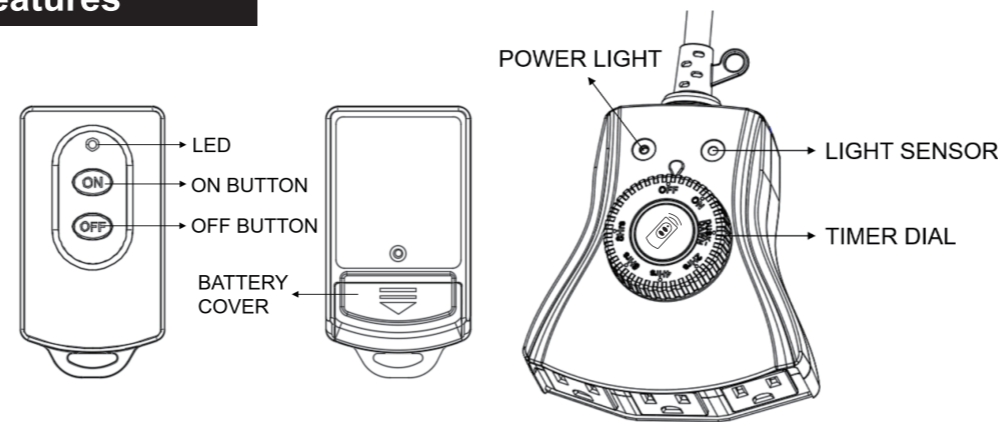

#### For first time use:

- The indicator on the outlet will blink for 29 seconds once the outlet is powered on.
- Within 29 seconds, press the "ON" on the remote to connect it with the outlet, then the pair is finished.

#### Note:

- The timer program will be overridden if remote RF control is activated. Reset the timer dial to resume the timer program.
- One outlet can be paired with max 1 remote. If the 2nd remote is paired, the outlet will unpair the 1st remote

### Timer Instruction

Simply rotate the timer dial:

OFF	Power remains Off
ON	Power remains On
DUSK-DAWN	Power On at dusk, Off at dawn, repeat daily
2Hrs	Power On at dusk for 2 hours, then Off, repeat daily
4Hrs	Power On at dusk for 4 hours, then Off, repeat daily
6Hrs	Power On at dusk for 6 hours, then Off, repeat daily
8Hrs	Power On at dusk for 8 hours, then Off, repeat daily

**NOTE:** Locate the outdoor timer away from other light sources. If the outdoor timer is too close to other light source or if the photocell is facing a light source such as a porch light or street light, the photocell may turn off the fixture out of the timer settings. If this happens, relocate the outdoor timer or eliminate those light sources.

#### Reminder:

1. When the timer is activated at dusk in Dusk-Dawn Mode, it will remain On until dawn unless exposed to a light source for 12 mins or more.
2. When the timer is activated by darkness at dusk in 2Hrs, 4Hrs, 6Hrs or 8Hrs mode, it will remain On for the set time regardless of light conditions.
3. When the timer is activated by remote control, it will switch to Remote Control Only Mode. To reactivate Dusk-Dawn or Dusk to 2/4/6/8hrs mode, the dial must be turned manually to cancel Remote Control Only Mode.

### Safety Information

**CAUTION:** Overloading this product could increase risk of fire. Use only with a total electrical draw of maximum 15 amp/1875 watt Christmas tree or other seasonal lighting products.

\* If using an outdoor-use cord for an extended period of time (greater than 90 days), please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a licensed electrician for proper installation of permanent wiring.

- \* Suitable for indoor/outdoor use-store indoors while not in use.
- \* Plug into ground fault protected receptacle only.

### Warranty

BESTTEN warrants to the original customer that this product is free of defects in materials and workmanship for one year from the purchase date. Within this period, simply contact BESTTEN CARE with proof of purchase and reason of claim. We will replace the product for free.

Any product which is subject to misuse or accidental damage is excluded from this warranty.

**support@ibestten.com**  
**1-800-358-6160 (Mon-Fri 9AM-5PM PST)**

For more products from BESTTEN, please visit our website [www.ibestten.com](http://www.ibestten.com).

### BESTTEN Products

For more products from BESTTEN, please visit our website [www.ibestten.com](http://www.ibestten.com)



USB Wall Outlet Surge Protectors



Outdoor Power Stakes



Outdoor Timers



Remote Control Outlets



Metal Power Strips



Light Switches



Screwless Wallplates



Stainless Steel Wallplates



Receptacles



CONFORMS TO UL STD. 60730-1  
 CERTIFIED TO CSA STD. E60730-1

Model: USOT-2R-3A

MADE IN CHINA

Version 1.3