

 

 


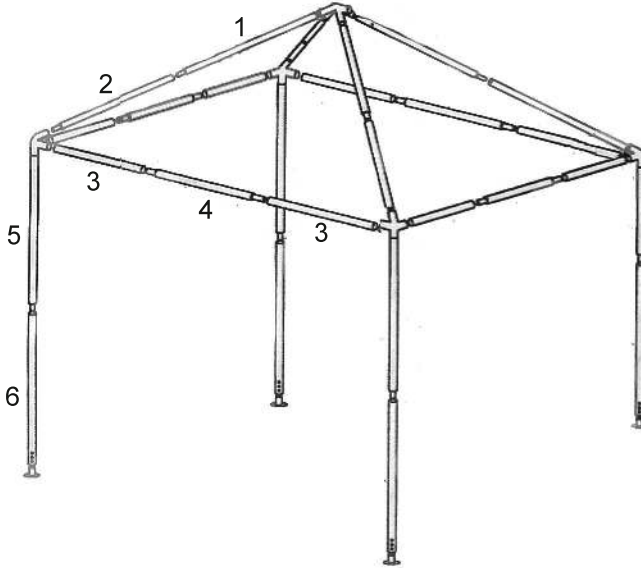










PACKAGE CONTENTS

For 10' x 10' Model - GM1200 & GM1200NS

The party tent is packed in one box. Please check the contents according to this list. If there's any part missing, contact us immediately to get replacement.




PART#	DESCRIPTION	QUANTITY	PART#	DESCRIPTION	QUANTITY
#1		4	COVER		1
#2		4	ZIPPER SIDE		2
#3		8	WINDOW SIDE		2
#4		4	CURTAIN RING		24
#5		4	ROPE		4
#6		4	PEG		8
#10		1			
#11		4			
#12		4			

* GM1200NS has no sides & rings.

INSTALLATION

CHECK FULL STEPS FOR GM1200. FOR GM1200NS, PLEASE CHECK STEPS 1-4.

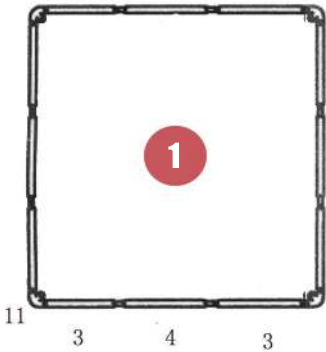



STEP 1

Assemble the upper frame using Pole #3, #4 & the Connector #11.



STEP 2

Attach the roof section to the upper frame using Pole #1, #2 & the Connector #10. Then place Pole #5 into the remaining outlet of the Connector #11.

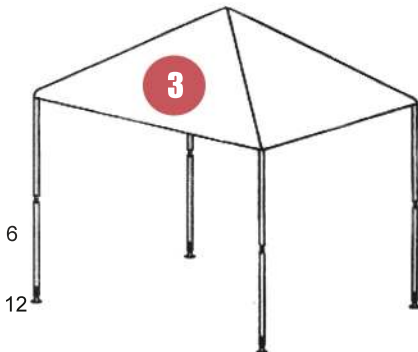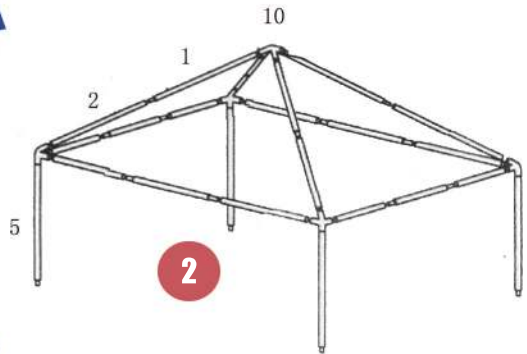


STEP 3

Place the cover tightly over the frame. And Slot the remaining legs (Pole #6) into position ensuring the Base Plates #12 are at the base.

INSTALLATION


4

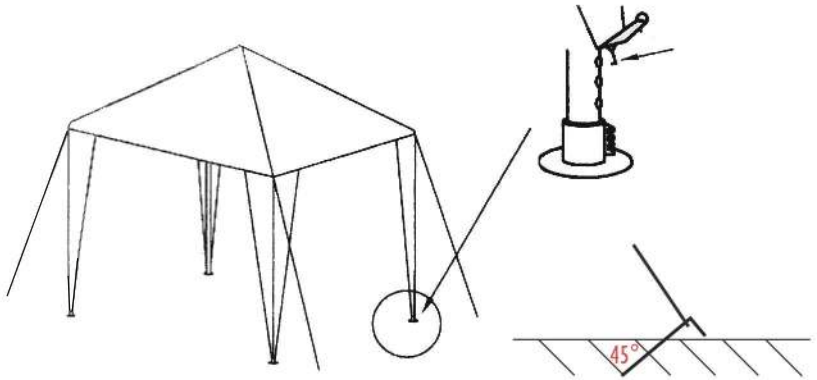

STEP 4

Pull the leg covers tight and attach the metal hooks into the tube holes near the feet. If the cover becomes loose, tighten by moving the hook to a lower hole. Then secure the tent with Ropes and the Stakes. We recommend the stakes are at a 45 degree angle into the ground facing away the tent to ensure maximum tension.

5

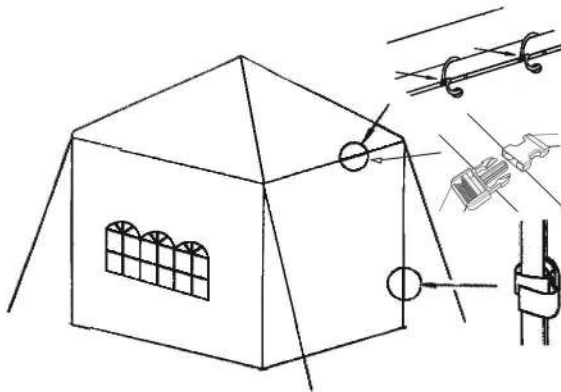

STEP 5

Hang the side panels to the Poles by Plastic Rings, Velcro Ties and Buckles. All side panels can be hung or taken off separately.