

 

 










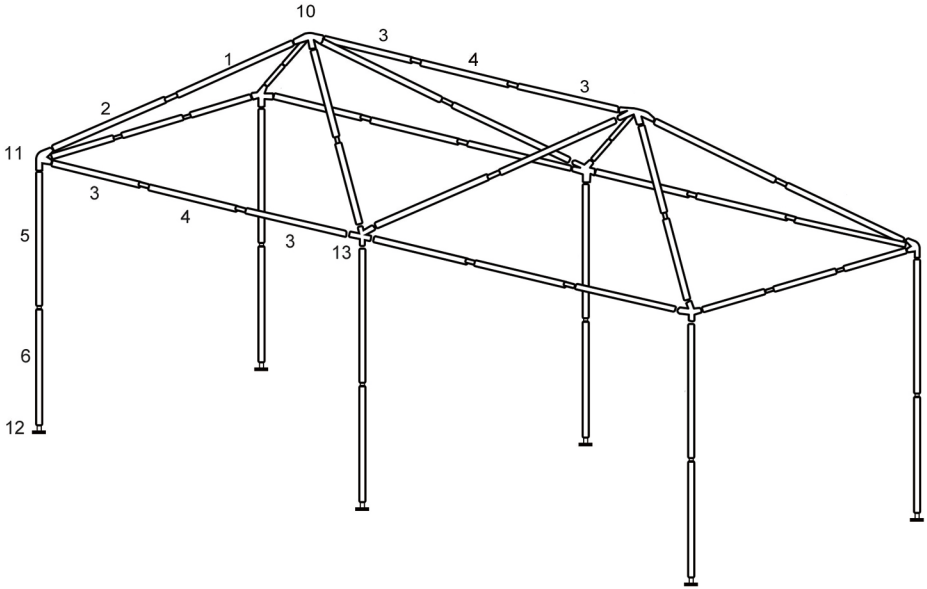



PACKAGE CONTENTS

For 10' x 20' Model - GM1401-W, GM1401-WB & GM1401-WHS


The party tent is packed in one box. Please check the contents according to this list. If there's any part missing, contact us immediately to get replacement.



PART#	DESCRIPTION	QUANTITY	PART#	DESCRIPTION	QUANTITY
#1		8	COVER		1
#2		8	ZIPPER SIDE		2
#3		14	WINDOW SIDE		4
#4		7	CURTAIN RING		36
#5		6	ROPE		6
#6		6	PEG		12
#10		2	#13		2
#11		4			
#12		6			

* GM1401WHS only has 2 window sides & 24 rings.

INSTALLATION

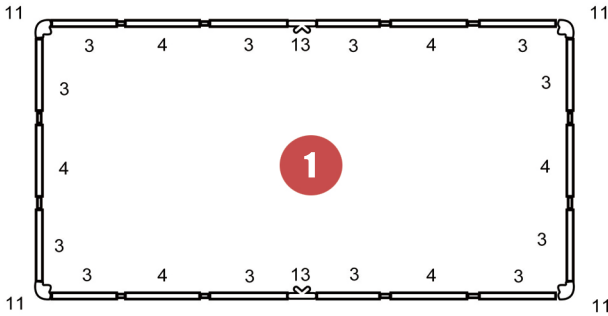



STEP 1

Assemble the upper frame using POLE #3, #4 & the Connector #11, #13.



STEP 2


Attach the roof section to the upper frame using Pole #1, #2, #3, #7 & the Connector #10. Then place Pole #5 into the remaining outlet of the Connector #11.

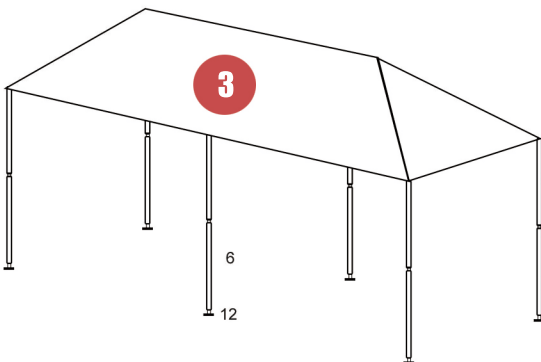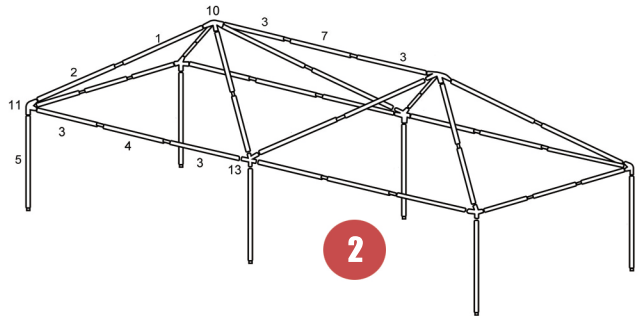

STEP 3


Place the cover tightly over the frame. Slot the remaining legs (Pole #6) into position ensuring the Base Plates #12 are at the base.

INSTALLATION

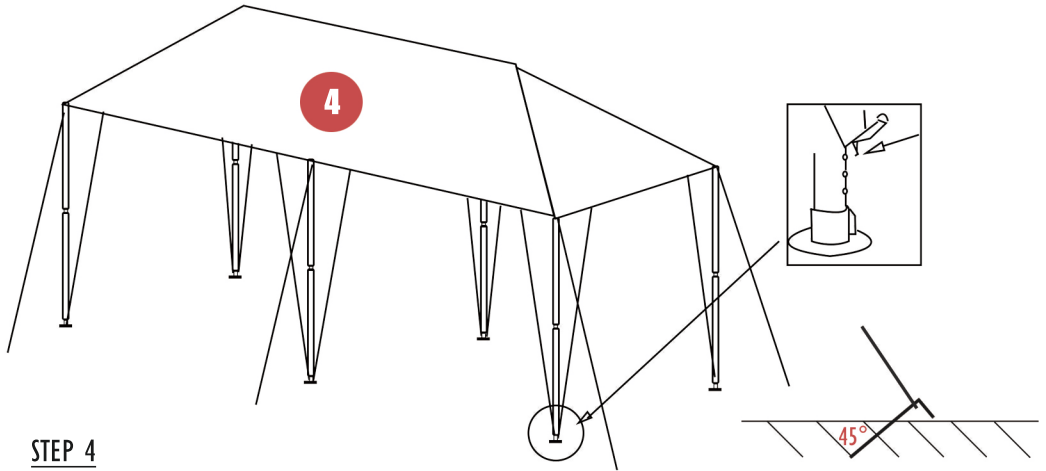

STEP 4

Pull the leg covers tight and attach the metal hooks into the tube holes near the feet. If the cover becomes loose, tighten by moving the hook to a lower hole. Then secure the tent with Ropes and the Stakes. We recommend the stakes are at a 45 degree angle into the ground facing away the tent to ensure maximum tension.

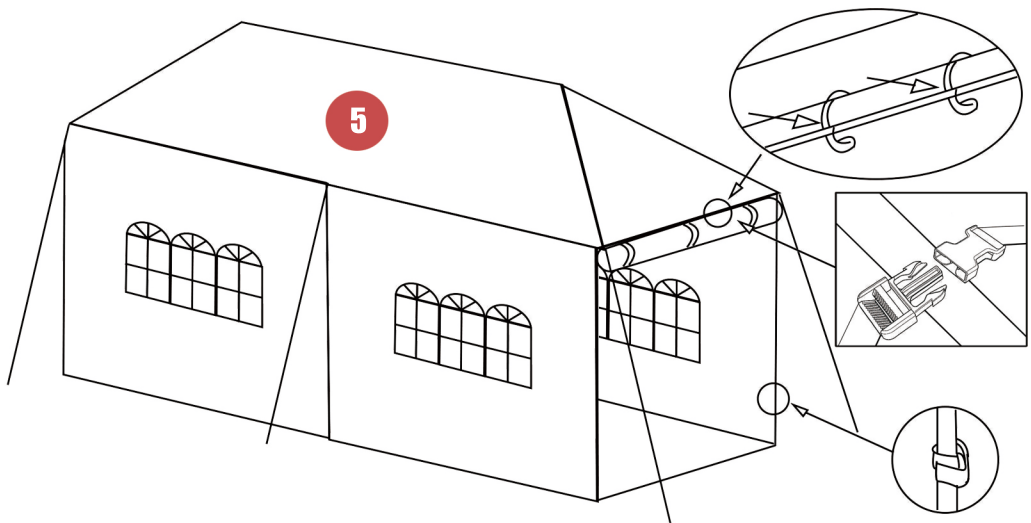

STEP 5

Hang the side panels to the Poles by Plastic Rings, Buckles and Velcro Ties. All side panels can be hung or taken off separately.