
 



 

 



 




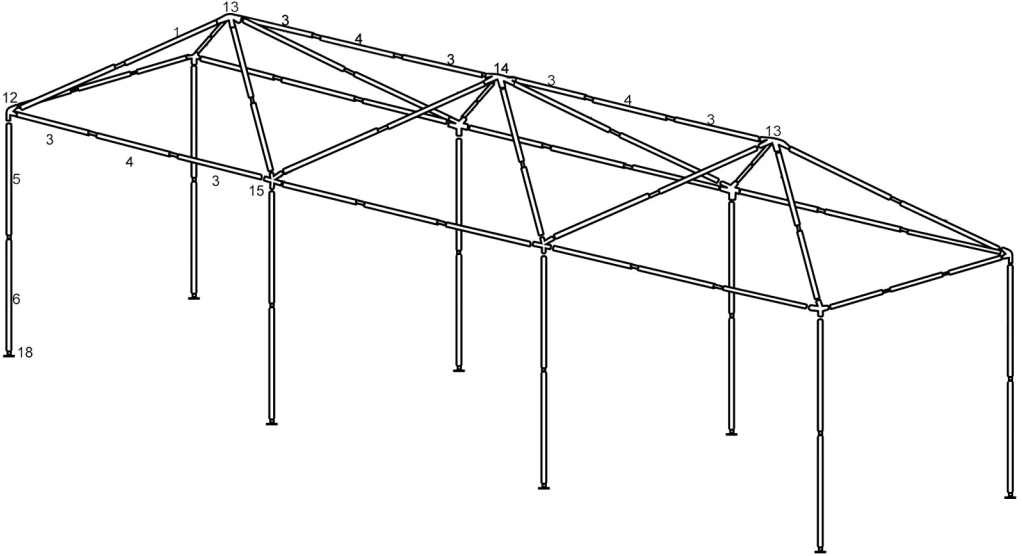



PACKAGE CONTENTS

For 10' x 30' Model - GM1402-W, GM1402-WB & GM1402-WHS


The party tent is packed in one box. Please check the contents according to this list. If there's any part missing, contact us immediately to get replacement.



PART#	DESCRIPTION	QUANTITY	PART#	DESCRIPTION	QUANTITY
#1		12	COVER		1
#2		12	ZIPPER SIDE		2
#3		20	WINDOW SIDE		6
#4		10	CURTAIN RING		48
#5		8	ROPE		8
#6		8	PEG		16
#12		4	#18		8
#13		2			
#14		1			
#15		4			


* GM1402WHS only has 5 window sides & 36 rings.

INSTALLATION

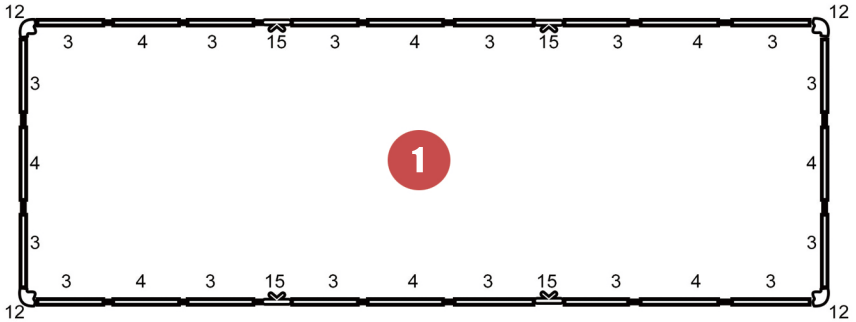


STEP 1

Assemble the upper frame using POLE #3, #4 & the Connector #12, #15.

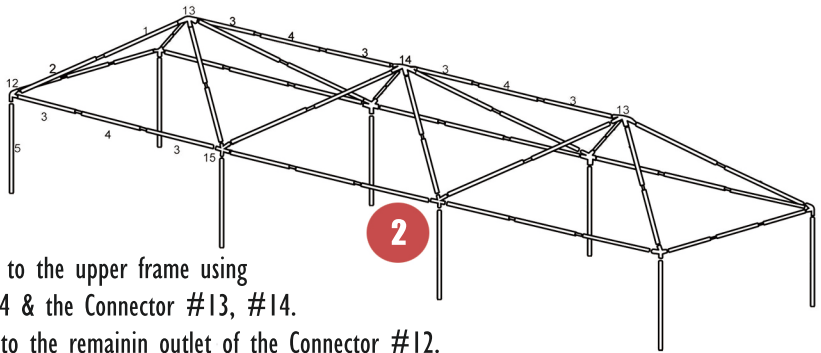

STEP 2


Attach the roof section to the upper frame using Pole #1, #2, #3, #4 & the Connector #13, #14. Then place Pole #5 into the remainin outlet of the Connector #12.

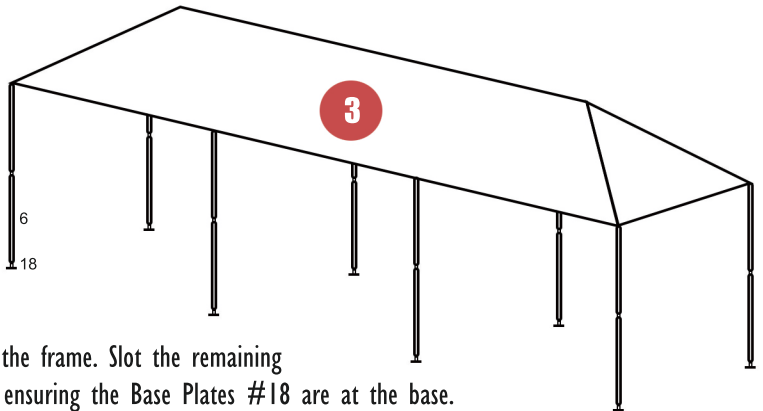

STEP 3


Place the cover tightly over the frame. Slot the remaining legs (Pole #6) into position ensuring the Base Plates #18 are at the base.

INSTALLATION

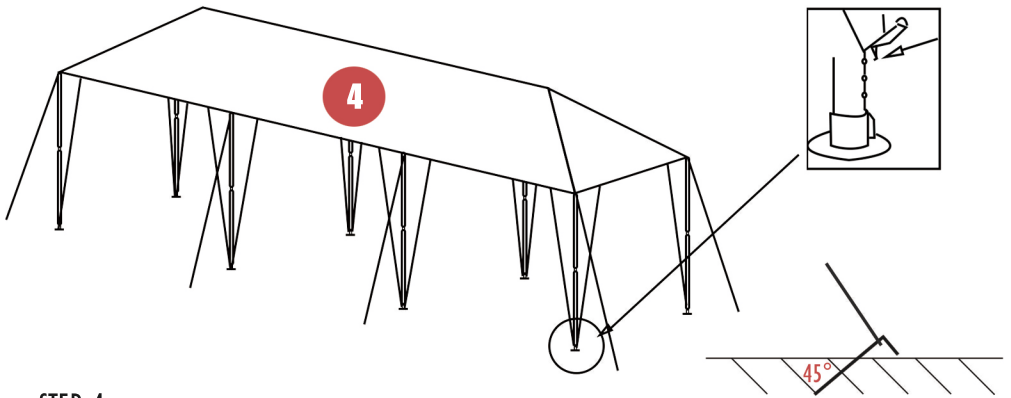

STEP 4

Pull the leg covers tight and attach the metal hooks into the tube holes near the feet. If the cover becomes loose, tighten by moving the hook to a lower hole. Then secure the tent with Ropes and the Stakes. We recommend the stakes are at a 45 degree angle into the ground facing away from the tent to ensure maximum tension.

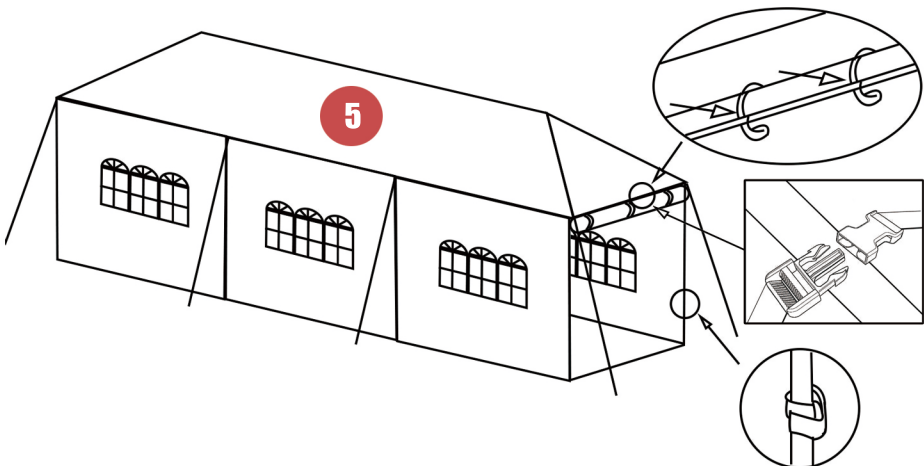

STEP 5

Hang the side panels to the Poles by Velcro Ties, Plastic Rings & Buckles. All side panels can be hung or taken off separately.