

FLAMMA

FS08
OCTAVE

Owner's Manual

Content

Precautions -----	01
Features -----	02
Lay out -----	03-04
Factory Reset -----	05
Effect List -----	06
Specifications -----	07

Precautions

Please read the precaution carefully before use

Power supply

Please use a correct power supply for the device. The pedal requests 9V 300mA center negative power supply. Incorrect power supply may cause damage or the other unexpected issues. Please unplug the power supply from the socket if it is idle for a long time or during a thunderstorm.


Attention

1. Please read this precaution carefully
2. Please keep this manual carefully
3. Please follow all the instructions mentioned in this precaution
4. Please read the manual carefully for use
5. Please avoid water or humid environment
6. Please use dry towel for cleaning
7. Please keep away from radio or the other radiation device to avoid interference
8. Please do not press the power switch or control knobs heavily.
9. Please do not let scraps of paper, metal or any other objects be thrown into the device.
10. Please do not let the device fall from height, push, or hit the device heavily.

Features

- Precise polyphonic octave effects without any distorted signal
- Individual control for ± 1 and ± 2 octave, dry signal control
- 7 preset slots for saving the different effect parameters
- Full metal shell

Lay out

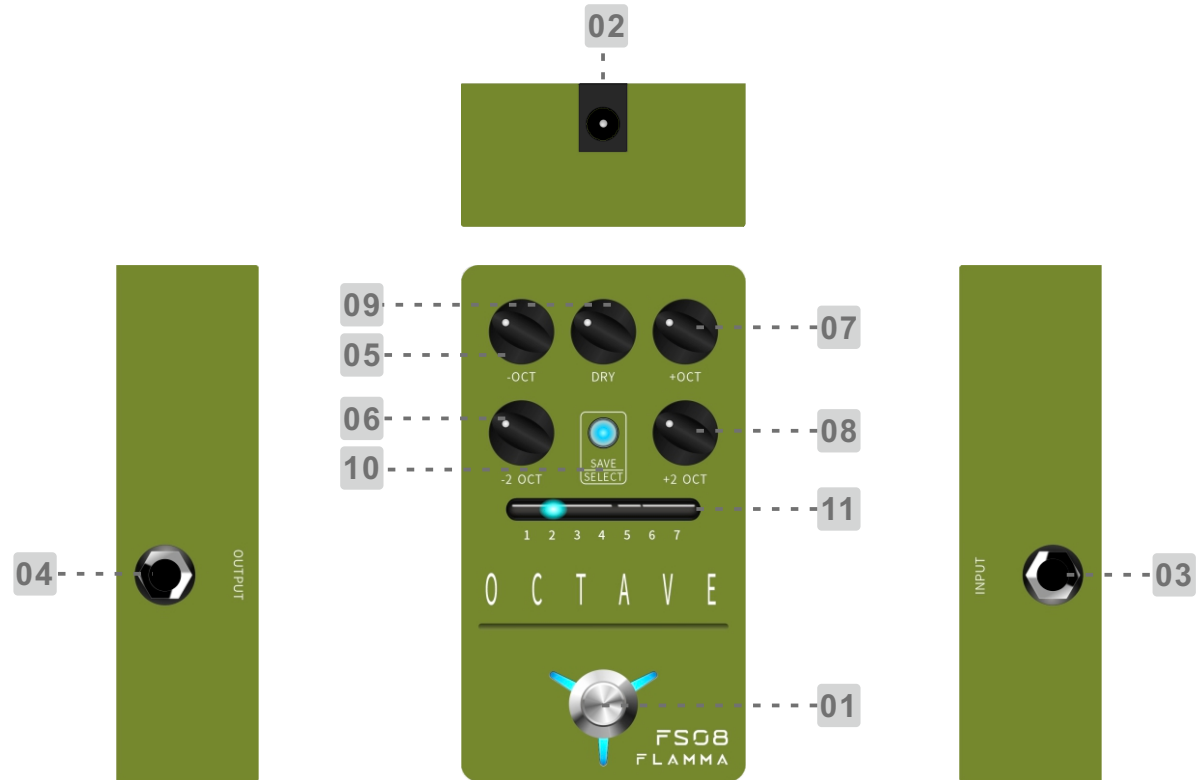

Lay out

- 01 Footswitch**
Press to turn On/Off effect.
- 02 Power port**
Connect to power 9V DC (center negative) power supply is recommended.
- 03 Input**
¼" mono audio jack. Connect to the guitar or the output of the other pedal.
- 04 Output**
¼" mono audio jack. Connect to the input of the other pedal or audio device.
- 05 -OCT**
Rotate to adjust the level volume of -1 octave
- 06 -2OCT**
Rotate to adjust the level volume of -2 octave
- 07 +OCT**
Rotate to adjust the level volume of +1 octave
- 08 +2OCT**
Rotate to adjust the level volume of +2 octave
- 09 DRY**
Rotate to adjust the volume level of the dry signal
- 10 SAVE/SELECT**
Press to switch between 1-7 preset slot; press and hold the button for 2 second to save the change in the currently selected slot.
- 11 1-7 LED indicators**
The blinking LED Indicates the currently selected slot. When the user press and hold the SAVE/SELECT button to save the change, the LED will blink quickly and then stop for confirm saving.

Factory Reset

Press and hold SAVE/SELECT while plugging in the power cord for powering the pedal On, the 1-7 LED indicators will start to blink. Release the SAVE/SELECT, and the LED indicator will blink quickly and then stop to confirm reset, or you can unplug the power supply before releasing the SAVE/SELECT button to cancelling reset.

Effect List

Slot	Description
1	+OCT
2	-OCT
3	+OCT & +2 OCT
4	-OCT & -2 OCT
5	-OCT & +OCT
6	-2 OCT & +2 OCT
7	-OCT & -2 OCT +OCT & +2 OCT

Specifications

INPUT: ¼" mono audio jack (impedance value 470k Ohms)

OUTPUT: ¼" mono audio jack (impedance value 100 Ohms)

Power supply: 9V DC (center negative)

Current draw: 300mA

Dimension: 69.82 (D) × 121.5 (W) × 50.65mm (H)

Weight: 0.298kg

Accessories: Owner's manual, Logo stickers, warranty card

