 


DVD PLAYER

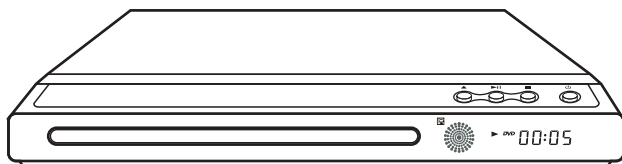


USER MANUAL

Contents

1. Important Notes	2
2. General Safety Instructions	3
3. Front Panel	4
4. Rear Panel	4
5. Remote Control	5
6. Power	6
7. Connecting Video & Audio	6
8. Loading a DVD or CD	7
9. Troubleshooting	8

Important Notes :

Read these safety instructions before using your device and store them for possible future reference.

- If the cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.
- The cord should always be readily accessible.
- The apparatus shall not be exposed to dripping or splashing of water or liquids and that no objects filled with liquids such as flowers vases shall be placed on the product.
- The normal ventilation of the product shall not be impeded for intended use.
- Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.
- Open flame sources, such as candles, should not be placed on top of the device.
- The device is intended for use only in a temperate climate.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- **CAUTION:** to avoid accident, this appliance must be fixed properly on the floor or on the wall according to instructions for installation.
- **CAUTION:** Danger of explosion if batteries are incorrectly replaced or not replaced by the same type or equivalent
- Batteries should not be exposed to excessive heat such as sunshine, fire or similar.
- Different types of batteries, new and used batteries should not be mixed.
- Batteries must be installed according to the polarity.
- If batteries are worn, they must be removed from the product.
- Batteries must be disposed of safely. Always use the collection bins provided (check with your dealer) to protect the environment.
- If there is not following pictogram on the product  , then it is class I apparatus. It must be connected to an electrical power supply base connected to protective earth.



The lightning flash is intended to alert the user to the presence of dangerous voltages within the product's enclosure, and touching the inner parts may result electric shock and personal injury.



The exclamation mark is intended to alert the user to the presence of important operating instructions.



To prevent the risk of electric shock or fire, do not open the cover.
Refer servicing and repairs to qualified service personnel.




This mark indicates that this unit contains a class 1 laser product. The laser beam may produce harmful radiation if it directly touches the human body.


General Safety Instructions :

- Please read this Instruction Manual carefully before connecting and operating.
- Do not expose this DVD Home Theatre System to rain, moisture or direct sunlight
- Do not install near any heat sources, such as Radiators, heat registers, stoves or other apparatus that produces heat, including amplifiers.
- Place the DVD Home Theatre System on a Horizontal, level surface.
 - Do not obstruct the heat ventilations. Overheating may cause malfunctions.
- Clean the cabinet with a soft cloth. Detergents or alcohol should not be used.
- Do not remove any covers or attempt to gain access to the inside of the DVD Home Theatre System.
- Refer all servicing and repairs to qualified service. Servicing is required when the DVD Home Theatre System has been damaged in anyway, such as power supply cord or the power plug is damaged, the DVD Home Theatre System has been exposed to rain or moisture and does not operate normally or has been dropped.
- Unplug this DVD Home Theatre System during lightning storms or when not used for long periods of time.

Front Panel

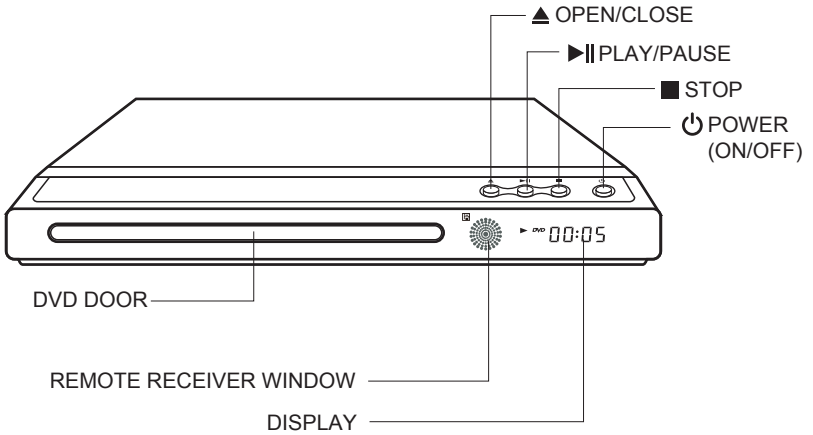

Rear Panel

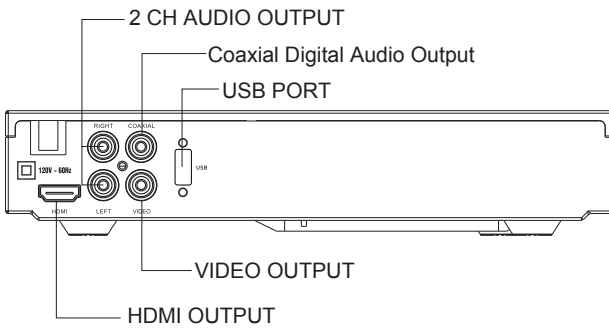

Remote control

Power

Number Keypad

Use to enter channel or track numbers.

Angle

Press to view alternate angles on supported DVDs.

Menu

Press to access the loaded DVD's menu.

Arrows/Enter

Press to make selections in the on screen menus.

Title

Press to access the title menu on a loaded DVD.

Volume

Stop

Press to halt play of the DVD.

Play/Pause

Press to play or pause the DVD.

Video

Press to switch between Composite or S-Video.

OSD

Press to view the on-screen display

L/R

 
Press to adjust the audio mode on a supported DVD.

N/P

Press to switch between NTSC and PAL.

Reverse/Fast Fwd

Press to search through an individual chapter or track.

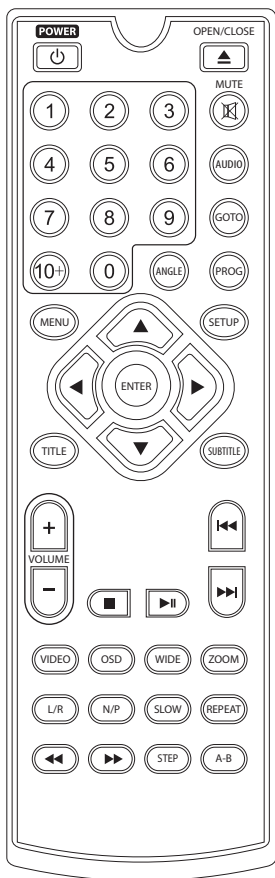

Open/Close Disc Tray

Mute

Audio

For TV play, press to turn closed captioning ON or OFF.

For DVD play, press to adjust audio settings for the DVD.

Go To

Press to enter a specific chapter and

Prog

Press to program a loaded disc to play titles, chapters, or tracks in a specified order.

Setup

Press to access the setup menu.

Subtitle

Press to turn subtitles ON or OFF.

Skip Back/Forward

Press to skip between chapters or tracks.

Zoom

Press to zoom in or out on a loaded DVD.

Repeat

Press to repeat a chapter or track.

Wide

Press to switch screen aspect ratio.

Slow

Press to play in slow motion.

Step

 
Press to advance one frame at a time.

A-B

Press to create a repeating loop on a specified section of a loaded DVD..


Battery compartment

Requires 2 AAA batteries.

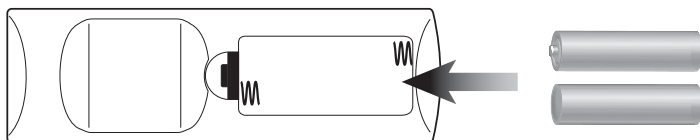

Power

 Plug the attached AC cord into a standard AC power outlet to power the DVD player.




Connecting Video & Audio

HDMI Output

Requires a HDMI cable (not included).

 
1. Use a HDMI cable to connect the HDMI Output to a HDMI input on a television.
2. Adjust the connected televisions input setting to match the input used in the previous step.
3. Set the resolution by going to
SETUP > VIDEO > Resolution

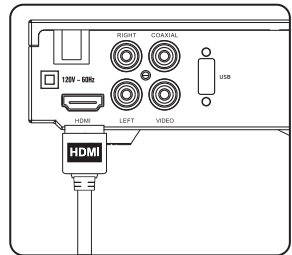

Composite Video Output

Requires an RCA video cable (yellow, included).


1. Use an RCA video cable (included) to connect the Composite Video Output on the DVD player to the Composite Video Input on the television.
2. Adjust the television's source input setting to Composite Video.

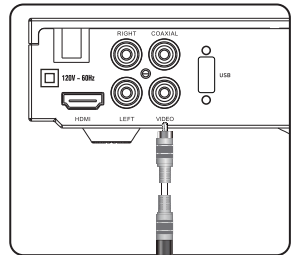

RCA Stereo Audio Output

Requires an RCA audio cable (white/red, included).


1. Use the RCA audio cable to connect the RCA Stereo Audio Output on the DVD player to the RCA Stereo Audio Input on the television.
2. Adjust the television's source input setting to Component Video (YPbPr) or Composite Video depending on the video connection used above.

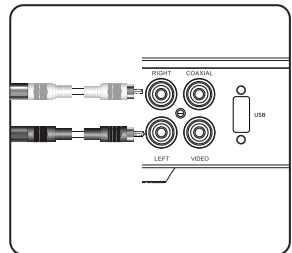

Coaxial Digital Audio Output

Requires an RCA audio cable (included).

1. Use the RCA audio cable to connect the Coaxial Digital Audio Output to an coaxial digital audio input on an audio system.
2. Adjust the connected audio system's input setting to match the input used in the previous step.
3. In the Digital Out portion of the setup menu, adjust to PCM, RAW or OFF.

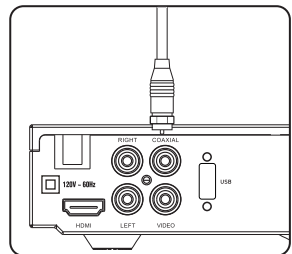

Loading a DVD or CD

Loading a Disc

1. Press the Open button to open the Disc Door.
2. Load a disc into the DVD player, label side facing up.
3. Manually close the Disc Door.

After a disc is loaded, it will begin playing automatically.

Playing a Loaded Disc

1. Follow the instructions for loading a Disc.
2. If the disc does not begin playing automatically, press the Play/Pause button.

Programming a Loaded Disc

1. Follow the instructions for Loading a Disc and Playing a Loaded Disc.
2. While the loaded disc is playing, press the Program button on the remote.
3. Use the Number Keypad to enter in the titles and chapters in the order you want to view them.

DVD Titles and chapters or CD tracks will play in the order they are programmed.

4. Repeat step 3 until the desired DVD titles and chapters or CD tracks are programmed.

USB PORT

Connecting a USB Thumb Drive

Connect a USB Thumb Drive to the USB Port. Picture formats are supported (Jpeg).

Accessing the Content on a USB Drive

Press the DVD/USB button to enter DVD/USB mode.

Troubleshooting

Symptoms	Possible Cause and Remedies
No power	<ol style="list-style-type: none">1. Make sure there is connection between the power cord and the outlet.2. Check if the power is on. (Always power off the unit after use.)
No playback	<ol style="list-style-type: none">1. Check if the power is on.2. Check if the disc has been loaded in.3. Check if the disc has been placed in the right direction. Make sure that the disc is placed with the label side up.4. The disc has been damaged and you should change to another or clean it.5. Moisture may be condensed inside the unit. Turn the power on for 1~2 hours before you use it.6. The region code of the disc does not match the unit.7. The format of the disc is not correct.
No video	<ol style="list-style-type: none">1. Check if the TV set is on and the video connections are all right.2. Check if the video output setting conforms to the setting in the SETUP menu.3. Check if the connection cables are all right.4. Please clean the disc.
Picture indefinable or distorted	<ol style="list-style-type: none">1. The disc has been damaged or is dirty.2. Reset the disc TV system of the unit and the TV set.3. Connect the unit directly to the TV set with no other connections.