







shows)

— 9 —

■ Please Note:

1. When selected, the corresponding icon will display a red

2. The battery type cannot be selected for Ni-MH batteries. When it is recognized that it is a Ni-MH battery, the other three battery type icons are in gray and cannot be selected. 3.Ni-MH battery charging current can be only selected when the battery is just connected, and the current cannot be changed after selection. 4. Four modes: Charge, Discharge, Capacity and Loop mode.

■ NOTE:

a. The selected icon will display a red border. b. For Ni-MH batteries, the battery type can't be selected; the other three battery type icons are red that is not optional, when the Ni-MH battery is identified.

c. Ni-MH batteries' charging current can be only selected when the battery is just inserted; after selecting the current, the current cannot be changed. So the other current icons turn red that is not optional. d. The three kinds of the MODE menu (Charge, Discharge and

Capacity) can be switched at any state.

■ OPERATION METHOD

1) The AC side of the power adapter plugs into the outlet, and the output side plugs into the charger. 2) Connected to the power, the company's logo is displayed on the color screen in the form of the sea, which represents the warm greetings and blessings to the global users.

---10 ---

After booting, display the following figure:



3) Access to the battery, if the users click the battery icon to enter the Settings Interface within 8 seconds, the charger will work as the setting parameters. Otherwise, it will automatically enter the default charging



4) Switching Battery information: After putting multiple batteries, click the battery icon the users want to check; the battery icon turns red, and all the information at the top of the main interface is the information of the selected slot. As following figure shows:



5) Change settings: As following figure shows:



If users want to change the setting, there are two ways: ① When putting the battery, waiting for 8 seconds, click the battery icon.(Note: For Ni-MH batteries, charging current must be changed within 8 seconds. If there is no operation within 8 seconds, then it will charge in the default current and the current cannot be changed during charging.) ② During the charging process, select the battery icon which

current, a total of 30 levels, each level is 100mA.(As picture

needs to change settings and click the battery icon again to enter the setting interface.

6) PC connection: As following figure shows:



—13 —

The user uses the USB data cable equipped with the machine, one end is connected to the PC end, the other end is connected to the charger. Open the software to view and save the data of the four sets of batteries. How to Download the software:

1.Enter the EBL web link: http://www.eblmall.com/product/ebl-tc-x-pro-all-function-on

-battery-charger 2.Click Download Software.

■BATTERY ACTIVATION

For every installed battery, the TC-X Pro will activate the battery by charging it. Activate automatically for Li-ion batteries with protection board, which are instantaneous short circuit. For the unprotected batteries' battery which voltage is above 0.2V, the activation methods are as follows:

A. Put the batteries in the TC-X Pro. (During the process, it is normal that Li-ion batteries will be detected as Ni-MH batter-

B. When the voltage is above 2.75V, remove and reinstall the batteries and charge again. Note: The TC-X Pro is not recommended to use with over-discharged (zero volt) UNPROTECTED Li-ion batteries.

—14 —

■ IMPORTANT SAFETY INSTRUCTIONS

1.The TC-X Pro is compatible with batteries of varying sizes, therefore when charging certain batteries, manual adjustment of the battery's position within the slot is recommended, as to ensure solid contact is made between both sides of the battery and the charging slot's metal contact points. 2.The TC-X Pro is restricted to charging 3.7V Li-ion, 3.8V Li-ion, LiFePO4, Ni-MH/Ni-Cd rechargeable batteries only. Never use the TC-X Pro with other types of batteries as this could result in battery explosion, cracking or leaking, causing property damage or personal injury.

3. The TC-X Pro should be only used indoors or inside a motor vehicle and it cannot be use or store in the water, high humidity, direct sunlight and low or high ambient temperatures. 4.Do not disassemble or modify the charger.

5.Children, under the age of 18, should be supervised by an adult when using the TC-X Pro. 6.The TC-X Pro's safe operating temperature is between 0

7.Please use the TC-X Pro correctly according to this introduction manual to avoid product damage and personal injury. Any problem arising from improper use of TC-X Pro, our company will not bear any legal responsibility and economic disputes.

----15----

■ WARRANTY SERVICE

We provide 30 days worry-free money back and one year limited warranty.

The warranty is nullified in any of the following situations. 1.The product(s) is/are broken down, reconstructed and/or modified under unauthorized conditions. 2.The product(s) is/are damaged through improper use. 3. The product(s) is/are damaged by leakage of batteries. For further details of EBL's warranty service, please feel free to contact us: service@eblmail.com Website: www.eblmall.com



—16 —