

GX-6F

www.aofar.com



AOFAR BRAND CUSTOMER SERVICE SUPPORT: service@aofar.com

- English manual------Contact us: service@aofar.com
- Manuel en français ------ Contactez-nous: service@aofar.com
- Deutsches Handbuch ------ Kontaktieren Sie uns: service@aofar.com
- Manuale in italiano ------ Contattaci: service@aofar.com
- Manual en español ------ Contáctenos: service@aofar.com
- Manual em português ------ Contate-nos: service@aofar.com
- Nederlandse handleiding ------ Neem contact met ons op: service@aofar.com
- 日本語マニュアル ------ お問い合わせ: service@aofar.com



TABLE OF CONTENTS

1.	TABLE OF CONTENTS	3	_
2.	OPERATION INSTRUCTIONS	4	_
	Measurement range; Focus adjustment; Units switch; Instruction on usage; FLAG LOCK MODE		_
3.	PRODUCT SPECIFICATIONS	7	_
4.	DESCRIPTION OF THE SCREEN DISPLAY	8	_
5.	COMPONENTS NAME	9	_
6.	HOW TO WORK AND RANGING ACCURACY	10	
7.	GETTING TO START	11	_
8.	LIST OF ARTICLES	13	_
9.	USE SAFETY INSTRUCTIONS	14	_
10.	PRECAUTIONS OF LITHIUM BATTERY	17	_
11.	MAINTENANCE OF THE INSTRUMENT	18	_
12.	CONTACT US	18	_
13.	TROUBLE SHOOTING TABLE	19	_



2.OPERATION INSTRUCTIONS

Measurement range

Reflective range: 5~500 Y

Tree range: 5~400 Y


Flag range: 5~200 Y



Rotating the eyepiece until the reticle and object display to your eye clearly.

GX-6F range finder is constructed with an adjustable eyepiece

(+/-3 Diopter). People with different visions don't need to wear glasses, they can observe LCD with naked eyes.

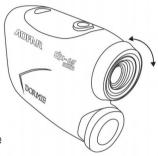



Units switch

To select yard or meter, just click "MODE" button quickly to change" Y" (yard) and "m" (meter). It can measure distance in yard or meter. The unit indicator is located in the lower right portion of the LCD.

Instruction on usage

1. Look at LCD through the eyepiece and place the aiming circle_(located in the center of view) on a target over than 5 yards away. Click Power button to turn on, you will see the display as right picture. Press Power button to lock onto flag, reading will display on LCD. (The laser rangefinder will auto power-off if no operation within 8 seconds.)

- 2. Non-slope design suits for golf tournament,
- 3. LCD data shows: Line of sight distance until auto power-off.
- 4. Tips: When target's background is complicated or difficult to measure by range mode, you can use flag lock mode.





FLAG LOCK MODE (WITH PULSE VIBRATION HAPPEN)

Lock mode sign : After you lock onto flag successfully, the circle on flag sign will shows. (Like image shows) **Method:** Pressing "POWER" button and scan from far to flag, at the same time, the circle on the flag will show you will get distance and feel vibration.






3.PRODUCT SPECIFICATIONS

GX-6F
93 x 38 x 73 mm
123g
CR2-3V
5∼500 Y
5∼400 Y
5∼200 Y
±1Y
6 Times
20mm
13mm
3,5mm
905nm
Class I
±3°
-10∼50℃
-20~60℃
IPX4 waterproof




4.DESCRIPTION OF THE SCREEN DISPLAY

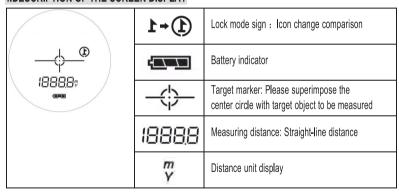

AOFAR

5.COMPONENTS NAME

- Laser Transmitting Objective Lens
- 2 Laser Receiving Objective Lens
- Units Switching Button/ "MODE" button (m: Meter/Y: Yard)
- 4 Power/Reading Button
- S Rotary Focusing
- 6 Observing Eye lens/LCD (Liquid crystal display)
- 7 Battery Cap
- 8 Sling Connecting Hole

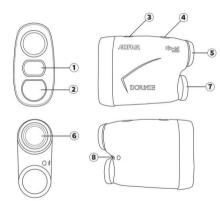

6.HOW TO WORK AND RANGING ACCURACY

The GX-6F range finder emits invisible, eye safe, infrared energy pulses. Sophisticated digital technology instantaneously calculates distances by measuring the time, which it takes for each pulse to travel from the rangefinder to the target and back to rangefinder.

The color, surface smoothness, size and sharpness of target will affect its reflectivity and range.

It is difficult to test in the following conditions and environments:

Raining or fogging / Target is too small / Low reflectivity of the measured object(dark color, complex shape, curved surface, water surface, glass surface, mirror surface, etc.) / Low battery.

7.GETTING TO START

- Remove the battery cap by rotating the cap counter-clockwise.
- Insert a CR2-3V battery.
- Put the negative pole of lithium battery into battery compartment first.
- Re-place the battery cap.

Display	Description
	Sufficient power available
	60%power left.
	Low battery indicator flash: Replace the battery now! *It can be turned on, but it can't shows any data. Meanwhile, vibration will be paused.

Note: It is recommended that the battery should be replaced once every 12 months.

Notice: Replace the battery when Low battery indicator shows.

If the " 🚾 I displays and flash on LCD, which means "low battery". It can be turned on, but it can't shows any data. Meanwhile, vibration will be paused.




Inserting/Replacing battery

- 1. Open the cap counter-clockwise
- 2. The positive pole "+"of the lithium battery CR2 should be placed outwards. (look at the picture)
- 3. Tightening the battery cap clockwise after installing the battery.





8.LIST OF ARTICLES

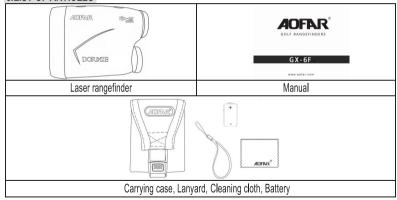

9.USE SAFETY INSTRUCTIONS


- Preventing your instrument from falling or getting damaged and never tamper it. If there is abnormal noise, please contact customer service department of our company.
- The operating temperature for this product is-10 °C −50 °C. Please use or keep the instrument within the operating temperature range and avoid using in a sharp temperature change environment.
- Please do not keep the product under the sunlight directly, high temperature or low temperature environment for a long time. (e.g. in trunk of car).
- Do not expose and aim at the sunlight.
- Do not use or store the product in the environment with strong electromagnetic radiation or magnetic field.
- If the product isn't be in use for a long time, please remove the battery and store it in a cool, dry place. It is
 also recommended to put this product in a dry box.
- Do not disassemble, modify or repair the product by yourself, the damage of the instrument and the irradiation
 of the laser may cause the visual damage and other harm.
- Please do not use it in dusty areas in order to avoid failures.
- Although the product has waterproof function, please do not get it wet or immersed in water intentionally.
 When there is moisture around the button, please operate it after wiping it off, and do not use it in water.
- Please confirm that the battery cover is closed tight when it be used.

Warning!

- Do not look at the Laser Transmitting Objective Lens.
- Do not measure eves of others.
- It is forbidden to detach this product yourself.
- It should be kept out of reach of the children.

Attention!

- It is normal for lens to be wet when the temperature changes suddenly. In this situation, remove the battery and do not use the device until it becomes dry.
- Moving from a cold place to a hot room of the product may dew on the appearance and internal parts. To avoid this phenomenon, please put the device in a waterproof plastic bag and take it out after its temperature has gradually increased.

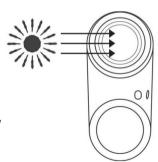



- To avoid failures ,do not store the product in :
- 1. Unventilated and humid places
- 2. The car or trunk exposed to the sun
- 3. Environment with humidity over 90%
- *Please don't preserve or place the lens under the sun!

It's radiation convergence function can harm the LCD

10.PRECAUTIONS OF LITHIUM BATTERY

To prevent leakage, heat and fire, etc.

Do not disassemble and modify the product by yourself.

Do not throw it into fire or store it in high temperature.

Avoid direct contact with metal objects such as coins or keys (in a pocket or bag).

- If skin touch the leaked liquid accidentally, please rinse under cool water immediately. If eyes or mouth touch liquid leaking, do not rub, Rinse under cool water and consult a doctor.
- It must be kept out of reach of children.

Observe treatment methods in your native policy when dropping a used lithium battery.



11.MAINTENANCE OF THE INSTRUMENT

Gently wipe the surface of lens with a clean, soft cloth to remove stains which would damage it.

If there are stains on the surface of the lens, which may damage lens. Do not touch the lens with your finger to protect the coating from the appearance.

12.CONTACT US

Email: service@aofar.com Facebook: Aofar Us	Website: www.aofar.com		
Register your VIP warranty: www.aofar.com/account/register			



13. TROUBLE SHOOTING TABLE

If LCD can't be turned on:

- Pressing Power button again.
- Check battery or replace it if necessary.(Determine if there is an insulator blocking the battery power)

If Distance measurement is abnormal:

- Please confirm whether the lens have dirt.
- Please make sure that the mark circle overlap your target.

It can be turned on, but the data will not be displayed:

- Low battery voltage please change the battery.
- Out of measurement range or less than 5 yards.
- Change the measurement target

Measurement error:

- M/Y is not switched
- Rain and fog and small target will also affect the measurement results

Battery power runs out quickly:

- Low ambient temperature will cause the battery power runs out quickly.
- If the battery has not been used for a long time after unpacked, the battery power will run out quickly.

AOFAR CA

Name:Range Finder | Manufacture Date: 2022 | Model: GX-6F | Serial Number: 6561801004

Company Name: CHANGZHOU JIANFU OPTOELECTRONIC INSTRUMENT CO.,LTD.

Address: No.2,Building 18, Chuangzhi Yungu,No.186 Hongxi Road Niutang Town, Wujin District,Changzhou City,Jiangsu,China

AOFAR

www.aofar.com