



AX6600 & AX6600-DUO WiFi-6 Wireless Router Manual

Contents

01 Product Overview.....	2
Product Mode:AX6600 as single router.....	2
Product Mode:AX6600-DUO as mesh router set.....	2
02 Product Hardware Description.....	3
Product Appearance Description.....	3
Button Description.....	3
LED Description.....	3
03 SINGLE ROUTER SETUP STEPS.....	4
04 MESH SETUP STEPS.....	4
Option 1: Wireless Networking.....	5
Option 2: Wired Networking.....	6
05 Management Methods.....	7
06 MORE SETTINGS.....	8
※ How to change the Internet access method.....	8
※ How to add a single router to a customized Mesh network.....	11
※ How to switch Router to Bridge mode.....	12
07 Frequently Asked Questions.....	13

01 Product Overview

Thank you for choosing our product.

Please read this electronic manual before use.

Product Mode:AX6600 as single router

AX6600 is an AP without Mesh function by default.Please refer to **SINGLE ROUTER SETUP STEPS** for network setup.

Product Mode:AX6600-DUO as mesh router set

AX6600-DUO contains two APs(Main AP and satellite AP) distinguished by the label on the backside of the device. Please refer to **SINGLE ROUTER SETUP STEPS** (for Main AP) & **MESH SETUP STEPS** (for Satellite AP) for network setup.

02 Product Hardware Description

Product Appearance Description




Button Description

Button	Function
WPS	Set the WPS process.
Reset	Short press (1 second) for reset the router; Long press (5 seconds or longer) for reset to factory default settings. * Operate after the LED is Blinking Green/Steady Green.
ON/OFF	Power on and off the router.

LED Description

LED Behavior	Scenario
Dark	No Power
Steady Red	Powering up
Blinking Red	No network cable connected
Blinking Green	Network connection in progress
Steady Green	Function normally and can access the Internet
Blinking Blue	WPS or Mesh pairing in progress
Steady Blue	Pairing successful

03 SINGLE ROUTER SETUP STEPS

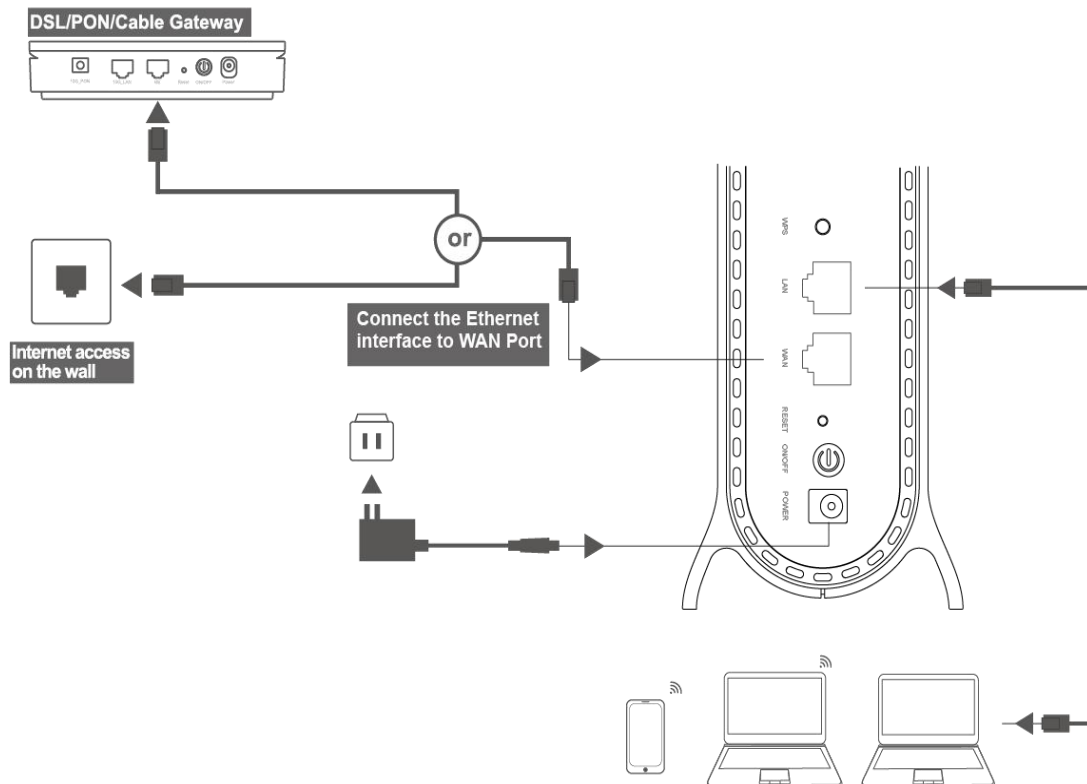

The Azores Router can be connected according to the diagram above.


01 Note the DSL/PON/Cable Gateway must be connected to the WAN port of Azores Router. When it is connected to the Internet, the LED light is steady green. If you can, place the Azores Router in an open area such as a table or a shelf.

02 Wired devices can be connected directly to LAN port for Internet access. Wireless devices can use the network name (SSID) & password (see the sticker on the backside of Azores Router) to connect to Internet.

04 MESH SETUP STEPS

Choose one of the following methods to setup your Mesh Set (AX6600-DUO).

◆ Option 1: Wireless Networking

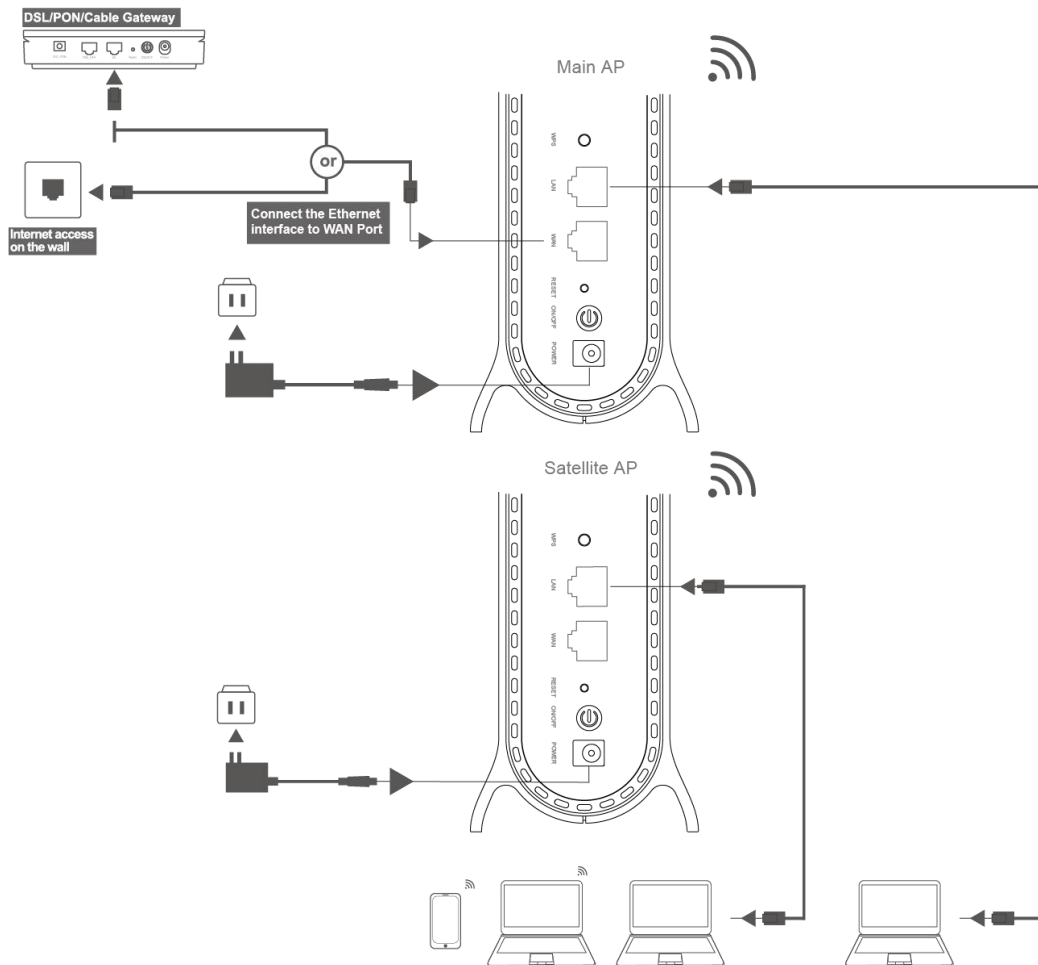


01 Main AP refers to **SINGLE ROUTER SETUP STEPS** to complete the connection.

02 Place the Satellite AP at a proper location based on your home layout.

03 Just power on the Satellite AP and wait for about 8 minutes. When the LED is Steady Green, then the Mesh networking is successful.

Tip: To optimize wireless performance, place the Satellite AP in a location that minimizes the barrier (such as wall, door, and floor) between the Main AP and Satellite AP. We recommend one wall/door/floor between the Main AP and Satellite AP.

◆ Option 2: Wired Networking

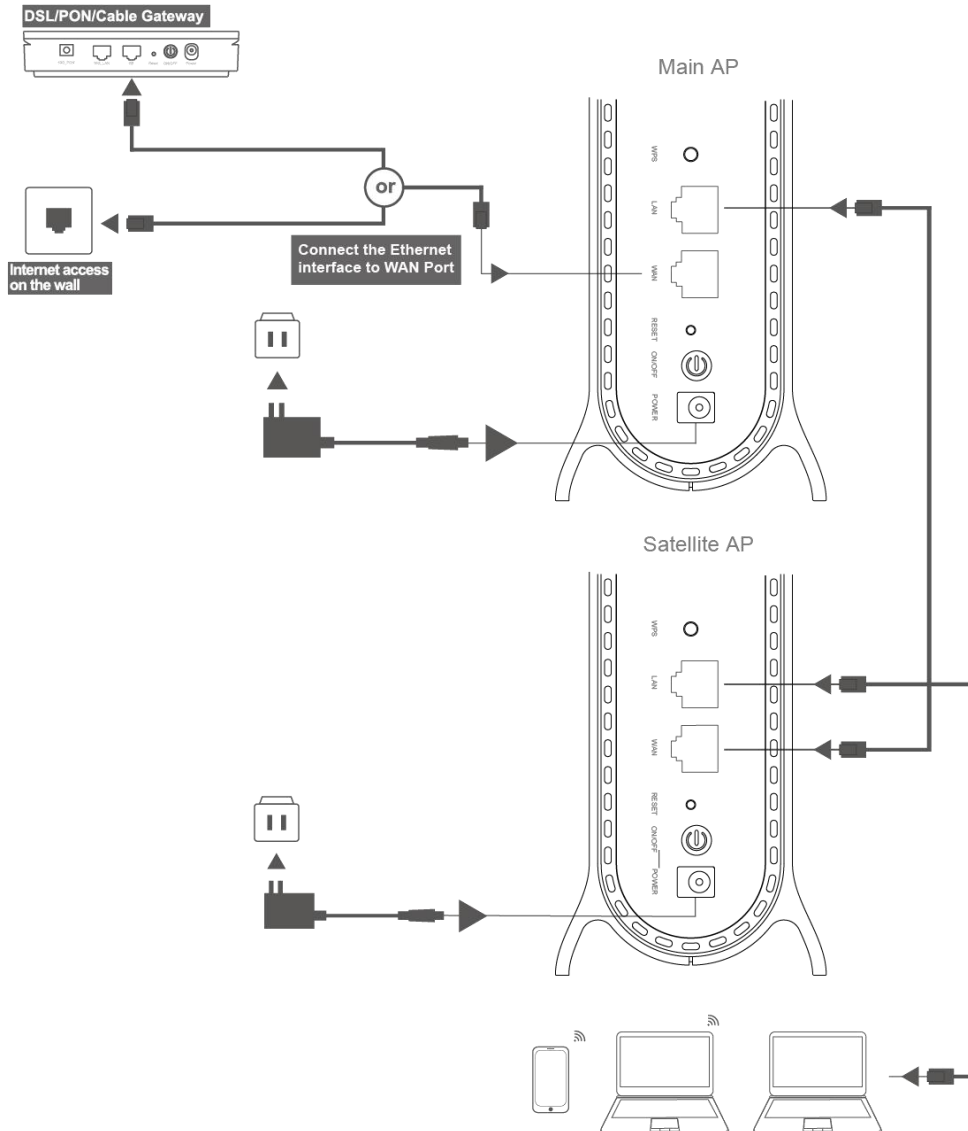

- 01 Main AP refers to **SINGLE ROUTER SETUP STEPS** to complete the connection.
- 02 Place the Satellite AP at a proper location based on the cable deployment in your home.
- 03 Connect the Satellite AP to LAN port of your Main AP via network cable.
- 04 Power on the Satellite AP. When the LED is Steady Green, then the Mesh networking is successful.

*Note:

- (1) If you know there is a spot in your home, where the Wi-Fi signal is the weakest. Try place the Satellite AP midway between the Main AP and the weakest spot.

(2) When Main AP and Satellite AP pairing successfully, the SSID and Password would be same, that is showing on the backside of Main AP.

05 Management Methods

Option 1:HTTP

- 01 Connect your device to the Router using wireless or wired connection.
- 02 Open an Internet browser and enter <http://192.168.0.1>(or <http://azoresrouter.com>). You can modify WAN configuration, router configuration, single SSID for 2.4G and 5G network, guest Wi-Fi network, and retrieve your wireless network status.

Option 2:Azores Router APP

- 01 Connect your Mobile device to Wi-Fi network according to the Wi-Fi SSID and password sticker on the backside of Azores Router.
- 02 Download mobile APP software by scanning the QR code below or visiting <https://azoresnetworks.com/pages/app-download> in the browser.




Scan QR code to download Azores Router APP

- 03 Follow the APP guidance to log in.
 - 04 Enter the “My Wi-Fi” menu to modify WiFi configuration or perform other operations.
- *Note: If you want to use the mobile device to perform other operations on the router, follow the instructions on the mobile APP.

06 MORE SETTINGS


※ How to change the Internet access method

01 Wireless access terminals (such as mobile phones, PAD, laptops, etc.) or wired access terminals can open the browser to visit <http://192.168.0.1>(or <http://azoresrouter.com>), and configure the router device.

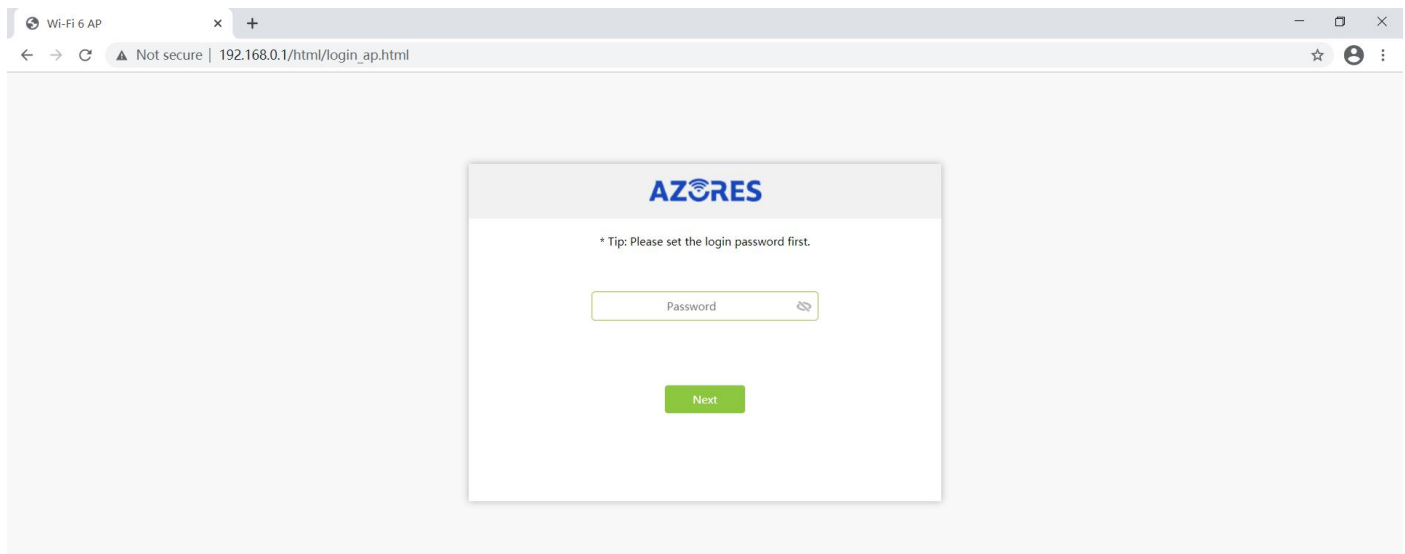

02 Password needs to be set for the first time login, click "Next". Please remember this login password.

* Tip: Please set the login password first.

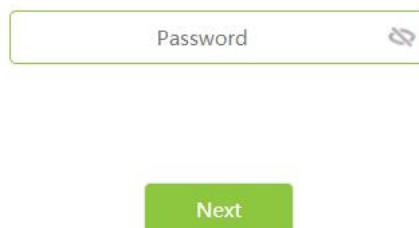

03 Set Internet configuration.

- If the home broadband service has been opened and the home router has been deployed, you can connect this Router device to the home router's LAN Ethernet port (or wall Ethernet port), you can select "DHCP", then click "Next".

DHCP

Next Skip

- If the home broadband service has been activated, but dial-up is required to activate the Internet, you can select "PPPoE", fill in the broadband account and password, and click "Next".

PPPoE

Account

Password

Next Skip

*Note:If you forget your broadband account password, you can inquire from the broadband operator.

*Note:"Skip" defaults to "DHCP" mode.

04 Set the Wi-Fi name and password.

The device selects "The password is the same as the login password" by default, clicks "Next" directly, which means that the default wireless password is the same as the login password;

* Tip: Please set the WiFi SSID and password

2.4G Wi-Fi SSID AZORES_021634

5G Wi-Fi SSID AZORES_021634

Dedicated Wi-Fi SSID AZORES_021634

The password is the same as the login password

Next Skip

- If you do not check "The password is the same as the login password", you can set a new Wi-Fi password and click "Next".

* Tip: Please set the WiFi SSID and password

2.4G Wi-Fi SSID	<input type="text" value="AZORES_021634"/>
5G Wi-Fi SSID	<input type="text" value="AZORES_021634"/>
Dedicated Wi-Fi SSID	<input type="text" value="AZORES_021634"/>
Password	<input type="password" value="....."/>

The password is the same as the login password

- If you click "Skip", the Wi-Fi name and password will still be the information shown on the backside of the device.

Tips: The Smart Connect function is default enabled, this AP will use same SSID for both 2.4G and 5G Wi-Fi. Smart Connect allows mobile devices to automatically roam between 2.4G and 5G Wi-Fi depending on signal strength.

05 Click "Complete" to complete the configuration.

* Tip: Click 'Complete' and complete the configuration

Prompt "Setup Succeed", "Confirm" to jump to the login page.



After "Confirm", the wireless terminal can reconnect to the new Wi-Fi name and password.

After completing the settings for the first login, you can use the login password you just set to enter and perform operations such as user password modification, Wi-Fi modification, firmware version check and so on.

It is recommended to check the firmware version and update to the latest version after completing the installation.


※ How to add a single router to a customized Mesh network

For duplexes, villas, and large-area residents, you can purchase multiple Azores Routers to join the Mesh network to improve WiFi network coverage.

If you have purchased AX6600 before, please refer to the following steps 01 and 02 to set an AP as Main AP firstly. And then continue to configure according steps 03,04,05.

01 (Previous item) Visit <http://192.168.0.1> (or <http://azoresrouter.com>) and using the login password to login.

02 (Previous item) "Router Mode Settings" select "Main AP", then click "Save", the device will restart automatically.

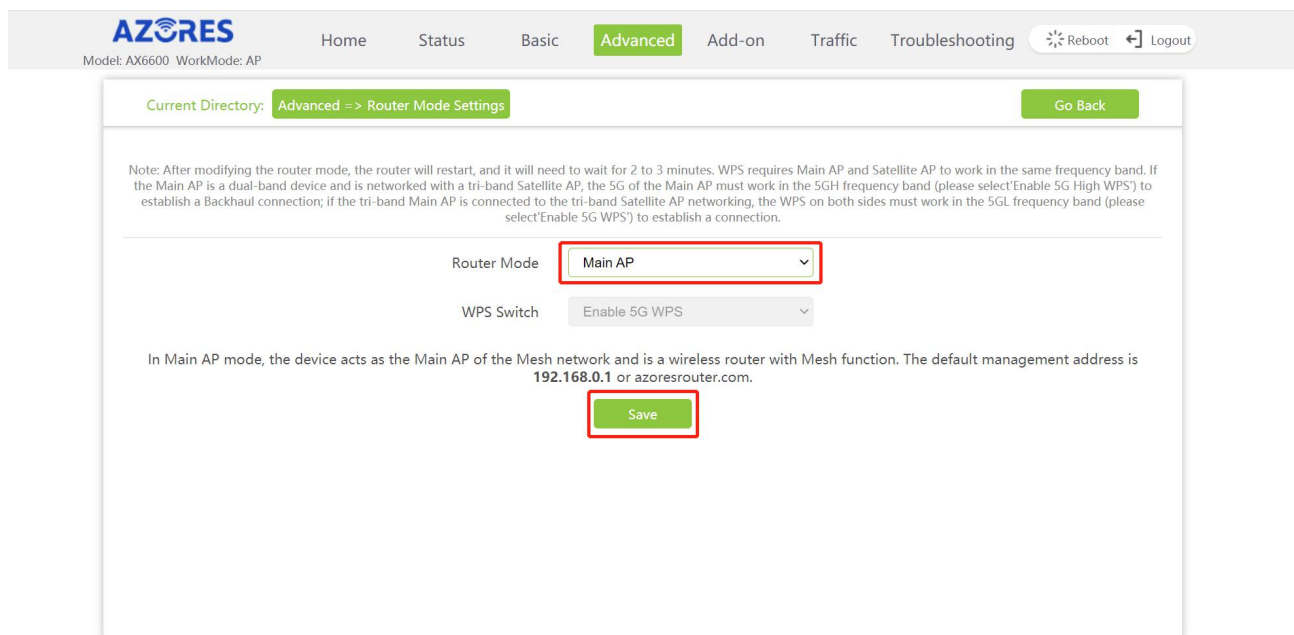

The screenshot shows the Azores Router web interface. At the top, there is a navigation bar with the Azores logo and menu items: Home, Status, Basic, Advanced (highlighted), Add-on, Traffic, Troubleshooting, Reboot, and Logout. Below the navigation bar, the current directory is shown as "Advanced => Router Mode Settings". A note explains that after modifying the router mode, the router will restart and it will need to wait for 2 to 3 minutes. The note also mentions that WPS requires Main AP and Satellite AP to work in the same frequency band. The main content area contains two dropdown menus: "Router Mode" set to "Main AP" and "WPS Switch" set to "Enable 5G WPS". Below these menus, there is a paragraph explaining that in Main AP mode, the device acts as the Main AP of the Mesh network and is a wireless router with Mesh function. The default management address is 192.168.0.1 or azoresrouter.com. A "Save" button is located at the bottom of the form.

If you have purchased AX6600-DUO before, there is already a Main AP, no need to perform steps 01 and 02. And then continue to configure according steps 03,04,05.

03 (New item) Visit <http://192.168.0.1> (or <http://azoresrouter.com>) and using the login password to login.

04 (New item) "Router Mode Settings" select "Satellite AP" and "WPS switch" select "Enable 5G

WPS", then click "Save", the device will restart automatically.

The screenshot shows the AZORES router web interface. The top navigation bar includes 'Home', 'Status', 'Basic', 'Advanced' (selected), 'Add-on', 'Traffic', and 'Troubleshooting'. There are also 'Reboot' and 'Logout' buttons. The current directory is 'Advanced => Router Mode Settings'. A note explains that after modifying the router mode, the router will restart and wait for 2 to 3 minutes. It also states that WPS requires Main AP and Satellite AP to work in the same frequency band. The 'Router Mode' dropdown is set to 'Satellite AP' and the 'WPS Switch' dropdown is set to 'Enable 5G WPS'. Below these, there is a 'Save' button. A note at the bottom explains that in Satellite AP mode, the device is used as a Satellite AP for Mesh networking and needs to be used in Mesh networking with same mode Main AP to extend your wireless network coverage. The default management address is 192.168.0.254. It also provides instructions for wired LAN port connection and WPS wireless pairing.

05 Start networking.

- If you choose wired networking, connect the network port of new item to the Main AP LAN port. The wired network is successful when the new single product indicator is steady green;
- If you choose wireless networking, place the new item near the Main AP, press both device WPS buttons for 1s, then release. The Main AP indicator will turn on in blue for 1 minute, then restore to the original state. The wireless pairing is successful when new added product indicator is steady green. Wait 3 minutes for information synchronization and the wireless network is successful. You can move the new product to the network expansion location.

※ How to switch Router to Bridge mode

- 01 Visit <http://192.168.0.1> (or <http://azoresrouter.com>) and using the login password to login.
- 02 Change the "Uplink mode" to "Bridge Mode" on the "WAN Settings" page and click Save.

The screenshot shows the AZORES router web interface. The top navigation bar includes 'Home', 'Status', 'Basic' (selected), 'Advanced', 'Add-on', 'Traffic', and 'Troubleshooting'. There are also 'Reboot' and 'Logout' buttons. The current directory is 'Basic => WAN Settings'. The 'Uplink mode' dropdown is set to 'Bridge Mode'. Below this, there is a 'Save' button. A note at the bottom explains that in bridge mode, if you need to enter the management page, please access azoresrouter.com in your browser when LED is in steady green status. Or you have to manually set the computer IP to the same subnet of below IP and access this IP in your browser when LED is in red blinking or green blinking status. The IP address 192.168.0.1 is highlighted.

07 Frequently Asked Questions

Q1 I replaced my old router with Azores Router. After connecting network cable from DSL/PON/Cable gateway to the Azores Router, the LED is keep flashing red. What should I do?

Answer: For some cable carriers limit the number of in-home device to one. This problem may happen if you replace your old router with Azores Router. In this case, you need to power down the cable gateway, leave it powered down for 15 seconds and power back it up. Afterwards, power down and on the Azores Router. Then you should see the LED turns steady green pretty soon.

Q2 Internet is not accessible.

Answer:

- (1) If the LED of AX6600 or Main AP in AX6600-DUO mesh set keeps Blinking Red, check whether its WAN port is connected to your Broadband Gateway (i.e. DSL/Cable modem, PON gateway) with a network cable.
- (2) If the LED of AX6600 or Main AP in AX6600-DUO mesh set keeps Blinking Green, check whether its WAN settings is all right or your Broadband Gateway service is all right.
- (3) If the LED of Satellite AP in AX6600-DUO mesh set keeps Blinking Red, try to reboot Satellite AP or restore the device to its default settings.
- (4) If the LED of Satellite AP in AX6600-DUO mesh set keeps Blinking Green, try to adjust the distance between Main AP and Satellite AP, and refer to **MESH SETUP STEPS** to re-operate.
- (5) If LED is Steady Green, try to reboot your computer or smart phone and then reconnect the router. Check whether your computer or smart phone gets an IP address.

Q3 How to restore the device to its default settings?

Answer: When Azores Router has started, pushing the “Reset” hole on the backside of the device with a needle. The LED starts to flash green and hold for 5 more seconds. Release

when the LED turns off. Wait about 2 minutes for the device to restart.

Q4 Azores Router APP cannot control Azores Router.What should I do?

Answer: Please check your phone is connected to WiFi normally, and use the correct password for login.

Q5 How to access the Satellite AP web management page(GUI) if the mesh pairing failed?

Answer:Manually set the PC IP address to 192.168.0.X(e.g.192.168.0.100),the subnet mask is 255.255.255.0.Open the browser and enter http://192.168.0.254.

Q6 If I want to switch the Mesh Router Set to wireless networking after successful wired networking,What should I do?

Answer: Disconnect the wired connection between the Satellite AP and the Main AP.It will be OK when the LED is Steady Green.