


折页尺寸: 140x297mm
总尺寸: 420x297mm

1 Accessories list

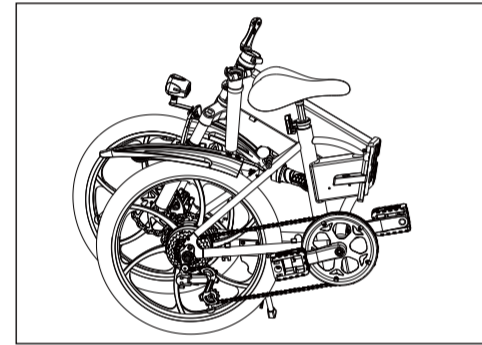
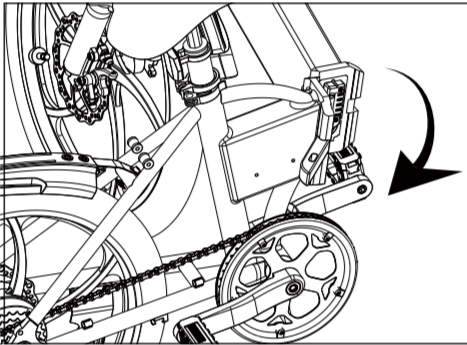
1. Mobile Phone Stand 2. Pedals 3. Chargers 4. Foot support 5. Air Pump
6. 5mm Hexagon screw driver 7. 6mm Hexagon screw driver 8. Multi-type wrench



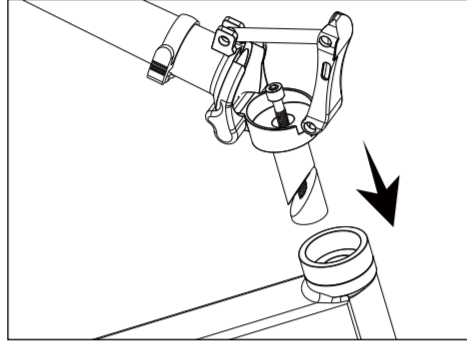
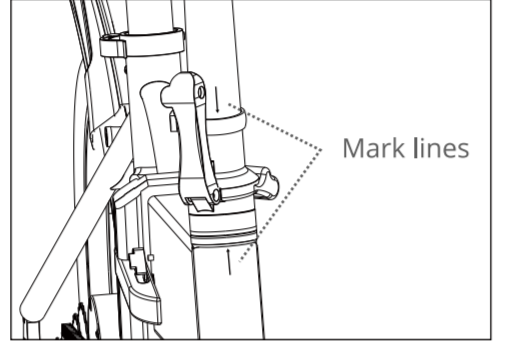
2 Installation Guide

Depending on the model, some steps have already been installed, just check it.

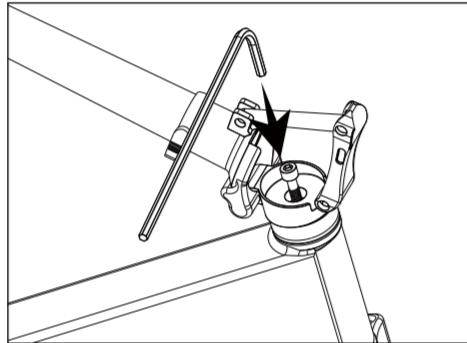
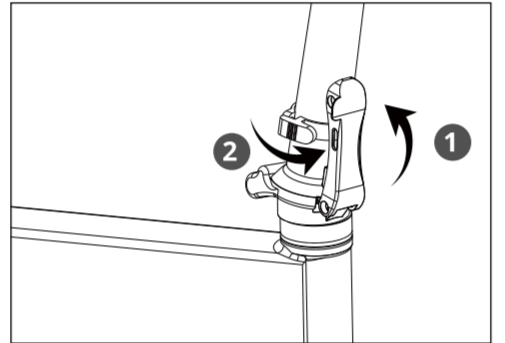
1. After opening the carton, take out the accessories, tools and bicycle 2. Unroll the body

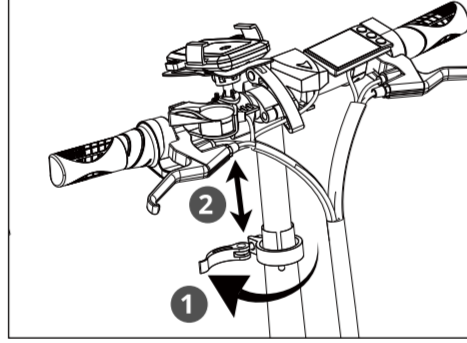
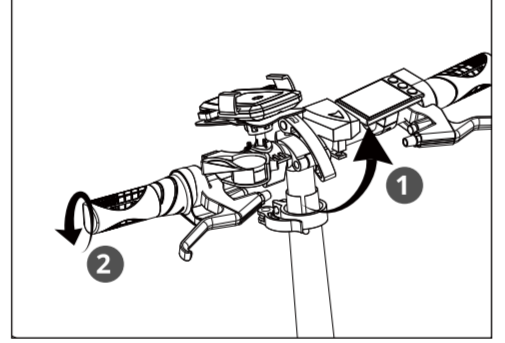
7. Place the head tube into the front fork head tube 8. Straighten the head, confirm the arrow on the label aligns the mark lines

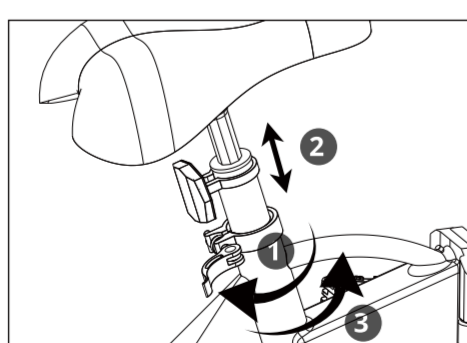
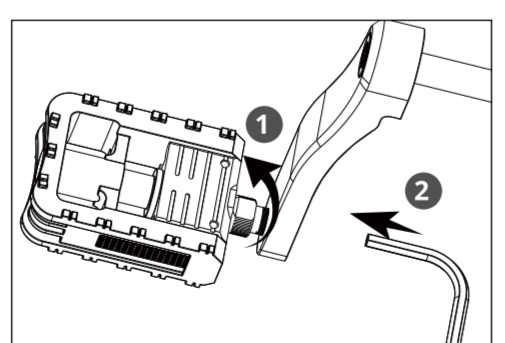
9. Open the lock firstly. After alignment, put down the tube, use the 7 tool to lock the screws 10. Put the tube up, close the head lock, snap the safety lock into the head lock

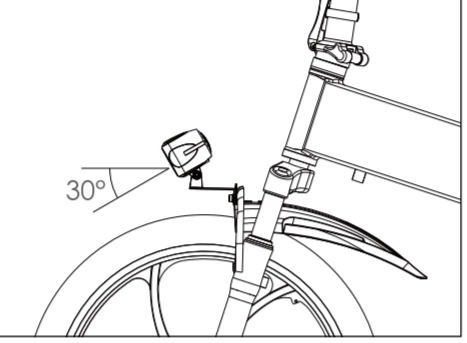
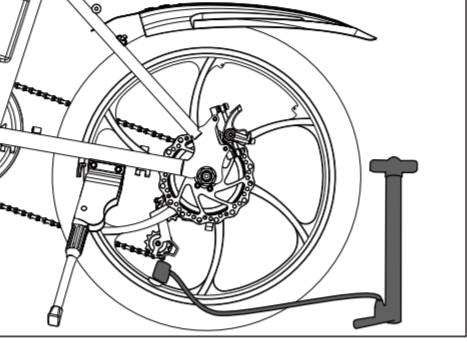
11. Open the handlebar lock, adjust the height of the head, and then lock tightly. 12. Open the cross handle lock, adjust the direction of the head grip, and then lock tightly.

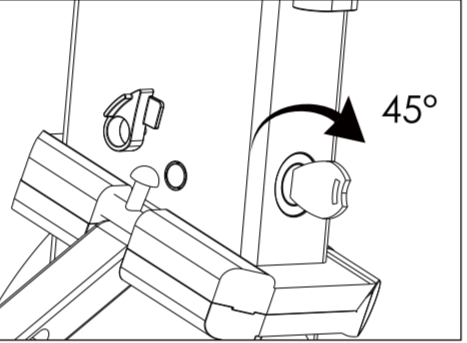
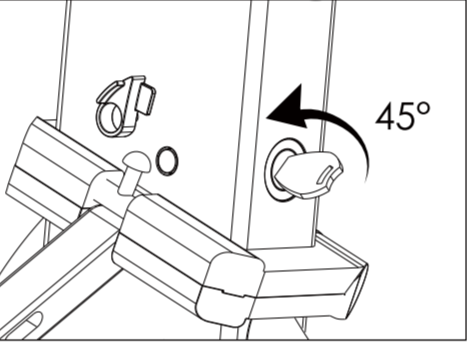
13. Insert the saddle into the saddle tube. Adjust the height of the saddle, and then lock tightly. 14. Take out the left and right pedals, use the 7 tool to install the pedals on the crank

15. Turn the headlight to the front 30 degrees down position, use the 8 tool to twist the screws. 16. Finish the installation, use the pump to inflate the tires.

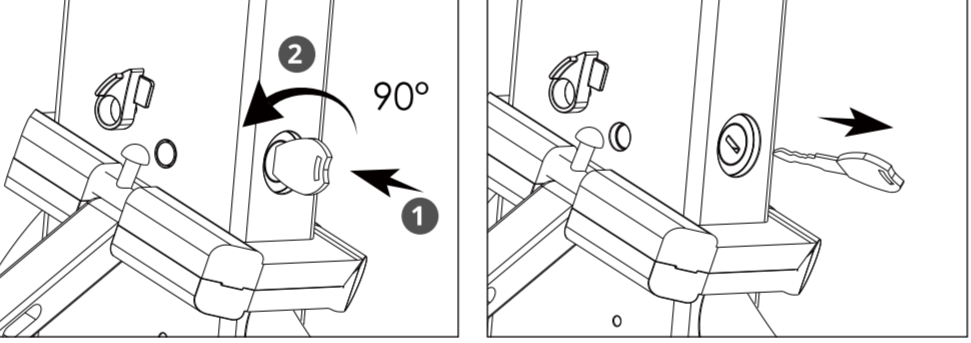



17. Before using the bicycle, insert the key and twist 45° counterclockwise, the battery has been started. 18. Finished using the bicycle, turn the key 45° clockwise, the battery has been disconnected, and take out the key.

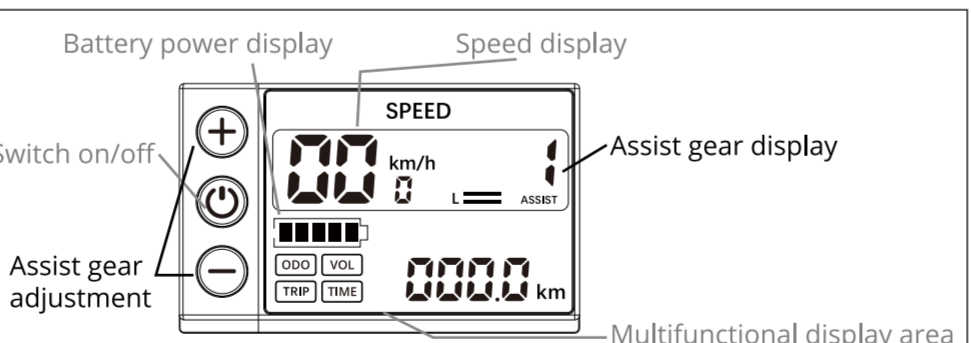



19. The step of removing battery, insert the key, press upward and then rotate 90° clockwise.

Note: Remove the key firstly, and then take out key and then take out the battery to avoid damaging the key.



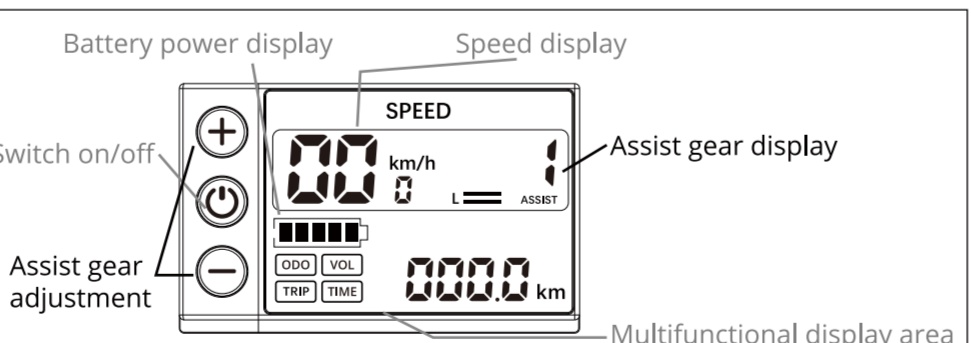
Note: (Assist gear instruction)
0 gear without power, driven by pedal.
First gear to pedal power, no power to handle.
Second gear medium power assist.
Third gear high speed power assist.



Battery power display Speed display

Switch on/off Assist gear adjustment

Assist gear display Multifunctional display area



正面

ADO EBLKE

Quick Installation Guide

E-mail: support@adoebike.com
ADO official website: www.adoebike.com



反面