 





Quick Guide

Chime for Video Doorbell

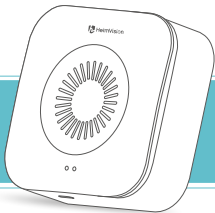

Please read this guide carefully before use and keep it well for future reference.

 PRODUCT OVERVIEW

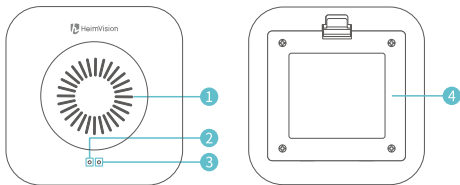


① Speaker

② Pairing Indicator


③ Working Indicator

 ④ Battery Compartment

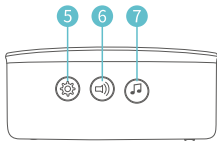

5 Reset

 6 Volume \pm

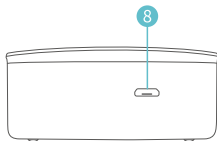

7 Ringtone

 
8 Micro USB Port

PAIR THE CHIME WITH THE DOORBELL


Step 1:

Install 3 pieces of AA batteries into the battery

compartment of the chime, or connect the chime with a socket via a micro USB cable.

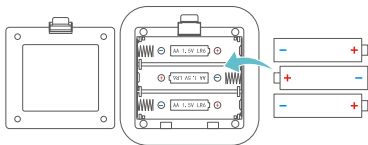


OR

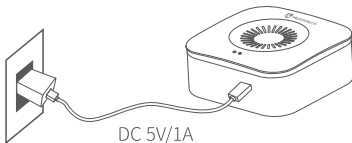 


Step 2:

 Press the **Reset Button** on the chime **ONLY ONCE** and the **Paring Indicator** will start to flash red.

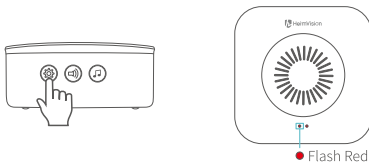

Step 3:

 Press the **Doorbell Button** once to start pairing.



Step 4:

You will hear two times of "ding-dong" from the chime, and the **Working Indicator** will flash blue quickly, then be off, which indicates a successful pairing.





Tips:

- * The **Pairing Indicator** will be off if there is no doorbell paired within 30s; press the **Reset** button on the chime once to be ready for pairing again.
- * Press the **Ringtone** button to select a tone for your chime.
- * Press the **Volume** \pm button to adjust the volume levels of the ring.
- * To unpair the chime with the doorbell, please press and hold the **Reset** button on the chime for 5s to reset it. The **Pairing Indicator** will flash red for three times, then be ready for pairing again.



CUSTOMER SUPPORT

North America

support@heimvision.com

United Kingdom

support.uk@heimvision.com



www.heimvision.com



[@HeimVisionOfficial](https://www.facebook.com/HeimVisionOfficial)



[@heimvision_official](https://www.instagram.com/heimvision_official)

Model No.: Jingle 3