BESTTEN[®]


Outdoor Countdown Timer with Remote, Dusk to Dawn Light Sensor, 2 Grounded Outlets and 6-Inch Cord



Specifications

AC Outlet	2 Grounded
Power Cord	6-inch SJTW 14AWG/3C
Input	15A/125V
Max Rating 1875W Resistive/	1250W Tungsten/1/2 HP/TV-5
Housing	Fire Resistant PC(V-2)
Remote Control Range	80-foot
Battery	23A(12V)
Working Temperature	13 to 104°F(-25 to 40°C)

Features

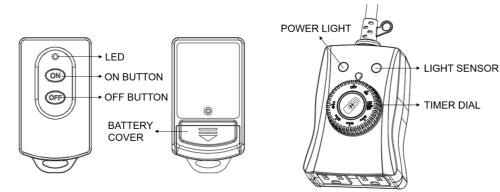

For first time use:

- The indicator on the outlet will blink for 29 seconds once the outlet is powered on.
- Within 29 seconds, press the "ON" on the remote to connect it with the outlet, then the pair is finished.

Note:

- The timer program will be overrided if remote RF control is activated. Reset the timer dial to resume the timer program.
- One outlet can be paired with max 1 remote. If the 2nd remote is paired, the outlet will unpair the 1st remote

Page 2

Timer Instruction

Simply rotate the timer dial:

OFF	Power remains Off
ON	Power remains On
DUSK-DAWN	Power On at dusk, Off at dawn, repeat daily
2Hrs	Power On at dusk for 2 hours, then Off, repeat daily
4Hrs	Power On at dusk for 4 hours, then Off, repeat daily
6Hrs	Power On at dusk for 6 hours, then Off, repeat daily
8Hrs	Power On at dusk for 8 hours, then Off, repeat daily

NOTE: Locate the outdoor timer away from other light sources. If the outdoor timer is too close to other light source or if the photocell is facing a light source such as a porch light or street light, the photocell may turn off the fixture out of the timer settings. If this happens, relocate the outdoor timer or eliminate those light sources.

Reminder:

After dusk, a temporary light source (like headlights, flashlights and other external lights) will not interfere with the active timer program.

But,

- If the timer (in dusk to dawn program) receives a temporary light source with continuous 8 seconds or above, the timer will turn off until darkness is restored.
- If the timer (in 2, 4, 6 or 8H mode) receives a temporary light source with continuous 8 seconds or above, the timer will turn off. When this temporary light source is gone, the timer will turn on and restart 2, 4, 6 or 8H count down mode.

Page 3

Safety Information

CAUTION: Overloading this product could increase risk of fire. Use only with a total electrical draw of maximum 15 amp/1875 watt Christmas tree or other seasonal lighting products.

User Manual

- * If using an outdoor-use cord for an extended period of time (greater than 90 days), please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a licensed electrician for proper installation of permanent wiring.
- * Suitable for indoor/outdoor use-store indoors while not in use.
- * Plug into ground fault protected receptacle only.

Warranty

BESTTEN warrants to the original customer that this product is free of defects in materials and workmanship for one year from the purchase date. Within this period, simply contact BESTTEN CARE with proof of purchase and reason of claim. We will replace the product for free.

Any product which is subject to misuse or accidental damage is excluded from this warranty.

support@ibestten.com 1-800-358-6160 (Mon-Fri 9AM-5PM PST)

For more products from BESTTEN, please visit our website www.ibestten.com.

BESTTEN Products

For more products from BESTTEN, please visit our website www.ibestten.com



USB Wall Outlet Surge Protectors



Outdoor Power Stakes



Outdoor Timers



 
Remote Control Outlets



Metal Power Strips



Light Switches



Screwless Wallplates



Stainless Steel Wallplates



Receptacles



CONFORMS TO UL STD. 60730-1 CERTIFIED TO CSA STD. E60730-1

Model: USOT-2R-2A

MADE IN CHINA

Version 1.3