# Happy & Polly





# GHOST DRINKING CAT WATER FOUNTAIN

# **READ BEFORE YOU START**

Please identify and sort all components shown below. For any issues during installation, please ask for assistance at <u>service@happyandpolly.com</u> or check our YouTube Channel <u>https://www.youtube.com/channel/UCbPD98rZ-jOYrTCQA\_0eNLg</u>.

# **SAFETY GUIDELINES TO PREVENT INJURIES**

• When using electrical appliances, basic safety precautions must always be followed to avoid the risk of fire, electric shock, and/or injury to persons.

- To avoid the risk of injury, close supervision is necessary when any appliance is used by or near children.
- To protect against electric shock, do not place the electrical power cord or plug in water or other liquids.
- Indoor household use only. Do not use outdoors or run dry.
- Unplug the fountain, then disconnect the in-line plug.

• To avoid the risk of electric shock, do not place or store an appliance where it can fall or be pulled into a bathtub or sink.

Always unplug an appliance when it is not in use, before putting on or taking off parts, and before cleaning.
Do not use an appliance for anything other than its intended use.

• Do not allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard plastic protector) at any hardware store.

• Do not attempt repairs on the pump.

• To avoid the possibility of the plug or electrical outlet getting wet, the electrical outlet should always be above the level of the fountain.

• If an extension cord is necessary, an extension cord with a proper rating should be used.

### **IMPORTANT**

• Please identify and sort all components shown below.

• Only rinse the filter with water. Never wash the filter with soapy water as the soap residue will seep into the filter permanently.

• Use replacement filters authorized by Happy & Polly only. Using unauthorized filters may void the warranty.



A Detachable Pump × 1



B Carbon Filter × 1



C Filter Box  $\times$  1



Fountain With Detachable Lid × 1

#### **ASSEMBLY INSTRUCTIONS**



Control water flow with +/- button. "+" for max flow, "-" for min flow. Detach the pump.





Insert the carbon filter.

Recover the pump.



Assemble the pump and filter box. The long side of the filter is connected to the sucker.



Make the USB cable through the fountain. Plug the cable into the regulator.





Make sure the fountain is sealed by the rubber plug tightly.



Put them in the middle of the fountain.



Adjust the cable.

#### **CARE INSTRUCTION:**

· When using for the first time, please rinse the filter box for 2 minutes to flush out impurities caused by collision.

- $\cdot$  Clean the Water Fountain every 7 days.
- $\cdot$  To achieve the ideal filtering effect, it is recommended to replace the filter box once a month.

© Happy & Polly www.happyandpolly.com