

# HOTT<sup>®</sup>

## 数字媒体播放器



### HA09 使用说明书

感谢您购买本公司 MP3。使用前，请详阅本使用说明书，  
阅后请妥为收存，以备日后查阅。



# 目 录

<b>目录</b> .....	1-2
<b>声明</b> .....	3
<b>注意事项</b> .....	3
<b>基本功能</b> .....	3
<b>产品外图</b> .....	4
<b>使用前准备</b> .....	4
按键功能 .....	4
按键动作定义 .....	4-5
开关机 .....	5
电池低电 .....	5
<b>与 PC 连接</b> .....	5
系统配置 .....	5
与 PC 连接 .....	6
主界面 .....	6
<b>蓝牙</b> .....	6
菜单选项 .....	6
<b>音乐</b> .....	7
音乐主菜单列表界面 .....	7
音乐播放界面 .....	7
音乐子菜单选项 .....	8
子菜单（正在播放） .....	8
子菜单（暂停播放） .....	8

<b>视频</b> .....	8
菜单选项 .....	9
<b>录音</b> .....	9
菜单选项 .....	9
<b>图片</b> .....	10
菜单选项 .....	10
<b>收音机</b> .....	10
菜单选项.....	10
子菜单选项.....	11
<b>电子书</b> .....	11
菜单选项 .....	11
<b>文件夹视图</b> .....	12
菜单选项 .....	12
<b>工具</b> .....	12
<b>设置</b> .....	13
<b>计步器</b> .....	14
<b>疑难解答</b> .....	14
无法下载文件.....	14

# 声明

1. 在未经我公司事先书面许可的情况下，严禁以任何形式复制、传递、分发和存储本手册中的任何内容。
2. 在编制本手册过程中已经力求内容的正确与完整，但并不保证本手册没有任何错误或遗漏。本公司将不对本手册可能出现的错误或者疏漏负责。
3. 遵循持续发展的策略，因此，我们保留在不预先通知的情况下，对本手册中描述的任何产品进行修改和改进的权利。
4. 在任何情况下，我们均不对任何数据或收入方面的损失，或任何特殊、偶然、附带、或间接损失承担责任，无论该损失由何种原因引起。

**注意事项:** 本节内容是为了使用者正确使用播放器, 确保播放器性能良好而设, 请认真阅读并遵守。

 
- λ 切勿严重撞击主机。
- λ 切勿接触苯、稀释剂等化学物品。
- λ 请不要靠近强磁场、电场。
- λ 请避开直射光线或发热器具。
- λ 切勿自行拆卸、修理、改造。
- λ 骑车、驾驶汽车及摩托车时，请勿使用播放器及耳机，以免造成危险。
- λ 切勿以较大音量收听，以免对听力造成不良影响。
- λ 废弃包装、电池、旧电子产品，请分类妥善处理。

## 基本功能

- 1、音乐播放：支持 MP3、WMA、等格式播放。
- 2、录音支持：支持 FM、MIC 录音。录音格式支持 MP3、WAV。
- 3、图片浏览支持：支持 JPEG、BMP、等格式的浏览
- 4、视频播放支持：支持 AMV，AVI（需要通过转换工具转换，）。
- 5、支持 FM 收音功能。
- 6、文本文档阅读支持。
- 7、支持计步器。
- 8、蓝牙功能。

- 9、工具支持：日历、秒表等功能。
- 10、 设置功能：支持各功能属性的显示及设置。
- 11、 FAT32、ExFAT/Fat64 文件系统支持。
- 12、 支持 TF 卡。

## 产品外观图

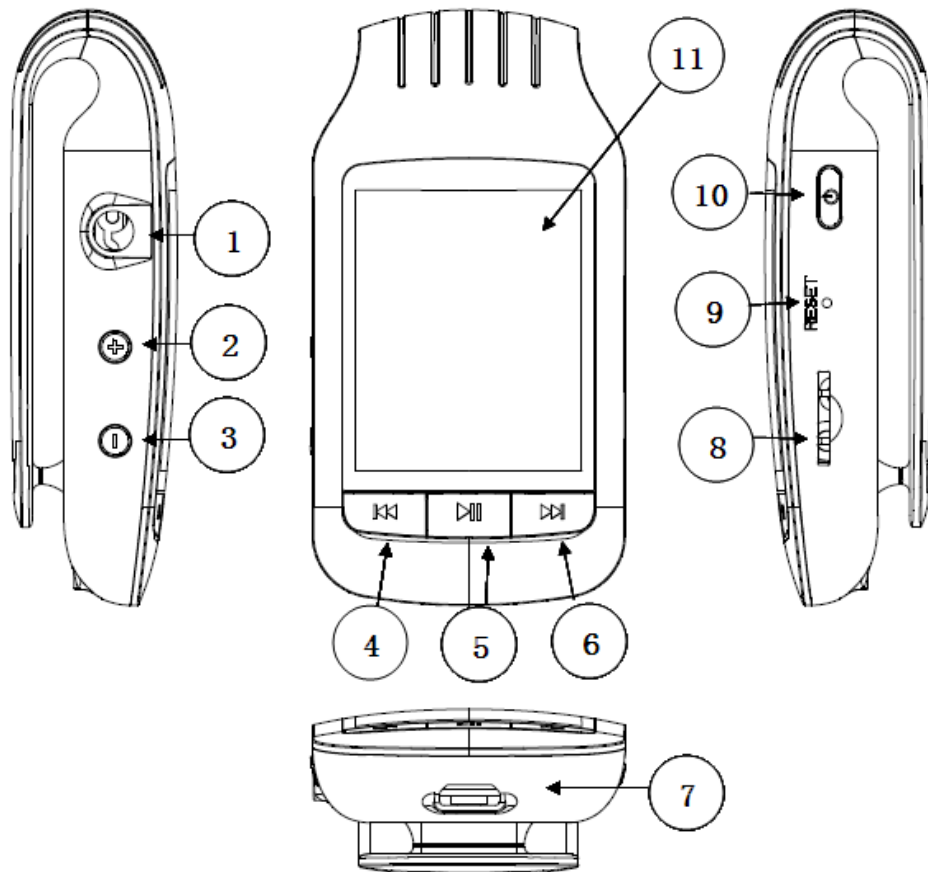

## 使用前准备

### 按键功能

- 1. 耳机接口, 音频输出
- 2. **Vol+**键：长按音量键连续加大音量，短按一级一级加大音量
- 3. **Vol-**键：长按音量键连续减小音量，短按一级一级减小音量
- 4. **⏮** 键：选择前一个选项或文件。

5. **▶▶ 键**：播放/停止键。在菜单选项下，短按相当于确定键。长按该键亦可返回上一个界面，再长按一级一级往上返直到主界面。
6. **▶▶ 键**：选择下一个选项或文件。
7. **USB 接口**：支持 2.0 数据传输
8. **TF 卡槽**：支持外部存储器
9. **RESET**：复位重启
10. **开关机键**：长按为开关机功能，短按为菜单功能，弹出播放选项菜单，如无特别说明，其功能为在任何功能下
- 11 **显示屏**：显示主菜单界面

## 按键动作定义：

动作	基本操作
短按	按键时间小于1.2秒
长按	按键时间大于2秒
按住	按下按键并一直保存此状态

注：本手册中未经特殊说明均指短按。

## 开关机

将机身侧部开关键长按为开关机

当系统空闲时间达到用户设定关机时间时，播放器自动关机。

**注：当播放器与 PC 连接或者充电时，此功能无效。**

## 电池低电

当电池出现低电后，播放器提示低电一次，然后自动关机进入待机状态，此时不要重新开机，请及时充电。建议充电器电流规格选择 500mA。

## 与 PC 连接

### 系统配置

操作系统：Windows XP&Vista/7/8

CPU: 至少为 Pentium-133MHz

内存: 至少 32MB

硬盘空闲空间: 至少为 100MB

视频卡: 640\*480 以上模式, 至少为增强色 (16 位)

USB端口

光盘驱动器

## 与 PC 连接

在开关机状态, 用随机提供的 USB 线连接 PC 与本播放器, PC 会提示出现**可移动磁盘**选择窗口。选择相应的文件夹互相拷贝文件即可。

## 主界面

开机后即可进入系统主界面

## 蓝牙

按**▶**进入蓝牙界面, 长按**▶****退出蓝牙界面**。

 
 
**菜单选项:** 按 **◀** 和 **▶** 上下浏览菜单、选中选项, 按**▶**进入相应菜单功能。共有“蓝牙开关控制”, “搜索设备”, “设备列表”。

**蓝牙开关控制:** 按**▶**进入, 控制蓝牙打开和关闭, 按 **◀** 和 **▶** 选择;

**搜索设备:** 按**▶** 进入, 会出现正在搜索提示界面, 搜索到设备后自动显示到设备列表界面。

**设备列表:** 按**▶** 进入, 可以进行设备操作。按**▶** 选中设备, 进入设备菜单界面, 根据当前设备状态列出可以进行的操作, 包括: 配对, 取消配对, 连接。

有设备进入连接状态后, 长按**▶** 退出到主界面。在音乐界面上按**▶** 进入音乐播放界面, 可以在主盘目录和卡目录中选取歌曲播放

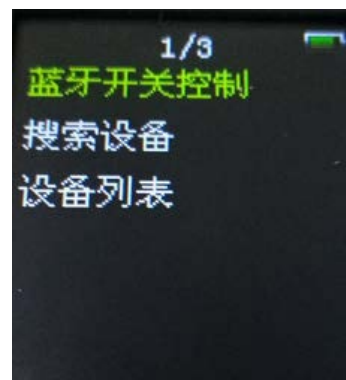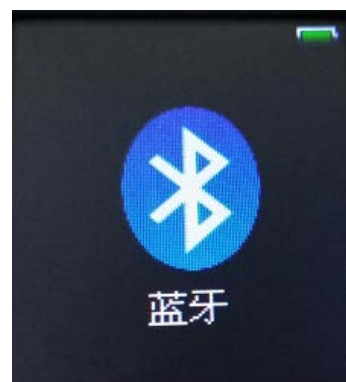



# 音乐

按▶进入音乐界面，长按▶退出音乐界面。

 
支持断点续播以及后台播放，断点播放指继续从最后一次正在播放歌曲的退出点播放，仅在正在播放列表内被支持；后台播放是指可以在播放歌曲的同时进入与音频无冲突的应用。



## 音乐主菜单列表界面

按◀◀和▶▶键上下切换、选中选项，按▶键进入。

菜单选项包括：所有歌曲，断点播放，演唱者，专辑，风格，播放列表，创建播放列表等。

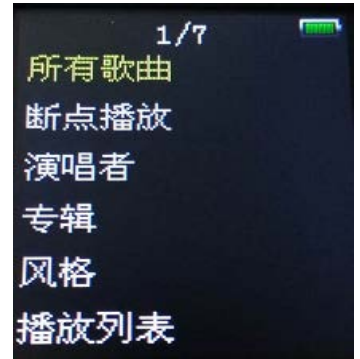

**所有歌曲**：显示**全部随机播放**以及存储器中的所有歌曲列表。

**断点播放**：断点播放指继续从最后一次正在播放歌曲的退出点播放。

**演唱者**：按照名字首字拼音顺序排列出内部存储器中所有歌曲的演唱者。

**专辑**：按照专辑名称的首字拼音顺序显示。

**风格**：根据下载音乐内置的风格显示。


**播放列表**：包括“现在播放列表[1]”“现在播放列表[2]”“现在播放列表[3]”。

**创建播放列表**：增加新的播放列表。

**主盘目录**：播放主盘文件

**卡目录**：播放外部存储器中的文件

## 音乐播放界面

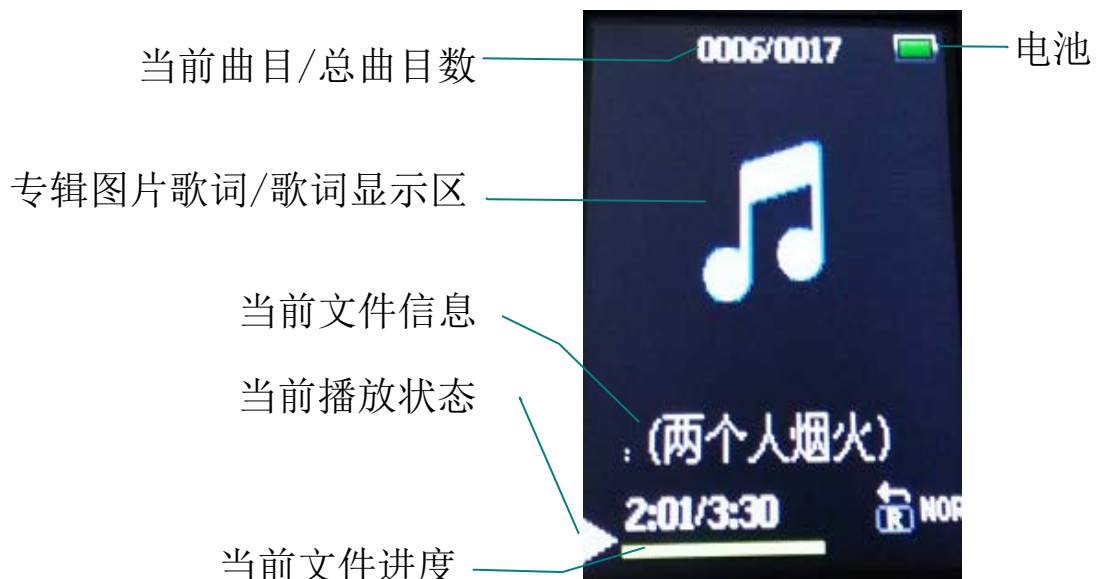 

按▶在音乐播放和停止间切换，短按◀◀和▶▶则为前一个文件或下一个文件。长按◀◀和▶▶则可快进快退。


短按Vol+或Vol-进入音量界面，短按或长按Vol+和Vol-调节音量大小，音量范围0~31。

按开关键，进入子菜单界面。

## 音乐子菜单选项

 1. 在音乐播放或停止播放状态下按**开关键**，系统进入子菜单，菜单选项包括：**播放模式**，**声音设置**，**加入播放列表**，**从播放列表中删除**，**删除**，**书签**。

2. 按◀◀和▶▶选择浏览菜单。按**开关键**返回上层界面，按▶确认选项（其它应用同），按▶返回上音乐界面。

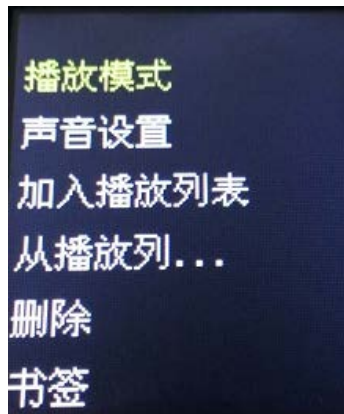

## 子菜单（正在播放）

**播放模式**：选中**播放模式**，显示“音乐来源于…，重复播放，随机播放，复读设置”；

**声音设置**：选中**声音设置**，显示“均衡器，变速播放，音量限制”；

**加入播放列表**：选中**加入哪个播放列表**，显示“现在播放列表[1]”；“现在播放列表[2]” “现在播放列表[3]”

**从播放列表中删除**：选中**从播放列表中删除**，显示“现在播放列表[1]”；“现在播放列表[2]” “现在播放列表[3]” **删除**：选中**删除**可以删除当前播放的歌曲。

**书签**：选中**书签**，显示“添加书签，转到书签，删除书签”。

## 子菜单（暂停播放）

## 同子菜单（正在播放）

## 视频

按▶进入视频界面，长按▶退出视频界面。

按◀◀和▶▶上下浏览文件，选中文件，按▶进入视频播放界面。插入扩展卡情况下可以选择主盘目录和卡目录中的文件进行播放



支持断点续播

## 菜单选项

播放或暂停状态下，按开关键进入菜单选项，如果是正在播放视频，则后台暂停播放。进入菜单选项，包括：**亮度，重复播放，删除视频**和**创建播放列表**。

**亮度**：按▶进入亮度调节，按◀◀和▶▶调节亮度的大小，按▶确定调节。

**重复播放**：按▶进入重复播放，显示“重复播放关，单曲重复，全部重复”。

**删除视频**：删除当前播放的视频；

**创建播放列表**：搜索视频创建列表

## 录音

按▶进入录音界面，长按▶退出录音界面。

按◀◀和▶▶上下浏览菜单、选中选项，按▶进入相应菜单功能。

### 菜单选项

按▶进入录音模式中。菜单选项包括：开始语音录音，录音库，存储器，录音格式和录音设置。

按▶开始/暂停/录音。长按▶，退出录音界面，选择“是/否”来保存或不保存当前录音，并返回到菜单选项界面。

 
**开始语音录音**：按▶进入录音界面并开始录制语音文件。

**录音库**：进入录音库，如还未录制语音文件则提示“未找到语音录音”，如已经录制文件，则选择录制的文件播放，也可全部删除录制的语音文件。

**储存器**：插卡的情况下，出现此选项，录音保存可以选择内置存储器和外置存储器

**录音格式**：进入录音格式选择 mp3 或 wav。


**录音设置**：录音比特率，分曲 avr 模式,。

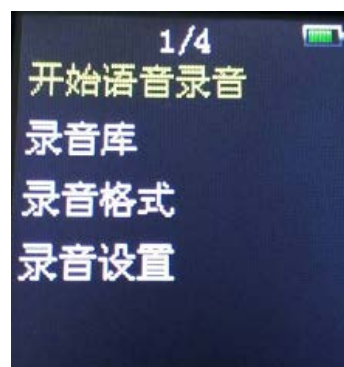

## 图片

按▶进入图片界面，长按▶退出图片界面。

 按◀◀和▶▶上下浏览文件，选中文件，按▶进入图片播放界面。插入扩展卡情况下可以选择主盘目录和卡目录中的文件进行播放

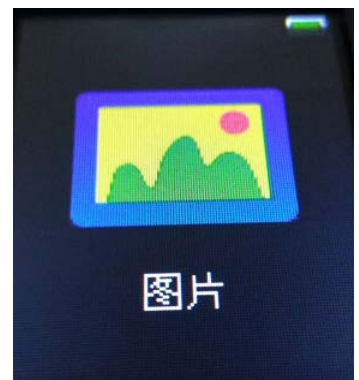

### 菜单选项

子菜单项：按开关键进入，显示**亮度，背光计时器，幻灯片放映设置，删除图片，创建播放列表**。除背光计时器和幻灯片放映设置外，其它菜单项功能和操作方法与前面的应用相同。

**背光计时器**：按▶进入，显示 10 秒/20 秒/30 秒/始终亮起四个选项供选择。

**幻灯片放映设置**：按▶进入，显示“每张幻灯片的时间，重复播放，随机播放，缩略图模式”。

## 收音机

按▶进入收音机界面，长按▶退出收音机界面。

按◀◀和▶▶上下浏览菜单、选中选项，按▶进入相应菜单功能。

 
### 菜单选项

**预设电台**：显示预设好的电台频点，最多可保存 30 个频点。

**手动调谐**：按▶键进入手动调谐，按◀◀和▶▶手动调节电台，调整到某个电台，按开关键进入子菜单选项，选中**保存到预设**，选择任意一个预设电台频点，按▶键确认选项。电台保存在该预设电台。

**自动调谐**：按▶键进入自动调谐，显示“是否要自动调谐预设频道”；选择“是”，开始自动搜索电台；选中“否”，返回菜单选项。

**FM 录制**：进入主盘目录和卡目录进行录音播放，如果插卡的情况下，需要在录

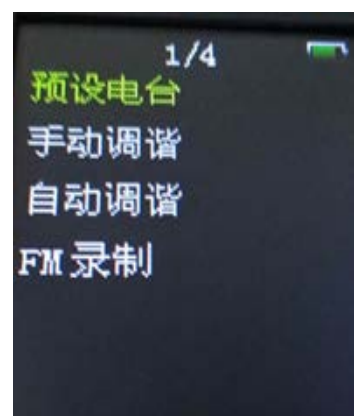

音菜单存储器中选择外置存储器。

## 子菜单选项

在电台界面，按开关键进入子菜单。

**开始 FM 收音机录音**：按▶键可以进入 FM 内录界面。

**保存到预设**：选择任意一个预设电台频点，按▶ 键确认选项，电台保存在该预设电台。

**清除预设**：按▶ 键确认后，自动进入预设电台列表，按◀◀ 和▶▶ 上下移动选择任意一个电台按▶ 键，弹出“清除预设 xx? 是/否”。

**自动调谐**：选择此项后，按▶进入开始自动搜索电台。当搜索到节目后，系统自动保存电台，并在界面上显示 **01、02、03 等等**。搜索电台成功保存好，按▶ 可在频段已保存电台之间切换收听。

**电台频段：普通频段——频段范围：87.5MHZ-108.00MHZ**

**日本频段——频段范围：76.00MHZ-90.00MHZ**

**欧洲频段——频段范围：87.50MHZ-108.00MHZ**

## 电子书

按▶进入电子书界面，长按▶**退出电子书界面**。

 
按◀◀ 和▶▶ 上下浏览文件，选中文件，按▶进入电子书播放界面。插入扩展卡情况下可以选择主盘目录和卡目录中的文件进行播放

按▶ 确认打开文本文件，显示文件当前页数和总页数（后台计算总页数）。按◀◀ 或▶▶ 前后翻页。电子书浏览过程中，按▶ 可在手动翻页和自动翻页之间切换。按开关键进入子菜单选项，长按▶键退出。

## 菜单选项

在文本阅读界面

按**开关键**进入子菜单，子菜单选项包括**自动播放时间设置**，

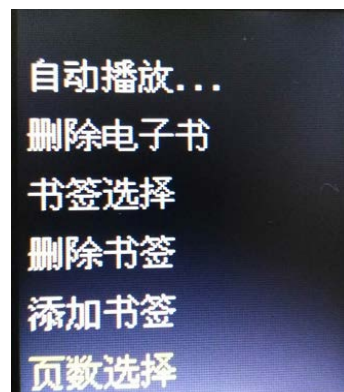

**删除电子书，书签选择，删除书签，添加书签和页数选择。**同音乐应用下的书签功能。每个文本文件最大支持 16 个标签。

**自动播放时间设置；**按▶进入设置时间，按◀◀ 或▶▶来调节时间，时间总为 2-30 秒。

**删除电子书；**按▶进入删除界面，按◀◀ 或▶▶来选择“是”或“否”

**书签选择；**按▶进入书签选择界面，按◀◀ 或▶▶来选中文件。

**删除书签；**按▶进入删除书签界面，按◀◀ 或▶▶来选择“是”或“否”

**添加书签；**按▶进入添加书签界面，按◀◀ 或▶▶来选择“是”或“否”

**页数选择：**用户选择进入**页数选择**界面，按◀◀ 或▶▶ 上下翻阅页数列表，按▶ 选中页数，短按开关键或长按▶退出选项。

## 文件夹视图

按▶进入文件夹视图，长按▶退出文件夹界面。

## 菜单选项

显示主盘目录和卡目录上所有的目录和文件。

在文件列表中选择文件，短按开关键，显示“删除”，按短按开关键取消删除，按▶ 键确认删除选项。



## 工具

按▶进入工具界面，长按▶退出工具界面。



**日历：**按▶ 键开始进入日历功能，界面显示如下图：



## 按▶进入秒表界面

按▶键开始计时(最大计时为 99 时: 59 分: 59 秒. 99 毫秒), 再次按键暂停计时。按◀◀ 或▶▶ 键记次最多支持 5 个记次(计时中间把某个时间点记录下为一次记次)。按▶键开始计时/停止计时, 按开关键清零, 长按▶键退出秒表。



## 设置

按▶进入设置界面, 长按▶退出设置界面。

按◀◀ 和▶▶ 上下浏览菜单、选中选项, 按▶进入相应菜单功能。

1. **定时关机** : 时间范围 1min~99min。
2. **显示设置** : 亮度, 背光计时器和屏幕保护。

**亮度**: 按▶进入亮度调节界面, 按◀◀或▶▶来选择 0-11 级。

**背光计时器**: 在此时间内, 无按键操作, 则会关掉背光。可选值: 10 秒, 20 秒, 30 秒以及始终亮起。

**屏幕保护**: 可选项为: **无, 数字时钟, 关闭屏幕。**

 
3. **日期和时间**; **时间设置, 日期设置。**
4. **Language/语言**: 可支持 28 国语言。
5. **信息**: 播放器信, 息磁盘空间

播放器信息; 显示: 型号, 软件版本, 日期”。

磁盘空间; 显示; 可用空间, 总空间, 歌曲, 图片, 视频。

6. **格式化设备**; 所有文件数据都会删除。

7. **出厂设定**: 各项设置恢复初始值。

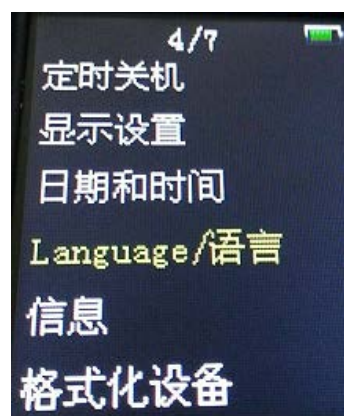

## 计步器

按▶进入计步器界面，长按▶退出计步器界面。

按◀◀和▶▶上下浏览菜单、选中选项，按▶进入相应菜单功能。

 


**开始计步：**按▶进入，开始记步。

**用户信息：**可以设置步长，可以用按◀◀或▶▶调 20-200cm.

**历史记录：**记录 1，记录 2，记录 3.

**删除记录：**删除记录 1，删除记录 2，删除记录 3，删除所有记录。

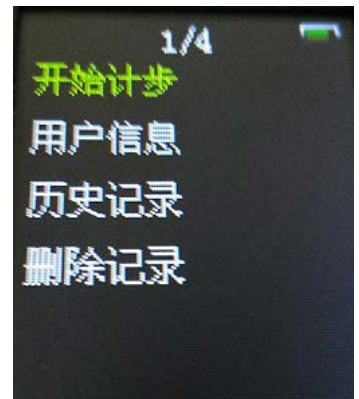

## 疑难解答

### 媒体播放器不工作或 LCD 不显示内容

-检查电池电量。

### 开机键不起作用

-没有电池，或电池电量已耗尽。

### 无法下载文件

-检查电脑的 USB 端口与 USB 电缆间的连接。

-格式化媒体



# HOTT®

## MP3 Digital Media Player



**Model: HA09 User Manual**

Thank you for using A505 MP3 PLAYER, please read this manual carefully before using.

# Contents

Announcement.....	2
Cautions.....	2
Functions.....	2
Pictures.....	3
Preparation before use.....	4
Connected to PC.....	5
Bluetooth.....	6
Music.....	6
Video.....	9
Recordings .....	9
Pictures .....	10
FM radio.....	10
EBook.....	11
Folder View.....	12
Tools.....	12
Setting.....	13
Pedometer.....	14
Troubleshooting.....	14

# 1 Announcement

1. Reproduction, transfer, distribution or storage of any of the contents in this manual in any form without the prior written permission of the Company is prohibited.
2. During the preparation of the manual, do care has been taken to ensure the correctness and integrity, but there is no guarantee that this manual is free of any error or omission. The Company will not be responsible for any possible error or omission in the manual.
3. As the products may upgrade from time to time, the manual and products described herein are subject to change without prior notice.
4. Under no circumstance shall we be responsible for any loss of data or income or any special, incident, consequential or indirect damages howsoever caused. You are recommended to backup the data in other medium.

# 2 Cautions

This part contains correct operational information. For better performance, please read all the information carefully before you use the player.

 
- λ Do not impact the machine severely.
- λ Do not come into contact with chemicals such as benzene or thinner.
- λ Please keep away from strong magnetic field and electric field.
- λ Please keep away from direct light or heating appliances.
- λ Do not dismantle, repair or transform the player personally.
- λ Do not use the player and the earphone when riding a bike, driving a car or a motorcar in order to avoid traffic accidents.
- λ Select suitable volume in order to avoid bad influence to your ears.
- λ Please classify the discarded packages, battery and old electronic products properly.

# 3 Functions

1. Music Play: support MP3、WMA etc.
2. Recording: support FM and MIC recording. Support WAV、MP3 format.
3. Picture Browse: support formats of JPEG, BMP etc.
4. Video Play: support formats of AMV and AVI (A video converter is needed)

5. Support FM Radio.
6. Support text document reading.
7. Support tools: Pedometer, Stopwatch etc.
8. BT V4.0
9. Tools setting:
10. Setup Function: support settings of function and display.
11. Support File system:FAT32、 ExFAT/Fat64
12. Support TF Card

## 4 Pictures

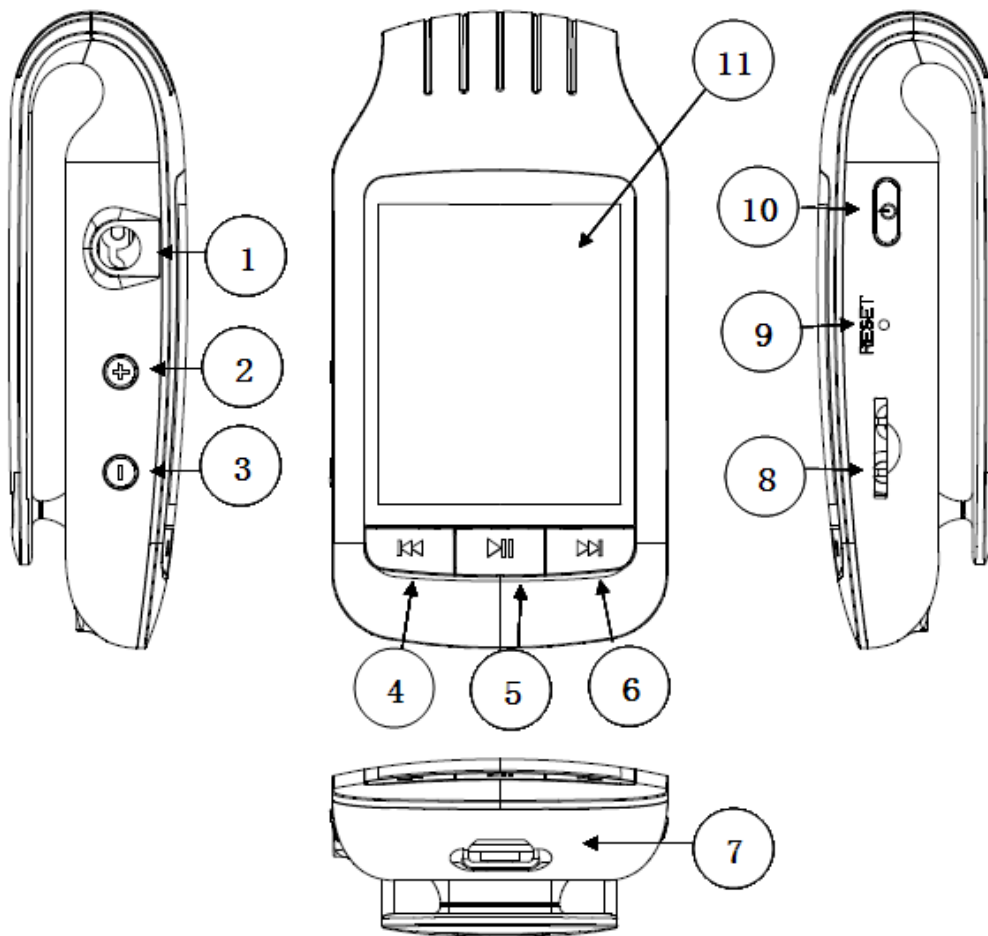

## 5 Preparation before use

### 5.1.Key's Function

1. Earphone port, audio output
- 2.**Vol+Key**: Long press to increase volume continuously, short press to increasing step by step.
- 3.**Vol- Key**: Long press to reduce volume continuously, short press to reduce step by step.
- 4.**◀◀ Key**: Choose previous option or document.
- 5.**▶▶ Key**: Play/Pause/Enter. Long press could back to the main menu interface.
- 6.**▶▶ Key**: Choose the next option or document.
7. USB Interface: Support 2.0 data transmission.
8. TF card trough: Support Micro SD card
9. RESET: Restart.
10. Switch on/off: Long press to power on or power off, short press to display the submenu
11. Display/Screen: Display the main interface.

### 5.2.Key Action Destination

Action	Basic Operation
Short press	Press a key and hold it less than 1.2s.
Long Press	Press a key and hold it more than 2s.
Press	Press a key and keep this status

Note: "Press" in this manual shall mean "short press", unless other specified.

### 5.3.Power On/Off

Long press at the body's side, it means powered on or powered off.

The player will power off automatically when the idle time of the system reaches the off time set by the user.

Note: when the player is connected with PC, this function will not be working.

## **5.4. Low Battery**

When the battery is low, the player will show a tip in the screen and it will power off automatically and enter standby mode. At this time, please do not restart the player but charge in time.

The charger with the current specification of 500mA is suggested.

## **6 Connected to PC**

### **6.1. System Configuration**

Operating system: Windows XP&Vista/ME/7/8

CPU: at least Pentium-133MHz

RAM: at least 32MB

Hard Disk Idle Time: at least 100MB

Video Card: 640\*480 mode or above, at least the enhance color (16 bits)

USB Port

CD-ROM Driver

### **6.2. Connected with PC**

When the player is on/off, use the USB cable provided by random to connect PC with the player, and the PC will indicate a select window of “Removable Disk”. Select corresponding folders to copy.

### **6.3. Main Interface**

Come into the following system interface when the player is on.

## 7 Bluetooth

Press **▶** into BT interface, Long press **▶** to exit.

### 7.1. Menu Options

Enter Bluetooth interface to see the operation interface. Press [**♥/□**] to browse the options, contain “Bluetooth ON/OFF” “Search device”“Pairing device list”

#### [Bluetooth switch control]:

Press **▶** to enter, press [**♥/□**] to choose

[Search device]: press **▶** to enter and the searching interface shows up, if a device is found, then it will be listed in the device list.

[Device’s list]: press **▶** to operate the player. Press [**♥/□**] to choose the device, and enter the device menu interface.

It will list the available operation options according to the status of the device.

 
When the device is in the **Usable** status, it can be paired with the device.

When the device is in the **Paired** status, you can choose [Disconnect].

When it is connected successfully, it will show the playing interface.

[All music]: press the Centre Key to enter, and you can choose the music from the list to play.

[BT now playing]: when there is a device in the connected status, press the Centre Key to enter player view.

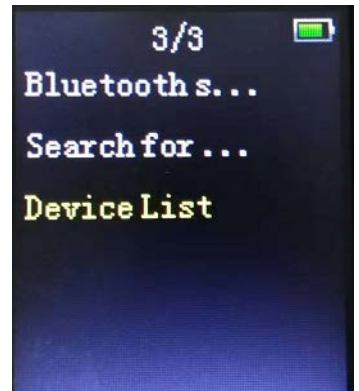


## 8 Music

1. Choose music application press **▶** to enter the music playing interface, long press **▶** can exit.

2. Support breakpoint play and Background Audio.



 Breakpoint play means: the system will enter the playing interface where you previously exited. Only support this function in the Now Playing List. Background Audio means when the player is

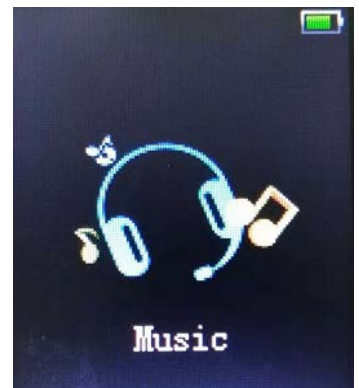playing the music in the background, it can run other functions at the same time




which is not conflict with the Background Audio function.

## 8.1 Music main interface

 Press [/] to choose the options, press the Centre key to confirm.

The menu options include: **All songs**, **Artists**, **Albums**, **Genres**, **Playlist**, **Album art**, **local folder**, **Card folder**

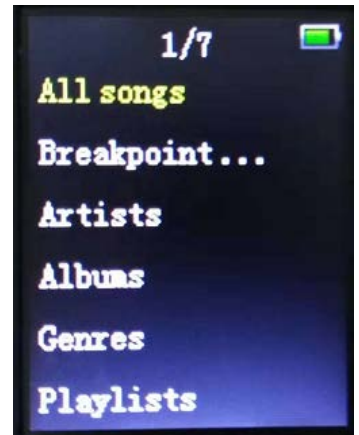

**All songs:** display all the songs in the memory and all the random playing songs.

**Breakpoint:** Continue play the last song when power on.

**Artists:** Display the names of the singers recorded in the inter memory of each song.

**Album art:** The picture of album.

**Genres:** display the styles according to the built-in style in the music

**Playing List:** Including “Playing now list 1” “Playing now list 2” “Playing now list 3”

**Local folder :** Play the music stored in memory flash

**Card Folder :** Play the music stored in Micro SD card

## 8.2 Music playing interface

 




Press ► to switch between “play” and “pause”. Short press [♥/□] to choose the previous or next track. Long press ♥/□ to adjust the speed. ◀◀ Short press ◀◀ or ▶▶ to enter the volume interface, to adjust the volume. Press the ON/OFF key to enter the submenu interface.

### 8.3 Music Menu Options

1. Press the ON/OFF key when the music at the status of playing or pause, the system enters the submenu, the menu options include: **play mode, sound settings, add to the playlist, remove play list, sleep timer, delete, Bookmarks.**

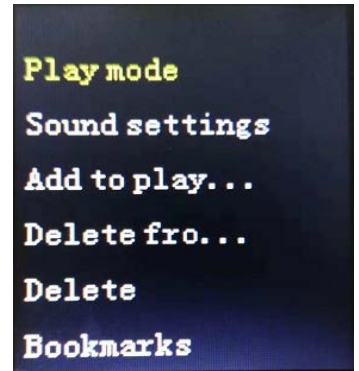

2. Press [♥/□] to choose browse menu. Press ► to return previous interface, Press [♥/□] to choose the options, press ► to confirm.

Submenu (Playing Mode)

**Playing mode:** choose [Playing mode], display [play music from], [Repeat], [Shuffle], [Repeat settings] options.

**Sound settings:** Choose [**Sound settings**], Display [Equalizer] [Volume limit].

**Add to playlist:**

Choose[Add to playlist],it will display Playlist on the go [1],;

**Remove from Playlist:** Choose [Remove from Playlist],it will display Playlist on the go [1]

**Sleep timer:** Choose [Sleep timer], it will display [OFF][Set sleep timer...].

**Delete:** Choose [Delete] to delete the now playing music from the digital media player.

**Bookmark:** Choose [Bookmark], it will display [Add bookmark][Go to bookmark][Delete bookmark]

Submenu (Pause Mode)

**Same as submenu ( Playing Mode ) .**

## 9 Video

1. Press ► to enter the video file list interface. Press [♥/□] to browse the files, and press ► to choose the file to enter the video playing interface.
2. Support the breakpoint play.

### 9.1 Video Menu Options

When it is in a stopped or playing state, press ON/OFF Key to enter the video menu. If it is playing the video, then the video will be paused in the background.

 
 
Video options include: **Lightness, Repeat, Delete video, Create Playlist.**

①. **Brightness:** press ► to enter lightness interface, Press [♥/□] to adjust the lightness level, press ► to confirm.

②. **Repeat:** press ► to enter [Repeat play] interface, it will display [Repeat off][Repeat 1][Repeat all].

③. **Delete video:** delete the now playing video.

④. **Create playlist:** to create a playlist automatically.

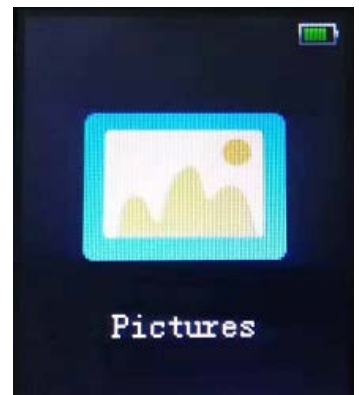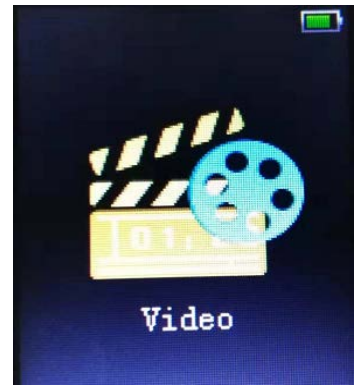


## 10 Recordings

Press ► start/stop/restart recording. Long press ►, quit the recording interface.

Press ► to enter the recording interface. **The menu option include: Start voice recording, Recordings library,, Record format, and Record settings.**

**Start voice recording:** press ► to enter the record interface and the player will start to record automatically.

 **Recordings library:** choose this option. If there are no any recordings in the player, then it will say” No voice recordings found”; If there are recordings in the list, then choose one to play. All of these recordings can be deleted.

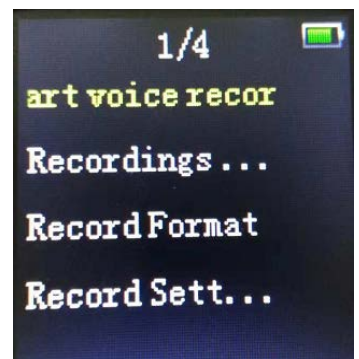

**Record format: choose:** MP3, WAV or ACT Rec.

**Record settings:** it will display [Set rec bitrate][Track AVR Mode]  
[set recordings scene].

## 11 Pictures

Press ► into picture interface.

Press [♥/□] to browse the photos, press ► to enter the menu options. The documents of disc and card could playing when plug-in TF SD card.

### Menu Options

Submenu options: **Brightness, Backlight timer, Slideshow settings, Delete picture, Create playlist.**

Except Backlight timer and Slideshow settings, the other menu operations' ways are the same with the previous application.

### Backlight timer :

Press ► into setting, there are [10 seconds][20 seconds][30 seconds][always on] four options.

**Slideshow settings:** Press ► into setting, choose this option, it will display [Time per slide] [Repeat] [Shuffle] [Thumbnails].

## 12 FM radio

Press ► into FM, long press to quit.

**Presets:** display the preset radio channels, it can show 30 channels at most.

**users:** display the user radio channels, it can show 30 channels at most.

### 13.1 Manual Tune:

Press the ► Key to enter the manual tune interface, Press [♥/□] to tune the radio, when a radio channel founded,



press ON/OFF key to enter submenu,  
choose [save to preset], choose one of  
the frequency points and press ► to confirm. Choose “yes”, and then the  
radio channel has been saved to Preset.

**Auto tune:** choose this option, and it will display [Do you want to auto tune the  
presets?]. Choose “Yes” to auto tune the radio .Choose “no” to return to the  
radio menu.

**FM Recordings:** Enter the recording library, then to choose one to play. If the  
card is be built in, then need to choose outlay storage in the recording menu  
storage.

### 13.2 Submenu Option

In FM mode, press ► to enter the submenu

**Start FM radio recording:** press ► to enter the record interface.

**Save to preset:** choose an arbitrary frequency point in the preset FM radio,  
press ► to confirm. Then the radio has been saved in the Preset.

**Clear preset:** Press ► to enter preset radio channels list, press ♥/□ to choose  
an arbitrary radio channel, press ► then an interface shows up” do you want to  
clear the preset? Yes of No”

**Auto tune:** choose this option, press► to back to FM function interface and  
start to auto tune the FM radio channels. When the FM radios are founded, the  
system will save the channels automatically and show 01.Go on searching, it  
will save the radio in order. After search the FM radio channels and save them  
successfully, you can switch the radio channels by pressing the Centre Key.

**Tuner Region:** normal band—range: 87.5MHZ-108.00MHZ

 
Japanese band---range: 76.00MHZ-90.00MHZ

European band---range: 87.50MHZ-108.00MHZ

## 13 EBook

Press► Enter the EBook interface, display document  
current page number and total page number. (Background  
to count the total pages)

Press ♥/□ to turn page. Brow the text, press ► to switch

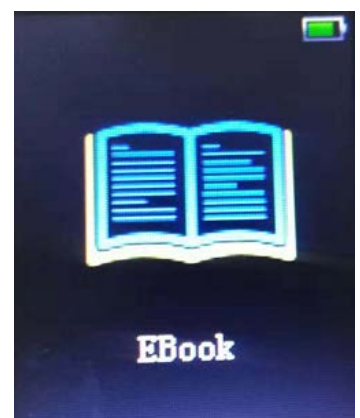

between manual page-turning and auto page-turning. Press switch key to enter submenu option, long press ► to exit.

## Text Menu options

In the text list interface, press ► to enter the submenu, Submenu contains **Play setting, Delete eBook, bookmark select, delete bookmark, add bookmark** and **page select**.


Bookmark function is similar with that in Music mode, maximum support 16 bookmarks.

[Page select]: enter page select interface, Press [♥/□] to choose the page number, then press the Centre Key to confirm. Short press ON/OFF or long press ► to exit.

## 14 Folder View

1. List all of the files and catalogs in the player.
2. Choose one of the files in the list and press, short press switch key, it will display “Delete”,


As below picture shows, short press ON/OFF key to cancel the delete, and press► to confirm the option of delete.

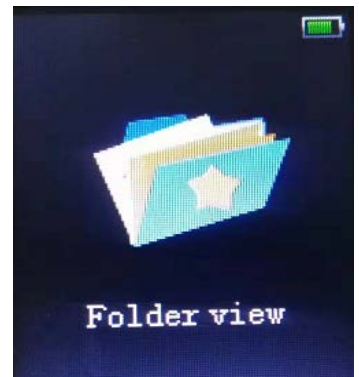 

## 15 Tools

Enter Tools interface as below:

 1. **Pedometer**: Press► to start the function, the interface display as below::
2. **Stopwatch** : Press► to start timing. (The longest timing is 99 hours 59 minutes 59 seconds and 99 milliseconds.),

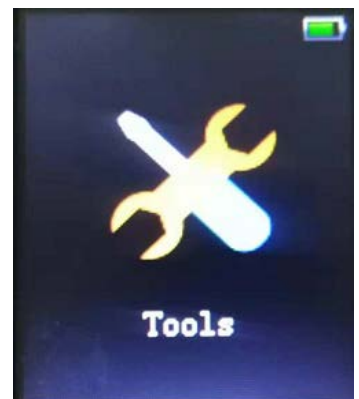

Press ► again

to pause the timing. Press ♥/□ to start another record. Support 5 times at most.

Press ► to start/pause stopwatch, press switch key to clear all records, long press ► quit from the stopwatch.




## 16 Setting

 Enter the set interface as below:

1. **Play mode:** the same as that in the music function.
2. **Sound settings:** the same as that in the music function.
3. **Sleep timer :** time range is 1min~99min,time step is 1 min.



4. **Display settings :** Brightness, Backlight timer, Screensaver.  
Backlight timer: The light will be off if there is no key operations during this time. There are four options:[10 seconds][20 seconds][30 seconds][Always on].The Light-off Mode will be invalid in the following four interfaces  
Screensaver: There are options of [None] [Screen off].

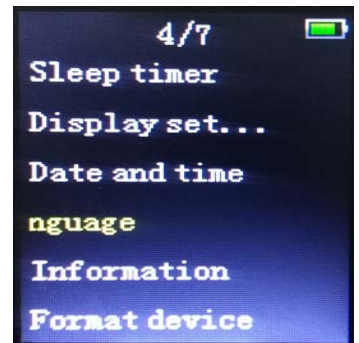

5. **Slideshow settings:** the same as Photo function.
6. **Language:** The player supports the following languages: Simplified Chinese, Traditional Chinese, English, Japanese, Korean, French, Germany, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Danish, Polish, Russian, etc. 28 in all.
7. **Information:** it will display Player information, Model, software version, date.
8. **Factory settings:** press the Centre Key and it will display a question, choose "yes" to restore the factory settings.

## 17 Pedometer

Long press ► into pedometer view, can long press ► to exit.

 


Start: press ► into this view

User information: Step set, press ◀◀ or ▶▶ to change step from 20~200cm.

History information: Record 1, Record 2, Record 3.

Delete history information: Delete all the information or one.

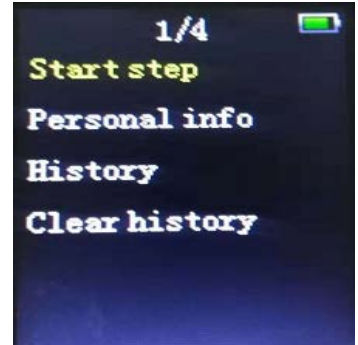

## 18 Troubleshooting

If the player does not work properly, check the followings:

1. The player can't work properly or LCD can't display the contents  
Please check the electronic quantity.
2. The player can't be powered on.  
Please check if the battery has run out.
3. Cannot upload/download files.  
Make sure the connection between the player and PC is correct.  
Check if the memory is full.  
Check if the USB connecting line is damaged.

