

Vacos Baby Monitor

USER MANUAL



About This Manual

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website.

Please use this user manual under the guidance of professionals.

Legal Disclaimer

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. OUR COMPANY SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, OUR COMPANY WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. OUR COMPANY SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

FCC compliance:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into "Warnings" and "Cautions"

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

	
Warnings Follow these safeguards to prevent serious injury or death.	Cautions Follow these precautions to prevent potential injury or material damage.



Warnings

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100~240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.



Cautions

- Do not drop the camera or subject it to physical shock.
- Devices are designed for indoor use only. Keep them away from liquids and humid environments.
- While in delivery, the camera shall be packed in its original packing, or packing of the same texture.

- A few parts (e.g. electrolytic capacitor) of the devices shall be replaced regularly according to their average enduring time. Please check their conditions regularly and replace them in time.
- Use only attachments/accessories specified by the manufacturer.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose the waste batteries according to the instructions provided by the battery manufacturer.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Make sure the power supply voltage is correct before using the camera.
- Install the system in a well-ventilated, dust-free environment.
- Do not place the camera in extremely hot, cold (the operation temperature shall be $0\text{ }^{\circ}\text{C} \sim 40\text{ }^{\circ}\text{C}$, storage temperature shall be $-20\text{ }^{\circ}\text{C} \sim 60\text{ }^{\circ}\text{C}$), dusty or damp locations, and do not expose it to high electromagnetic radiation.
- Place the devices on stable and leveled surfaces, avoiding falling down or dropping.
- Use the device in conjunction with an uninterrupted power supply if possible.
- Only clean the devices with a dry cloth; never use chemical cleaners. Before any cleaning, you must disconnect the adapters.
- Power down the device before connecting and disconnecting accessories and peripherals.
- Unplug this device when unused for long periods of time.

CONTENTS

ENGLISH

1. What's in the Box.....	7
2. Product Description.....	8
3. How to Set up the Camera and Monitor.....	10
4. How to Add the Camera to the LCD Monitor.....	13
5. Switch the Cameras via the LCD Monitor.....	14
6. How to Install the Camera to the Wall.....	14
7. Baby Monitor Setting Menu.....	17
8. Introduction to Live Stream.....	20
9. FAQ.....	23

1. What's in the Box



1x Baby Camera



1x LCD Monitor



1x Wall Mount



1x 3 m Type-C
Power Cable (for Monitor)



1x 1.2 m Type-C
Power Cable (for Camera)



2x Power Adapter
(Baby Camera 5V1A
LCD Monitor 5V2A)



1x User Manual



1x Thank You Card

 
 


1x Mounting Screw Bag


Note: The power adapters may vary based on the specific countries' adapter specifications.

2. Product Description

LCD Monitor Introduction

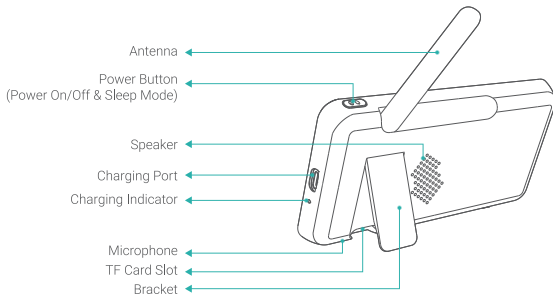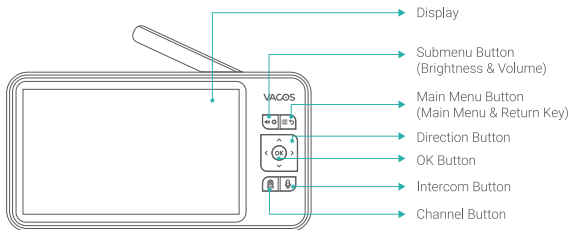

Camera Introduction

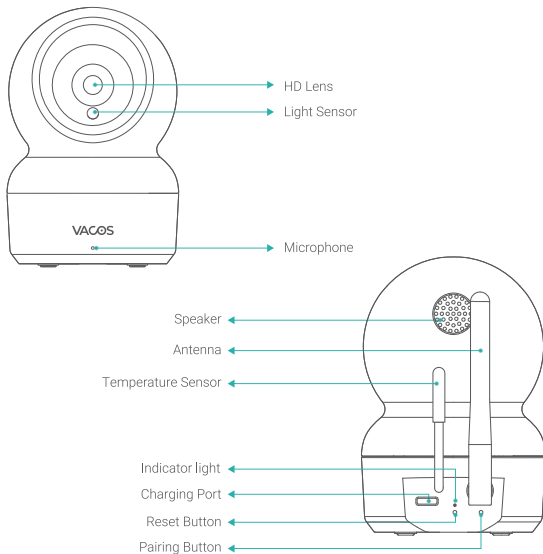 


3. How to Set up the Camera and Monitor

Power on the Monitor


Note: Please fully charge the monitor before operation.

 - 1). Connect one end of the power cable to the 5V/2A power adapter, and then link the other end of the power cable (the Type-C end) to the monitor.
- 2). Plug the power adapter into the outlet.
- 3). Press the power button for 3 seconds to turn on the monitor.

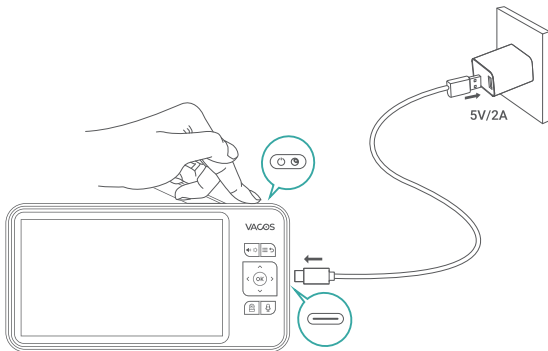

Power on the Camera

 
- 1). Connect one end of the power cable to the 5V/1A power adapter, and then link the other end of the power cable (the Type-C end) to the camera.
- 2). Plug the power adapter into the outlet.

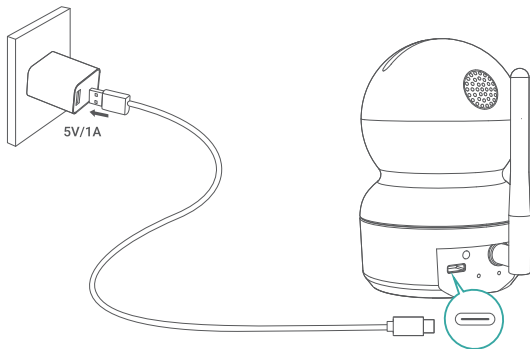

Positioning

Place the camera at somewhere near the crib, such as on the cabinet, so you can monitor your baby conveniently.

 Note: NEVER place the camera or cords within 3-feet of the crib.

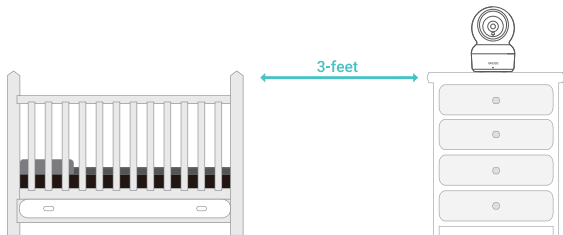

Caution:

Never place the camera inside or mount the camera on baby's bed/playpen, avoiding accidentally falling off or being entangled by wires. Keep the camera out of baby's reach, at least 3 feet away from the crib and the baby.

 
Place the camera on a stable and leveled surface. Adjust camera's lens to ensure the best visibility of your child.

4. How to Add the Camera to the LCD Monitor

The monitor and camera have been paired by default. If you want to add a new camera to the monitor, or the camera is reset, you'll need to pair them again. Please refer to the following steps to pair the monitor and camera.

- 1) Press the Menu () icon button to enter the main menu, and then press up/down () icon button to select the system setting. Press the OK () icon button.
- 2) Use the up/down () icon button to select pairing, and then press OK to go to the camera pairing interface. Select the camera you want to pair and press the OK () icon button.
- 3) The interface shows a countdown to the pairing.
- 4) Tap the pairing button for 1 second until you hear a tone that the pairing is complete.

Note: The pairing button is on the back of the camera.

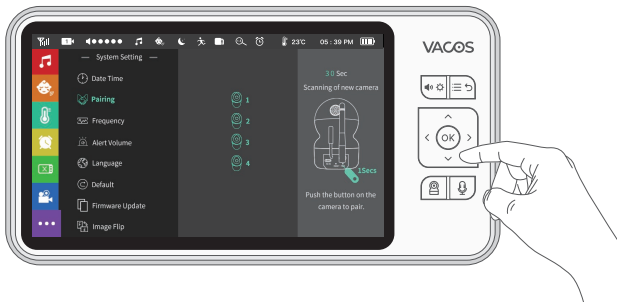


5. Switch the Cameras via the LCD Monitor

You can switch the cameras manually if you have added more than 2 cameras to the monitor. The monitor can show up to 4 cameras' stream simultaneously.

Note: The monitor may make a loud noise if the monitor is too close to the camera. The problem can be solved once the monitor is away from the camera.


6. How to Install the Camera to the Wall

 1) Place the bracket on the wall, and then mark the positions on the wall.

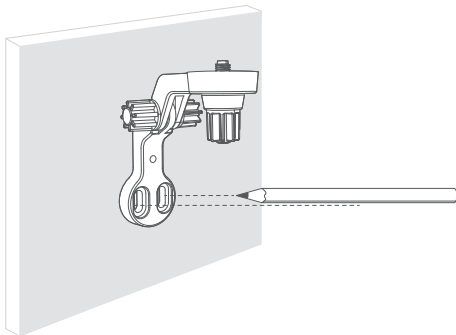


2) Drill holes at the marked positions, and put anchors into the holes.

 
Note: Anchors are not needed in the wooden wall.

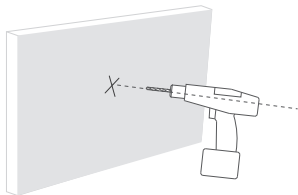

 3) Fix the bracket to the wall with the screws.

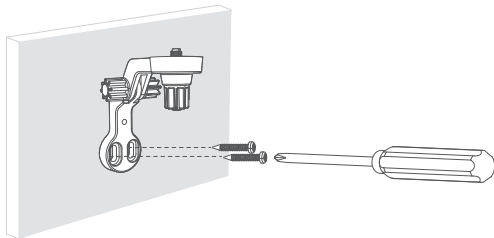

 4) Install the camera into the bracket.

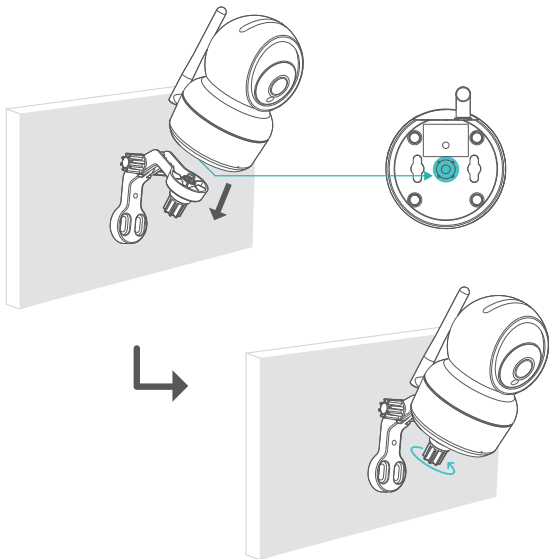

7. Baby Monitor Setting Menu

Press the **power** (🔌) icon button to turn on the monitor, and then press menu button to go to the setting menu.



Setting Menu Introduction

Menu Options	Description
	Choose the lullaby you want to play. You can also adjust the volume or turn off the lullaby. Note: The sound alert will be automatically turned off when lullabies are being played. Warning: You may not hear the baby's crying sound when playing the lullaby.

Menu Options	Description
	You can set up the sound sensitivity. When the camera detects any specific noise, the monitor will display the icon and alert you audibly. Note: The ambient noise may cause false alerts.
	You can set up the temperature detecting range. When the temperature exceeds the specific value, the monitor will display the icon and alert you audibly.
	Set up the alarm clock
	You can choose the auto-lock screen time for your monitor among 1, 2 and 5 minutes.

	Record Setting	Description
	Playback	View recorded video footages
	Motion Detect	Turn on/off the motion detection alerts
	Recording Time	Set up the single recording time
	Overwrite	Select "On", the TF card will be full, and the oldest video will be deleted while recording. Select "Off", and the TF card will not record when it is full.

	Record Setting	Description
	Format	Format the TF card Note: Format the TF card when you install the TF card to the camera for the first time.
	Card Info	The storage capacity of the TF card
	System Setting	Description
	Date Time	Set up the date and time on the monitor
	Pairing	Add a camera Note: 1 monitor supports up to 4 cameras.
	Frequency	Change the refresh rate of the device to prevent flicker
	Alert Volume	Set up the alert volume
	Language	Set up the menu language
	Default	Restore all settings to default
	Firmware Update	The version information and update settings of the software
	Image Flip	According to the installation direction of the camera, choose whether to flip the image

Note: The interval between every two audible alerts is 10 seconds. During the 10-second time interval, the device won't send you notifications even there are motion events.

8. Introduction to Live Stream



Icons	Description
	The signal strength between the camera and the monitor
	Camera condition: The white icon indicates the camera is not recording. The device is recording when the icon flashes red and white alternatively.
	Camera volume
	Playing the lullaby
	The VOX is on. The white icon shows VOX is on. There will be audible alerts when there are motion events. The icon will flash red and white alternatively for 10 seconds, and then the icon turns white.

Icons	Description
	Sleep mode
	Motion detection function: The white icon shows motion detect is on. When the camera detects motions, the icon turns red and you will hear a prompt tone. The red icon will turn white in 10 seconds.
	TF card: The white icon shows TF Card has been inserted, while the red icon shows the card storage is full.
	The monitor's image magnification
	Temperature detect: The red icon shows the temperature surpasses the specified line, and you will hear a prompt tone.
	Feeding timer: You'll see a red alarm icon on the monitor screen after you have enabled the camera volume, and hear a voice prompt when the countdown ends.
	Remaining power of battery
	Long press the Talk button on the monitor and this icon will display on the monitor screen.
	In a standalone live stream, you can rotate the camera up & down, left & right by controlling the direction button on the monitor.

Icons	Description
	In a certain single monitoring screen, press the submenu button to use the up/down button to adjust the brightness, the left/right button to adjust the sound volume. Press OK button to record manually.
	In the multi-screen mode, the monitor will display the select box. When the select box displays in the camera stream in the top right corner, it means that you have selected the camera, and the voice is from the camera. Please press the Menu button to get the settings of the camera. Control the up/down/left/right direction to change the select box. After you have pressed OK button, you can switch to the current camera's stream with the select box.

9. FAQ

Q: How to power on/off & turn on/off the LCD monitor?

A: Power on/off the monitor: Press the power button for 5 seconds;

Turn on/off the monitor: Press the power button once.

Q: What's the connection distance between the camera and monitor?

A: The longest connection distance between the camera and LCD monitor is 1,000 feet in open areas without interference.

Q: Why does the baby monitor record videos without human-triggered events?

A: When the motion detection function is enabled, the baby monitor will start recording whenever it detects the scene changes (such as the oscillating fan, fluttering curtain, or swaying trees).

Q: Why does the display turn on automatically after turned off?

A: The display will turn on when the Power button is pressed, or when alarms of audio, motion, temperature, and feed time clock are activated.

Vacos Babyfon

BENUTZERHANDBUCH

INHALT

DEUTSCHE

1. Packungsinhalt.....	26
2. Produktbeschreibung.....	27
3. Einrichten der Kamera und des Monitors.....	29
4. So fügen Sie die Kamera zum LCD-Monitor hinzu.....	32
5. Umschalten der Kameras über den LCD-Monitor.....	33
6. So installieren Sie die Kamera an der Wand.....	33
7. Einstellungsmenü für das Babyfon.....	36
8. Einführung in Live-Stream	39
9. FAQ.....	42

1. Packungsinhalt



1x Baby-Kamera



1x LCD-Monitor



1x Wandhalterung



1x 3 m Typ-C-Stromkabel
(für Monitor)



1x 1 m Typ-C-Stromkabel
(für Kamera)



2x Netzteil
(Baby-kamera 5V1A
LCD-Monitor 5V2A)



1x Benutzerhandbuch



1x Danksagungskarte

 
 


1x Tasche für
Montageschrauben


Hinweis: Die Stromadapter können je nach den Adapterspezifikationen der einzelnen Länder variieren.

2. Produktbeschreibung

LCD-Monitor Einführung

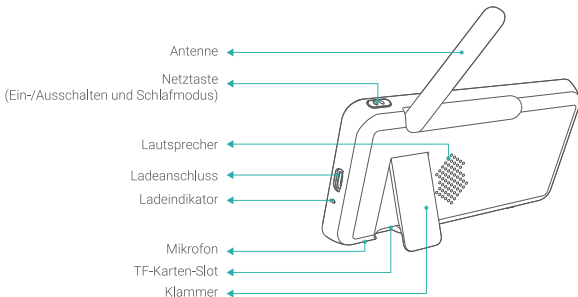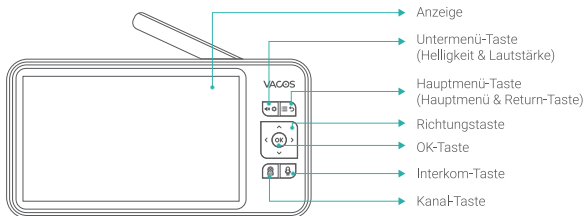

Kamera-Einführung

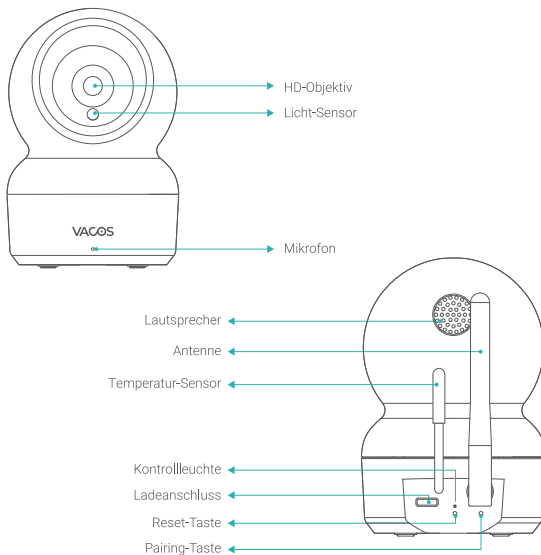 


3. Einrichten der Kamera und des Monitors

Einschalten des Monitors


Hinweis: Bitte laden Sie den Monitor vor der Operation vollständig auf.

 - 1). Schließen Sie ein Ende des Netzkabels an den 5V 2A-Netzadapter an und verbinden Sie dann das andere Ende des Netzkabels (das Typ-C-Ende) mit dem Monitor.
- 2). Schließen Sie das Netzteil an die Steckdose an.
- 3). Drücken Sie den Netzschafter 3 Sekunden lang, um den Monitor einzuschalten.

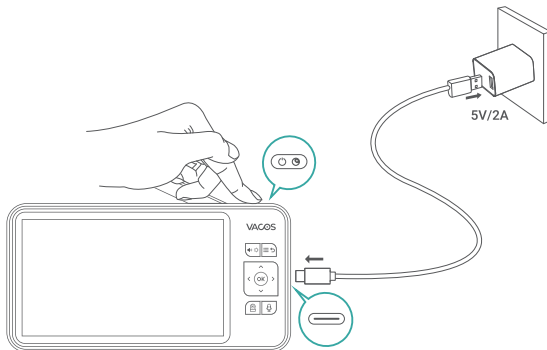

Schalten Sie die Kamera ein

 
- 1). Schließen Sie ein Ende des Netzkabels an den 5V 1A-Netzadapter an und verbinden Sie dann das andere Ende des Netzkabels (das Typ-C-Ende) mit der Kamera.
- 2). Stecken Sie das Netzteil in die Steckdose.

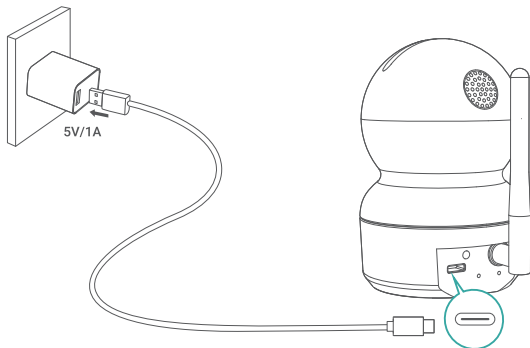

Positionierung

Stellen Sie die Kamera in der Nähe des Kinderbetts auf, z. B. auf dem Schrank, damit Sie Ihr Baby bequem überwachen können.

 Hinweis: Platzieren Sie die Kamera oder die Kabel NIEMALS in einem Umkreis von 3 Fuß um das Kinderbett.

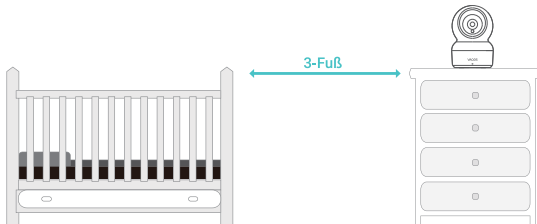

Vorsicht:



Stellen Sie die Kamera niemals hinein oder montieren Sie sie nicht auf dem Babybett / Laufstall, um ein versehentliches Herunterfallen oder Verwickeln durch Kabel zu vermeiden. Halten Sie die Kamera außerhalb der Reichweite des Babys, mindestens 3 Fuß von der Krippe und dem Baby entfernt.

 
Stellen Sie die Kamera auf eine stabile und ebene Fläche. Passen Sie das Objektiv der Kamera an, um die beste Sichtbarkeit Ihres Kindes zu gewährleisten.

4. So fügen Sie die Kamera zum LCD-Monitor hinzu

Der Monitor und die Kamera sind standardmäßig miteinander gekoppelt. Wenn Sie dem Monitor eine neue Kamera hinzufügen möchten oder die Kamera zurückgesetzt wurde, müssen Sie sie erneut koppeln. Bitte befolgen Sie die folgenden Schritte, um Monitor und Kamera zu koppeln.

- 1) Drücken Sie die Menü-Taste (), um das Hauptmenü aufzurufen, und drücken Sie dann die Aufwärts/Abwärts-Taste (), um die Systemeinstellung auszuwählen. Drücken Sie die OK-Taste ().
- 2) Wählen Sie mit der Aufwärts/Abwärts-Taste () die Kopplung aus und drücken Sie dann auf OK, um zur Kopplungsschnittstelle der Kamera zu gelangen. Wählen Sie die Kamera, die Sie koppeln möchten, und drücken Sie die OK-Taste ().
- 3) Die Schnittstelle zeigt einen Countdown für das Pairing an.
- 4) Tippen Sie 1 Sekunde lang auf die Pairing-Schaltfläche, bis Sie einen Ton hören, dass die Pairing-Funktion abgeschlossen ist.

Hinweis: Die Pairing-Taste befindet sich auf der Rückseite der Kamera.

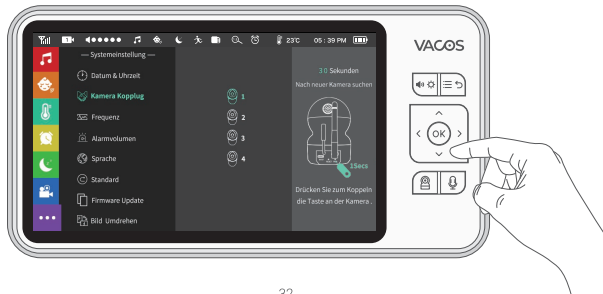


5. Umschalten der Kameras über den LCD-Monitor

Sie können die Kameras manuell umschalten, wenn Sie dem Monitor mehr als 2 Kameras hinzugefügt haben. Der Monitor kann den Stream von bis zu 4 Kameras gleichzeitig anzeigen.

Hinweis: Der Monitor kann ein lautes Geräusch machen, wenn der Monitor zu nahe an der Kamera steht. Das Problem kann gelöst werden, wenn der Monitor von der Kamera entfernt ist.


6. So installieren Sie die Kamera an der Wand

 - 1) Platzieren Sie die Halterung an der Wand, und markieren Sie dann die Positionen an der Wand.

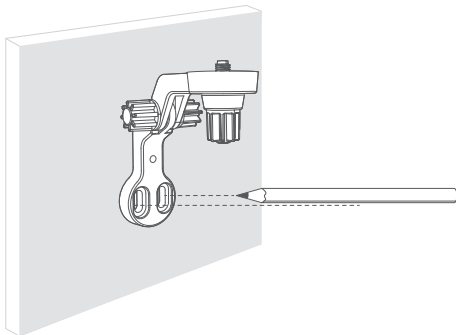


- 2) Bohren Sie Löcher an den markierten Positionen und setzen Sie Dübel in die Löcher.

 
Hinweis: Anker werden in der Holzwand nicht benötigt.

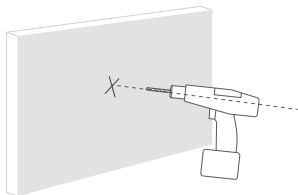

 - 3) Befestigen Sie den Bügel mit den Schrauben an der Wand.

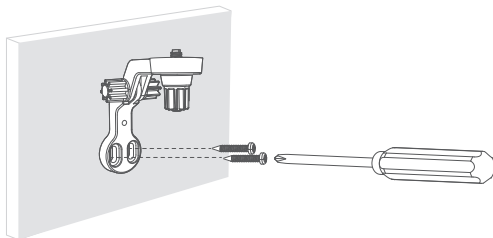


 4) 4. Installieren Sie die Kamera in der Halterung.

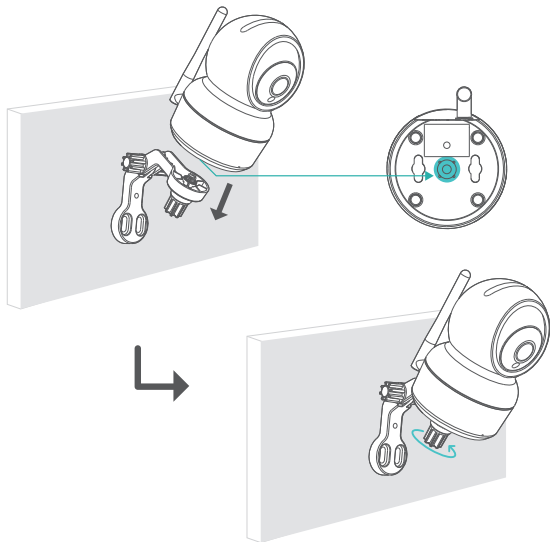

7. Einstellungsmenü für das Babyfon

 Drücken Sie die **Netztaste**, um den Monitor einzuschalten, und drücken Sie dann die **Menü-Taste** (), um zum Einstellungsmenü zu gelangen.

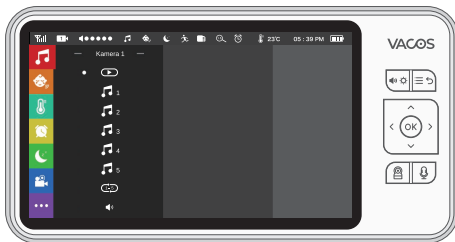

Einführung in das Einstellungsmenü

Menü-Optionen	Beschreibung
	Wählen Sie das Schlaflied, das Sie spielen möchten. Sie können auch die Lautstärke anpassen oder das Schlaflied ausschalten. Hinweis: Der Tonalarm wird beim Abspielen von Schlafliedern automatisch ausgeschaltet. Warnung: Möglicherweise hören Sie den Schrei des Babys nicht, wenn das Schlaflied abgespielt wird.

Menü-Optionen	Beschreibung
	Sie können die Schallempfindlichkeit einstellen. Wenn die Kamera ein bestimmtes Geräusch erkennt, zeigt der Monitor das Symbol an und warnt Sie akustisch. Hinweis: Das Umgebungsgeräusch kann zu Fehlalarmen führen.
	Sie können den Temperaturerfassungsbereich einstellen. Wenn die Temperatur den angegebenen Wert überschreitet, zeigt der Monitor das Symbol an und warnt Sie akustisch.
	Einrichten des Weckers
	Sie können die Bildschirmzeit für die automatische Sperre Ihres Monitors zwischen 1, 2 und 5 Minuten wählen.

	Aufnahmeeinstellung	Beschreibung
	Wiedergabe	Aufgezeichnetes Videomaterial anzeigen
	Bewegungserkennung	Ein-/Ausschalten der Bewegungserkennungswarnungen
	Rekordzeit	Einrichten der einzelnen Aufnahmezeit
	Überschreiben	Wählen Sie "Ein", die TF-Karte ist voll und löschen Sie das älteste Video während der Aufnahme. Wählen Sie "Aus" und die TF-Karte zeichnet nicht mehr auf, wenn sie voll ist.

	Aufnahmeeinstellung	Beschreibung
	Formatierung	Formatieren der TF-Karte Hinweis: Formatieren Sie die TF-Karte, wenn Sie die TF-Karte zum ersten Mal in der Kamera installieren.
	Speicher Verfügbarkeit	Die Speicherkapazität der TF-Karte
	Systemeinstellung	Beschreibung
	Datum & Uhrzeit	Einrichten von Datum und Uhrzeit auf dem Monitor
	Kamera Kopplung	Eine Kamera hinzufügen Hinweis: 1 Monitor unterstützt bis zu 4 Kameras.
	Frequenz	Ändern Sie die Aktualisierungsrate des Geräts, um Flimmern zu verhindern.
	Alarmvolumen	Einrichten der Alarmlautstärke
	Sprache	Einrichten der Menüsprache
	Standard	Alle Einstellungen auf die Standardeinstellungen zurücksetzen.
	Firmware Update	Die Versionsinformationen und Update-Einstellungen der Software
	Bild Umdrehen	Wählen Sie je nach Installationsrichtung der Kamera, ob das Bild gespiegelt wird oder nicht.

Hinweis: Das Intervall zwischen jeweils zwei akustischen Warnsignalen beträgt 10 Sekunden. Während des 10-Sekunden-Intervalls sendet Ihnen das Gerät keine Benachrichtigungen, auch wenn es Bewegungsereignisse gibt.

8. Einführung in Live-Stream



Icons	Beschreibung
	Die Signalstärke zwischen der Kamera und dem Monitor
	Zustand der Kamera: Das weiße Symbol zeigt an, dass die Kamera nicht aufzeichnet. Das Gerät zeichnet gerade auf, wenn das Symbol abwechselnd rot und weiß blinkt.
	Kamera Lautstärke
	Das Schlaflied spielen
	Die VOX ist eingeschaltet. Das weiße Symbol zeigt an, dass die VOX eingeschaltet ist. Es ertönt ein akustisches Warnsignal, wenn es Bewegungsereignisse gibt. Das Symbol blinkt 10 Sekunden lang abwechselnd rot und weiß, dann wird das Symbol weiß.

Icons	Beschreibung
	Schlafmodus
	Bewegungserkennungsfunktion: Das weiße Symbol zeigt an, dass die Bewegungserkennung eingeschaltet ist. Wenn die Kamera Bewegungen erkennt, wird das Symbol rot und Sie hören einen Aufforderungston. Das rote Symbol wird innerhalb von 10 Sekunden weiß.
	TF-Karte: Das weiße Symbol zeigt an, dass eine TF-Karte eingelegt wurde, während das rote Symbol anzeigt, dass der Kartenspeicher voll ist.
	Die Bildvergrößerung des Monitors
	Temperatur erfassen: Das rote Symbol zeigt an, dass die Temperatur die angegebene Linie überschreitet, und Sie hören einen Aufforderungston.
	Fütterungszeit: Nachdem Sie die Lautstärke der Kamera aktiviert haben, wird auf dem Monitorbildschirm ein rotes Alarmsymbol angezeigt, und Sie hören eine Sprachaufforderung, wenn der Countdown endet.
	Verbleibende Leistung der Batterie
	Drücken Sie lange die Sprech taste auf dem Monitor. Dieses Symbol wird auf dem Monitorbildschirm angezeigt.

Icons	Beschreibung
	In einem eigenständigen Live-Stream können Sie die Kamera nach oben und unten, links und rechts drehen, indem Sie die Richtungstaste auf dem Monitor steuern.
	Drücken Sie in einem bestimmten Einzelmonitoring-Bildschirm die Untermenü-Taste, um mit der Aufwärts/Abwärts-Taste die Helligkeit, mit der Links/Rechts-Taste die Lautstärke einzustellen. Drücken Sie die OK-Taste, um manuell aufzunehmen.
	Im Mehrbildmodus zeigt der Monitor das Auswahlfeld an. Wenn das Auswahlfeld im Kamerastream in der oberen rechten Ecke angezeigt wird, bedeutet dies, dass Sie die Kamera ausgewählt haben und die Stimme von der Kamera stammt. Bitte drücken Sie die Menütaste, um die Einstellungen der Kamera zu erhalten. Steuern Sie die Aufwärts- / Abwärts- / Links- / Rechtsrichtung, um das Auswahlfeld zu ändern. Nachdem Sie die OK-Taste gedrückt haben, können Sie mit dem Auswahlfeld zum Stream der aktuellen Kamera wechseln.

9. FAQ

Frage: Wie kann ich den LCD-Monitor ein-und ausschalten und ein-und ausschalten?

Antwort: Ein- und Ausschalten des Monitors: Drücken Sie den Netzschalter 5 Sekunden lang. Ein-/Ausschalten des Monitors: Drücken Sie einmal den Netzschalter.

Frage: Wie groß ist der Verbindungsabstand zwischen Kamera und Monitor?

Antwort: Der längste Verbindungsabstand zwischen Kamera und LCD-Monitor beträgt 1.000 Fuß in offenen Bereichen ohne Störung.

Frage: Warum zeichnet der Babyphone Videos ohne vom Menschen ausgelöste Ereignisse auf?

Antwort: Wenn die Bewegungserkennungsfunktion aktiviert ist, beginnt der Babyphone mit der Aufzeichnung, sobald Szenenänderungen erkannt werden (z.B. oszillierender Lüfter, flatternder Vorhang oder schwankende Bäume).

Frage: Warum schaltet sich das Display nach dem Ausschalten automatisch ein?

Antwort: Die Anzeige wird eingeschaltet, wenn die Ein-/Aus-Taste gedrückt wird oder wenn Alarme für Audio, Bewegung, Temperatur und Vorschubzeit aktiviert werden.

Shenzhen Kean Digital Co., Ltd.

Address: Room 1001, Rujun Building, No.105 Center Road,
Bantian Street, Longgang District, Shenzhen, 518129, China.

support@vacos.com | vacos.com

MONITOR FCCID: 2AKL2K52LED

CAM FCCID: 2AKL2K62CAM

Made in China



THEMIS AR Unterstützung UG

Beedstrasse 54, In Dusseldorf, (40468), Deutschland

