

MAINTENANCE

1. Ensuring the lamp is kept clean will optimise performance.
2. Clean solar panel with a damp towel, don't apply excessive pressure.
3. Don't use any solvents or cleaning agents on the solar panel.

 
SAFETY INFORMATION

1. Do not install close to flames or flammable gasses.
2. Do not connect to 110V AC to avoid damage.
3. Do not install on an unstable surface.
4. Do not stare directly at the lights when they are on.
5. To prevent the unit from falling, install the base unit tightly with expansion screws.
6. Do not install in close proximity to other light sources.
7. Keep children away.


LIMITED WARRANTY

LANGY warrants to the original purchaser that this product is free from defects in materials and workmanship for a period of 1 year from the date of purchase.

PACKING LIST

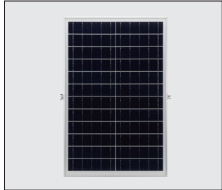

 1. Solar Panel

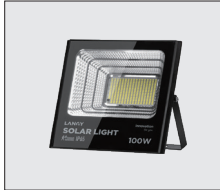


2. Solar Lamp



3. Remote



 4. Expansion Screws
Wing Screws

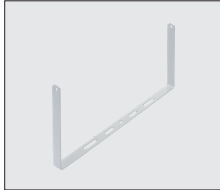

5. Frame



6. Use Manual

LANGY

PRODUCT MANUAL

■ TG02 Solar Led Flood Light




Web: www.langy-energy.com

Email: service@langy.cc

SPECIFICATION

Power	25W (Dual)	40W	60W	100W	200W
LED Chips	69Pcs	108Pcs	130Pcs	253Pcs	398Pcs
Solar Pannel	6V/10W	6V/10W	6V/15W	6V/20W	6V/30W
Capacity of Battery	5000mAH	8000mAH	12000mAH	18000mAH	30000mAH
Waterproof	IP65				
Color Temperature	8000K				
Charing Time	5-6hours Sunshine				
Work Time:	8-10 hours				
Warranty:	1 Year				

 REMOTE CONTROL FUNCTION

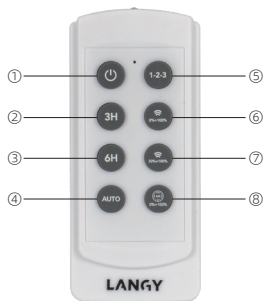


1. Turn ON/OFF
2. Stay on 3 hours and turn off.
3. Stay on 6 hours and turn off.
4. Stay on all night.
5. 25%/50%/100% Brightness Adjustment.
6. Radar motion 1 (100% brightness when motion detected, turn off when no motion)
7. Radar mode 2 (100% brightness when motion detected, 30% brightness when no motion)
8. Go to Radar mode 1 after stay on 4 hours.

* The remote control will be updated and replaced without any notice. Please take the actual product as the standard.

* You may decrease the brightness to keep a longer light time.

* Any problem with using or install, please contact us (service@langy.cc).

 INSTALLATION

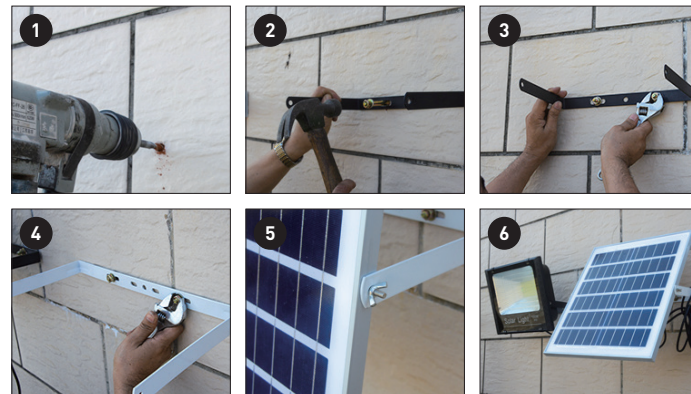

1. Select a location to mount the solar panel, A sunny South facing location is the best.
2. Select a location to put the light. Please far from any other light, such as street light.
3. Use 10mm drill to punch, drilling depth is 50mm.
4. Fasten the black frame of lamp onto the wall with 2 expansion screws.
5. Fasten the white frame of the solar panel onto the wall with 2 expansion screws.
6. Fasten the solar panel on the white frame.
7. Fasten the lamp on the black frame and connect the solar cables.
8. Turn on the light by remote.

NOTE:

- The max distance between solar panel and light is 16.4ft.
- The LED indicator will flash red when the solar panel is charging.
- It will stay on red if it is fully charged.
- If you have any questions, please contact us at service@langy.cc at any time.

TROUBLE SHOOTING

The light can't turn on:

1. Please make sure the cable is connected well.
2. Allow to charge in full sunlight for 5-6hours.
3. Remote doesn't work, please contact us for a replacement. (service@langy.cc)