

# Bonsenkitchen

## Hand Blender Operation Instructions Model: HB8001



[www.bonsenkitchen.com](http://www.bonsenkitchen.com)

# Contents

IMPORTANT SAFEGUARDS.....	1-3
NOTES ON THE CORD PLUG .....	4
PACKAGE CONTENTS .....	4
KNOW YOUR HAND BLENDER .....	5
TECHNICAL DETAILS .....	5
INITIAL USE .....	5
INSTRUCTION FOR BLENDER.....	6-7
INSTRUCTION FOR CHOPPER .....	7-10
INSTRUCTION FOR EGG WHITE BEATER .....	11-12
CLEANING AND MAINTENANCE .....	12
WARRANTY CLAIM PROCEDURE .....	13
ENVIRONMENT FRIENDLY DISPOSAL.....	13

# **IMPORTANT SAFEGUARDS**

Before using the electrical appliance, the following basic precautions should always be followed including the following:

- 1. Read all instructions.**
- 2. Before using check that the voltage of wall outlet correspond to the one shown on the rating plate.**
- 3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.**
- 4. If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.**
- 5. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.**
- 6. Do not let cord hang over edge of table or hot surface.**
- 7. Do not immerse upper part of blender into water as this would give rise to electric shock.**
- 8. Close supervision is necessary when your appliance is being used near children or infirm persons.**
- 9. Avoid contacting moving parts.**
- 10. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.**

11. The appliance cannot be used for chopping ice or blending hard and dry substance, otherwise the blade could be blunted.
12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
13. Be sure chopper lid is securely locked in place before operating appliance.
14. The use of accessory not recommended by the manufacturer may cause injuries to persons.
15. Do not operate the appliance for other than its intended use.
16. Children should be supervised to ensure that they do not play with the appliance.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
18. **SAVE THESE INSTRUCTIONS.**  
**HOUSEHOLD USE ONLY.**

19. The use of accessory not recommended by the manufacturer may cause injuries to persons.
20. Before removing the lid from the jar, release the button and unplug the appliance, wait until the blades have come to a complete stop.
21. Always remove the blade assembly before pouring contents from jar.
22. Be sure to switch off the appliance after each use of your food processor. Make sure the motor stops completely before disassembling.
23. The metal blades are extremely sharp, please handle carefully.
24. Always hold the blade stem instead of cutting edge when handling and cleaning the blade.
25. Be care of potential injury from misuse.

## **NOTES ON THE CORD PLUG**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## **PACKAGE CONTENTS**

**1 motor unit**

**1 blend rod**

**1 chopper lid**

**1 knife blade**

**1 egg whisk**

**1 blending jar**

**1 chopper bowl**


**1 wall-hooker**

**Operating instructions**

**Check the delivery contents for completeness immediately after unpacking.**

**Remove all packaging materials and plastic film from the appliance.**

# KNOW YOUR HAND BLENDER

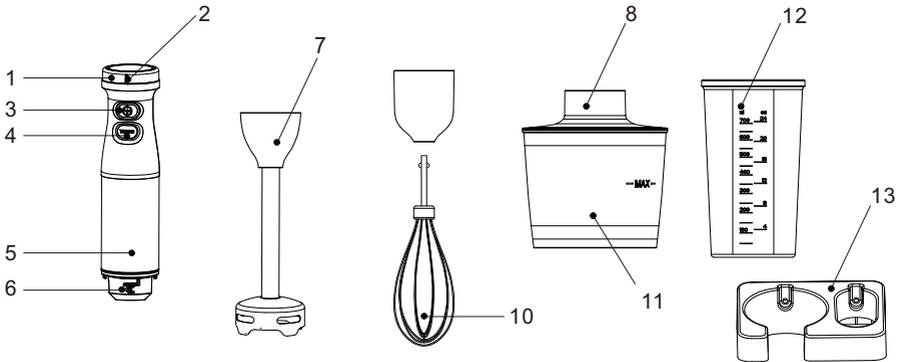

- 1. Top lid
- 2. Speed knob
- 3. Low speed button
- 4. High speed button  
(turbo button)
- 5. Motor unit
- 6. Coupler
- 7. Blend rod
- 8. Chopper lid
- 9. Kinfe blade
- 10. Egg whisk
- 11. Chopper bowl
- 12. Blending jar
- 13. Wall-hooker

## TECHNICAL DETAILS

120V~60Hz, 225W

## INITIAL USE

Before the first use, clean the blender according to the section of “quick cleaning”.  
The time running unit without load can't exceed 15s.

 
**Important:** Blades are very sharp, handle with care. Ensure that the hand-held blender is unplugged from the power outlet before assembling or removing attachments.

# INSTRUCTION FOR BLENDER


( IT IS SUITABLE FOR BLENDING VEGETABLE AND FRUIT )

Max operation duration per time should less than 1 minute, and 3 minutes rest time must be maintained at two consecutive cycles.


1) To assemble the blend rod with the motor unit.



2) Turn the shaft anti-clockwise direction until tightened. To unlock, just turn it in the adverse direction.

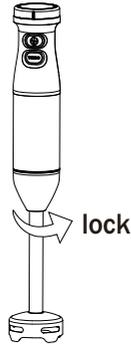


3) Simply plug the hand-held blender to power outlet.

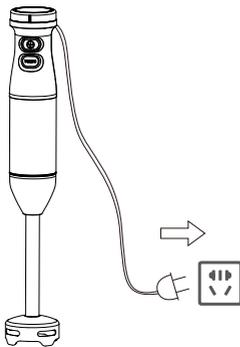


4) Place food into the blending jar.


**Note:** When blending carrot, cut small piece, and place it into small chopper bowl, then add water, the max quantify of carrot can't exceed 280g, water, 420g, in every blending.

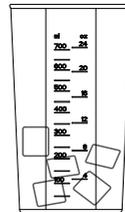

5) Lower the hand-held blender into food. Then press and hold the low speed button or high speed button to start operating.

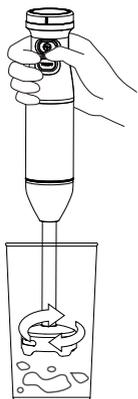

6) To stop the hand-held blender by releasing the low speed button or high speed button.

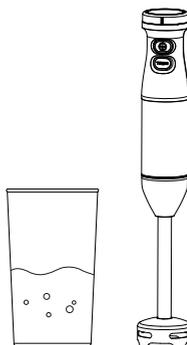

**Note:** There is a stepless speed knob, you can turn clockwise to increase speed, and turn anticlockwise to decrease speed. The speed knob is effective only after you pressing low speed button, once you pressed high speed knob, the speed knob is ineffective.

## INSTRUCTION FOR CHOPPER


( USING FOR CHOPPING MEAT AND MAKING GARLIC PASTE )

Max operation duration per time should less than 30 second, and 3 minutes rest time must be maintained at two consecutive cycles.

1) Place the chopper bowl on a clean, level surface.




2) Assemble the stainless chopping blade into the chopper bowl.

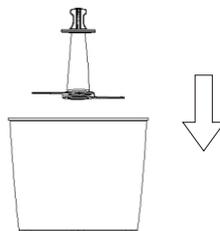


3) Place food into the chopper bowl.


**Note:** remove the bone of the meat, cut small piece, then place the meat into bowl, the max quantity of meat can't exceed 200g in every blending.

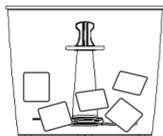


4) Attach the lid onto the chopper bowl by pressing it down. To detach the lid by lifting it up.

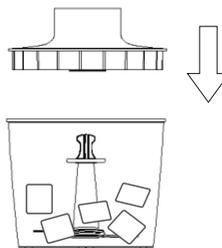


5) Insert the motor unit into the hole of the chopper lid.

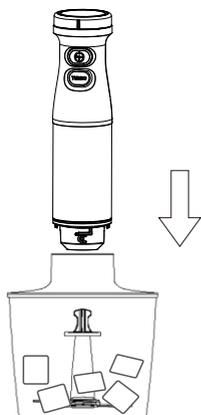


6) Lower the hand-held blender into food. Then press and hold the low speed button or high speed button to start operating.

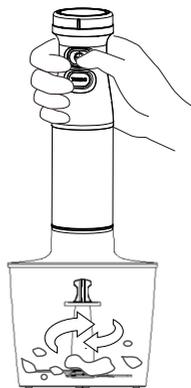


7) To stop the appliance by releasing the low speed button or high speed button of the motor unit.

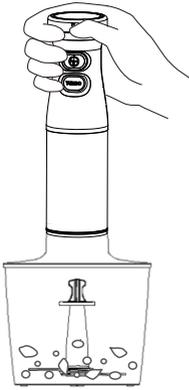


8) After finishing chopping, unplug the power outlet firstly,

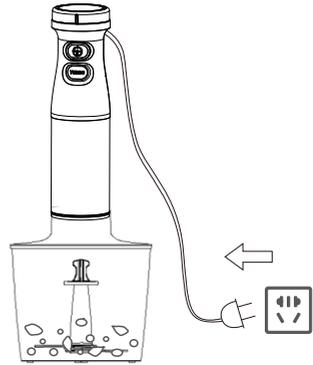

9) Then remove the motor unit from the chopper lid by turning it in anti-clockwise.

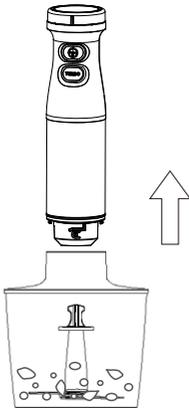

10) Open the chopper lid by turning it in anti-clockwise and remove the chopped food.

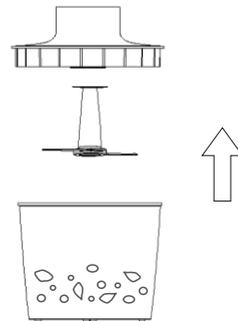

## Caution:

- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- Be sure chopper lid is securely locked in place before operating appliance.
- During operating or after chopping, for safety, you shall disassemble the motor unit from the chopper lid firstly, then remove the chopper lid. Never remove the chopper lid with the motor unit in place.



## INSTRUCTION FOR EGG WHITE BEATER

### ( FOR MIXING EGG WHITE )


Max operation duration per time cannot exceed 1 minute, and 3 minutes rest time must be maintained at two consecutive cycles.

1) To assemble the egg white beater with the motor unit, turn the whisk anti-clockwise direction until tightened. To disassemble, just turn in the adverse direction.


2) Simply plug the hand-held blender to power outlet.

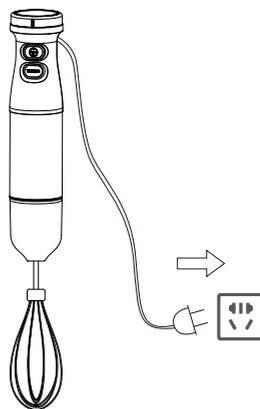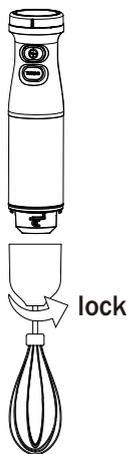


3) Place egg white into the cup, generally, two eggs white is enough.

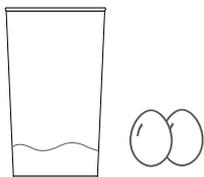


4) Lower the hand-held blender into food.

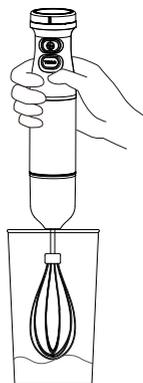

5) Then press and hold the low speed button or high speed button to start operating.

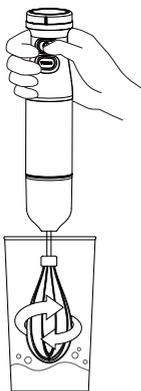

6) To stop the hand-held blender by releasing the low speed button or high speed button of the motor unit.

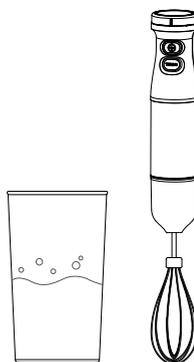

## Note:

The jar can be only used for blending food, please clean it immediately after each use. Never use it to store food.

# CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the detachable stem.

**Note:** Do not immerse the detachable stem of the blender in water because overtime the lubrication on the bearings may wash away.

2. Wash the detachable stem under running water, without the use of abrasive cleaner or detergents. After finishing cleaning the detachable stem, place it upright so that any water which may have got in, can drain out. The stem is dishwasher safe component.
3. Wash the cup, bowl, beater and blade in warm soapy water. The bowl and the beater are not recommended to place in dishwasher as the plastic component deteriorates through prolonged use of dishwasher cleaning.
4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.
5. Dry thoroughly.

**Caution:** Blades are very sharp, handle with care.

## Quick cleaning

Between processing tasks, hold the hand-held blender in the cup half filled with water and turn on for a few seconds.

## WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase.

You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: **1-888-965-8032**

[support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)

## ENVIRONMENT FRIENDLY DISPOSAL

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and health way.

Register your product at [www.bonsenkitchen.com](http://www.bonsenkitchen.com)  
to get more perks!



Follow us @bonsenkitchen

**Bonsen Electronics Inc.**

📍 : 5805C Peachtree Corners East  
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : [support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)