

# Bonsenkitchen

## Electric Kettle Operation Instructions Model: EK8905



[www.bonsenkitchen.com](http://www.bonsenkitchen.com)



# Contents

IMPORTANT SAFEGUARDS .....	1-2
PACKAGE CONTENTS .....	3
KNOW YOUR ELECTRIC KETTLE .....	3
BEFORE USING YOUR KETTLE .....	4
USING YOUR ELECTRIC KETTLE .....	4-5
OPTIMUM TEMPERATURE FOR TEA AND COFFEE .....	5
BOIL-DRY PROTECTION .....	6
CLEANING AND MAINTENANCE .....	6
REMOVAL OF MINERAL DEPOSITS .....	6
STORAGE .....	7
WARRANTY CLAIM PROCEDURE .....	7
ENVIRONMENT FRIENDLY DISPOSAL .....	7

# IMPORTANT SAFEGUARDS

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base can not be used for other than intended use.
4. Do not operate the appliance without load to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play it.
17. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
18. While boiling water, avoid to contact with steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.
19. Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.


20. Always ensure the lid is closed and do not lift it while the water is boiling.  
Scalding may occur if the lid is removed during the brewing cycles.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
22. Do not use the appliance for other than intended use.
23. The kettle can only use with the stand provided.
24. If the kettle is overfilled, boiling water may be ejected.
25. Do not use the kettle outdoors.
26. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
27. Children should be supervised to ensure that they do not play with the appliance.
28. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
29. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
30. Avoid spillage on the connector.
31. Be care of potential injury from misuse.
32. The heating element surface is subject to residual heat after use.
33. The metal surfaces are liable to get hot during use.
34. Save these instructions.
35. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.

# PACKAGE CONTENTS

- 1 Water Kettle
- 1 Power Base with Cord
- 1 Operating Instructions

Check the delivery contents for completeness immediately after unpacking.  
Remove all packaging materials and plastic film from the appliance.

# KNOW YOUR ELECTRIC KETTLE

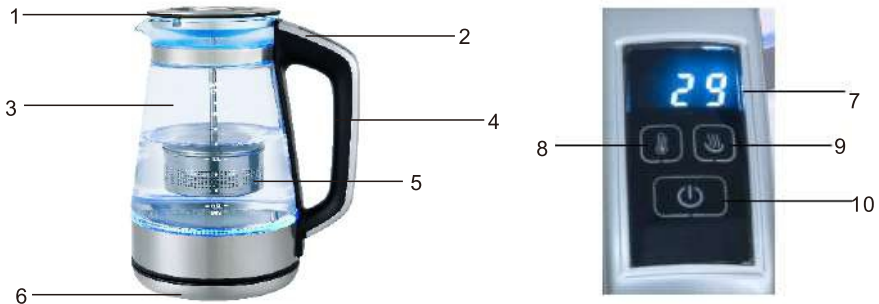

- 1. Top lid
- 2. Control Panel
- 3. Glass body
- 4. Handle
- 5. SUS tea basket
- 6. Power Base
- 7. LED display
- 8. Adjust temperature button
- 9. Keep warm function button
- 10. Start heating(On) button  
cancel heating(Off) button

Min/Max capacity 0.5qt/1.8qt

Temperature control from 104°F to 212°F, increase or decrease each 50°F

Keep warm from 104°F to 194°F

Keep warm for 60 minutes

## **BEFORE USING YOUR ELECTRIC KETTLE**

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

## **USING YOUR ELECTRIC KETTLE**

1. To fill water into the kettle, remove it from the power base and open the lid by lifting it, fill with the desired amount of water to the kettle. Always fill the kettle between the minimum 0.5QT and maximum 1.8QT marks for water boiling, and fill the kettle between the minimum 0.5QT and maximum 1.3QT marks for tea brewing.

Too little water will result in the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

2. Position the kettle on the power base.
3. Connect the plug into a power outlet. The display turns on for a moment, all buttons and indicator lights are lit and the appliance beeps once which means that the base is connected to the power source and the kettle is placed on the base.
4. Close the lid and place the kettle on the power base, the appliance beeps once, the display turns on and starts to flash. On the display you will see the current water temperature which will be visible for about 10 seconds. If you do not perform any actions, the kettle turns off automatically and all lights go out.
5. Press the ON/OFF button without setting other functions. The kettle turns on and beeps, the display starts to flash. the kettle boils water up to 212°F, then switches off automatically when reach 212°F with a long beep.

- 6.If you just want to heat up the water, press the adjust temperature buttons to change the temperature. the temperature setting will be shown on the display.you may select between the predefined temperature settings: from 104°F to 212°F, each 50°F. the temperature set cannot be lower than the real-time temperature of water in the kettle.after reaching the desired temperature of water, the kettle switches off with a long beep.
- 7.If you want to select the keep-warm function, press the adjust temperature buttons to set your desired temperature.then press the on/off button to boil water . In this mode, press the keep warm button.then the sign of keep warm button start to flash,which means enter keep warm mode.The temperature control from 104°F to 194°F.each 50°F.The available range of temperature setting is from 104°F to 212°F.
- 8.In order to switch off the keep-warm function, press the keep-warm button again or ON/OFF button to switch off the kettle. Otherwise the water temperature will be maintained at a per-set level. If no action is taken for 60 minutes under the keep-warm mode, the kettle will switch off. Press the ON/OFF button again to turn on the kettle (the kettle beeps once).
11. Lift the kettle from the power base and then pour the water.

**NOTE:** Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot. Ensure power supply is turned off when kettle is not in use. The kettle may be stored on the power base when not in use.

## **OPTIMUM TEMPERATURE FOR TEA AND COFFEE**

104-140°F - blends for babies

158-176°F - green and white tea

194°F - instant coffee

212°F - black tea



## **BOIL-DRY PROTECTION**

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

## **CLEANING AND MAINTENANCE**

Always disconnect the appliance from the power outlet before cleaning. Never immerse the kettle or cord in water, or allow moisture to contact with these parts.

## **REMOVAL OF MINERAL DEPOSITS**

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, use Liquid Descaler, a simple to use non-toxic cleaner.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder with water and be allowed to stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use. The outside of the kettle can be wiped over with a damp cloth.

### **Cleaning appearance of housing**

Wipe the appearance of housing with a wild and damp cloth or cleaner, never use a poisonous cleaner.

### **Cleaning the filter**

Remember to clean the filter with a wild and damp cloth at intervals. The filter can be detached for easier cleaning simply by pulling it out.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

## STORAGE

When not in use or storage, the power cord may be wound around the cord storage under the bottom of kettle.

## WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase.

You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: **1-888-965-8032**

[support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)

## ENVIRONMENT FRIENDLY DISPOSAL

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and health way.



Register your product at [www.bonsenkitchen.com](http://www.bonsenkitchen.com)  
to get more perks!



Follow us @bonsenkitchen

**Bonsen Electronics Inc.**

📍 : 5805C Peachtree Corners East  
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : [support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)