

# Bonsenkitchen

## Electric Kettle

Operation Instructions

Model: EK8903



[www.bonsenkitchen.com](http://www.bonsenkitchen.com)



# Contents

- IMPORTANT SAFEGUARDS ..... 1-2
- PACKAGE CONTENTS ..... 3
- KNOW YOUR ELECTRIC KETTLE ..... 3
- BEFORE USING YOUR KETTLE ..... 4
- USING YOUR ELECTRIC KETTLE ..... 4-6
- BOIL-DRY PROTECTION ..... 6
- CLEANING AND MAINTENANCE ..... 6
- REMOVEL OF MINERAL DEPOSITS ..... 7
- WARRANTY CLAIM PROCEDURE ..... 7
- ENVIRONMENT FRIENDLY DISPOL ..... 8

# **IMPORTANT SAFEGUARDS TIPS**

- 1. Read all instructions before using.**
- 2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.**
- 3. Do not let the cord hang over edge of table counter or touch hot surface.**
- 4. Do not place on or near a hot gas or electric burner or in a heated oven.**
- 5. Do not operate without water, otherwise heater element would be damaged.**
- 6. Ensure that the kettle is used on a firm and flat surface where the children can't touch. This can prevent the kettle from overturning.**
- 7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.**
- 8. While water boiling, avoid contacting with steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.**
- 9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.**
- 10. Be careful when opening the lid for refilling when the kettle is hot.**
- 11. Close supervision is necessary when any appliance is used by or near children.**
- 12. Do not touch the hot surface. Use the handle or the button only.**
- 13. The kettle is for household use only.**
- 14. Do not use outdoors.**
- 15. The use of accessory attachments, which are not recommended by the appliance manufacturer, that may result in fire, electric shock or personal injury.**
- 16. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.**
- 17. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.**
- 18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.**

19. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
20. Do not use the appliance for other than intended use.
21. The kettle can only use with the stand provided.
22. If the kettle is overfilled, boiling water may be ejected.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farmhouses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
26. Save these instructions.

## PACKAGE CONTENTS

1 Water Kettle


1 Power Base with Cord

1 Operating Instructions

Check the delivery contents for completeness immediately after unpacking.

Remove all packaging materials and plastic film from the appliance.

## KNOW YOUR ELECTRIC KETTLE

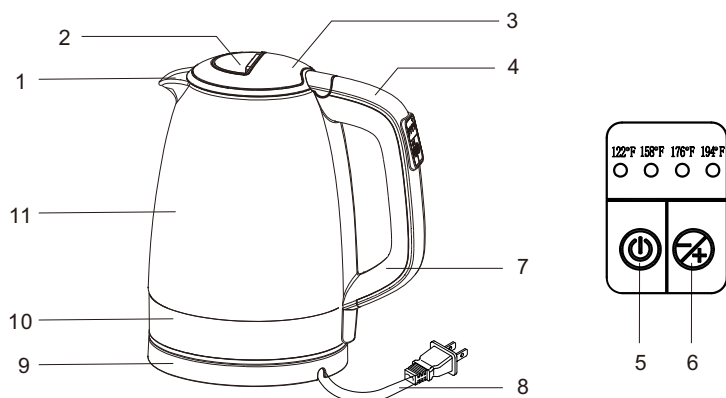

1. Spout

2. Lid

3. Lid decoration piece

4. Handle cover

5. 212°F button, Power button  
or Keep-warm button

6. Temperature selector button

7. Handle

8. Power cord

9. Base

10. Button cover decoration

11. Glass

## BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

**NOTE:** The max capacity of kettle is 1.8QT.

## USING YOUR ELECTRIC KETTLE

1. To fill the kettle, remove it from the power base and open the lid by pressing Lid Release button, fill with the desired amount of water, and then close the lid. Alternatively, the kettle may be filled through the spout. The water level should not exceed MAX marks or sit below MIN level. Too little water will result in the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

2. Lay the kettle on the power base and connect the plug into a power outlet.

**NOTE:** Designed power base can be rotated by 360 degree to facilitate the plug connecting with power outlet.

### 3. Function

EK8903 is a kettle of using IC program to control heat up or keep warm water.

- 1) With power-on detecting function: when put the kettle onto the power base, all the four indicators in the control panel turn on and one beep can be heard. At the same time, the indicator in the kettle lights up in red, green, blue in sequence and then turns off, and the indicators in the control panel turn off simultaneously, together with one beep heard.
- 2) Different colors for indicating different temperatures: The indicator in the kettle will illuminate in different colors under different water temperature at any condition. 122°F(green), 158°F(blue), 176°F(purple), 194°F(light green), 212°F(red).

#### 4. Operation

##### 1) Boil water

Put the kettle onto the power base, press “212°F” button, the kettle starts to work and heat the water up to 212°F directly, at that time, the indicators in the control panel do not light up and the indicator in the kettle illuminates in red. When the water temperature reaches 212°F the indicator in the kettle will turn off and two beeps can be heard.

##### 2) Heat water to selected temperature

Put the kettle onto the power base, press "+/-" button to select your desired water temperature (122°F/158°F/176°F/194°F), after select it, its corresponding indicator turns on. And then press “212°F button”, the kettle starts to work and heat the water to the selected temperature, at that time, all the indicators turn off and two beeps can be heard.

##### 3) Keep warm at the selected temperature

Put the kettle onto the power base, press "+/-" button to select your desired keep-warm temperature ( 122°F/158°F/176°F/194°F ), after select it, its corresponding indicator turns on. And then hold and press “212°F button” for 3 seconds, and the kettle will enter into keep-warm mode after heat the water to the selected temperature, at that time, the indicator of the selected keep-warm temperature keeps blinking in a cycle of one time/second. When the water temperature reaches the selected temperature, one beep can be heard and the kettle will enter into the keep-warm condition. After keeping warm for 30 minutes, the kettle will shut off automatically and all the indicators will turn off.

**NOTE:** Ensure that switch is free of obstructions and the lid is firmly closed.

The kettle will not turn off if the switch is constrained or if the lid is opening.

#### 5. Lift the kettle from the power base and then pour the water.

**NOTE:** Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.



6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

**NOTE:** Ensure power supply is turned off when kettle is not in use.

## BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water to re-boil.

## CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a mild and damp cloth or cleaner, never use the toxic cleaner.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle so as to prevent the gloss loss.

3. When the kettle not in use, you shall store the power cord in the cord storage of the base.

## REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled by virtue of the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the efficiency of operation less. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow the instructions as below to use the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, filling the kettle with clean water, boiling and then throw it away. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

## WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase.

You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: **1-888-965-8032**

[support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)

## **ENVIRONMENT FRIENDLY DISPOSAL**

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and health way.

Register your product at **[www.bonsenkitchen.com](http://www.bonsenkitchen.com)**  
to get more perks!



Follow us @bonsenkitchen

**Bonsen Electronics Inc.**

📍 : 5805C Peachtree Corners East  
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : [support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)