Brake sensor installation instructions

Attention:

Please read this instruction carefully before replacing the battery, and prepare the needed tools.



1:Remove the 3M tape on the sensor and stick on the brake lever as photo (position can be adjustable)



2:Double check if the position is skew.

3 ways to install the magnet, see the photos, and the positions can be adjustable according to the result, the distance between magnet and sensor is 2-5mm.



Remarks:

The install way is not unique, the position and the distance both can be adjustable according to the different bikes and different brakes.