

● **How to Use Remote**

1. Product Information

Confirm Button: Gently press to play/pause

Joystick: To control the pace of text

Power Button

Indicator

Menu Button

A: Volume Up

 
B: Volume Down

Y: Mute in iOS, Menu in Android

X: Play/Pause

Mode Switch: Switch up to Key Mode;

Switch down to Game Mode

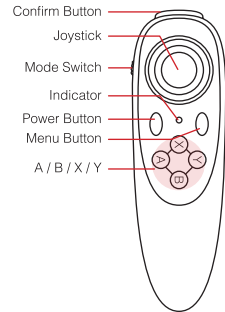

● **Instructions when the remote is used with the teleprompter**

Function	Operation	Indicator
Power	Power On: After inserting two AAA batteries, long press the power button for two seconds. Note: Batteries are not included in the package.	Fast flash when power on.
	Power Off: Long press the power button for about 5 seconds. Note: Without Bluetooth connection, system would power off automatically after 5 minutes. Without any operation, system will power off after 30 minutes.	Off after power off.
Pairing	Go to setting page of the APP, then search for the remote under the name of MOCUTE-052-XXX to begin pairing. Please make sure to turn on Bluetooth in case of connection failure. Note: When power on the next time, the remote would pair with the last paired electronic device	Slow flash after successful pairing.


Pairing	automatically. Instead, long press the power button for 8 seconds under power off condition, the indicator would fast flash and the remote would repair.	
Control the remote	(1) Turn on Bestview on the device to begin prompting. (2) Turn on Key Mode, then gently press Confirm button to play or pause, A/B to adjust volume, Y for mute in iOS and menu in Android. (3) Switch to Game Mode to control the joystick to rewind or fast forward.	/

● **Instructions when remote with electronic device**

Mode	Function	Operation on Android	Operation on iOS
Key Mode	Media Function	Confirm Button: Play or pause A/B: Volume up/down Y: Menu	Confirm Button: Play or pause A/B: Volume up/down Y: Mute
	Selfie Function	Gently press Confirm button to shoot.	Gently press A button to shoot.
	Mouse Function	1. Press menu button to turn on/off mouse function. 2. To drag the marker, press the Confirm button while controlling the joystick at the same time. 3. Confirm button: mouse left; Power button: mouse right	/
Game Mode	E-Book Page-turning	For iReader, control volume button A/B to page up/down.	For PPT on iOS or Kindle, switch to Game mode then page up/down by controlling the joystick.
	VR Game	If the applications support wireless GAMEPAD, then the remote can be used directly after successful pairing (make sure to switch on Game mode on the remote).	1. Please set English input method before entering VR applications. 2. The remote can be used directly if the applications

Game Mode	VR Game	Note: Some applications might need to manually choose wireless GAMEPAD in setting.	support iCade handle after successful pairing. Note: Some applications might need to manually choose wireless iCade handle in setting.
	VR Video Operation	Confirm button: play/pause Power button: return Joystick: fast forward or rewind	After setting English input method, the remote can be used when in Baofeng VR application or 3D Bobo. Note: Remember to choose handle-MOCUTE in Baofeng VR application.

 Package List

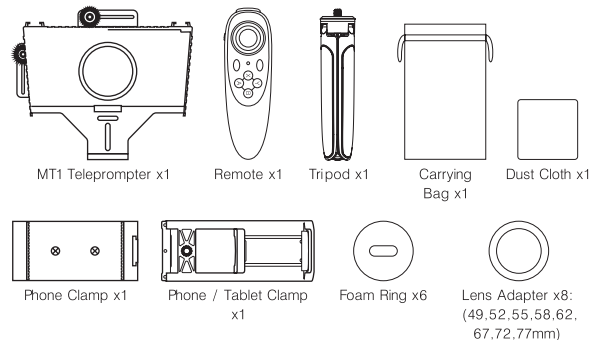

Specifications

A. Teleprompter

Material	Plastic and Glass
Dimensions	270*260*165mm
Weight	1000g

B. Remote

Size	116*45*13.5mm
Wireless Protocol	Wireless 3.0 Compliant
Wireless Distance	2-10m
OS	Android / iOS / PC
CPU	ARM968E-S Core
Battery	Alkaline AAA 1.5V *2
Working time (Continuous game)	About 40 hours
Work Current	0.5-8mA
Standby Current	0.5-1mA
Shutdown Current	<20uA

Moman (UK) Limited

Unit 25 Basepoint Business Centre, Aviation Park, West Christchurch, United Kingdom BH23 6NX

www.momanmic.com www.momanx.com www.momanx.co.uk

@MomanGlobal

https://moman.co/youtube



MT2
Teleprompter

User Manual

Thank you for choosing MOMAN product. Please read this manual carefully before use and follow all instructions mentioned herein.

Caring For Your MOMAN Product

- Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids and heat source away from the product to prevent mechanics damage.
- Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, impact of external force.
- Do not attempt to disassemble the product. Doing so voids warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happened.
- Failure to follow all the instructions may result in mechanics damage.
- Warranty does not apply to human errors.

Product Introduction

How to Install Teleprompter


1. Teleprompter Installation for Phone

① Insert the screw to [A], then attach the phone/tablet clamp to the screw. Regulate to the proper height then tighten the screw.

Note: The phone/tablet clamp is used for phone or tablet on each side, please choose carefully before installation.



② Attach a foam ring to [B].

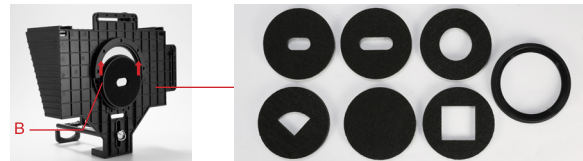


③ Install the phone clamp to the teleprompter at [C1] (additional screw required), [C2] or [C3], then tighten the screw to fix the clamp.


④ Set the phone on the rear clamp.

⑤ Turn on APP and place the device to the front clamp and adjust the angle accordingly.

Note: To prevent ghosting and to see clearly, user should increase text size.

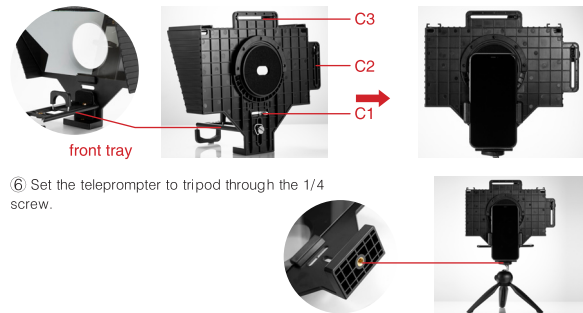

⑦ Optional: Equip the teleprompter with photography fill light or microphone.

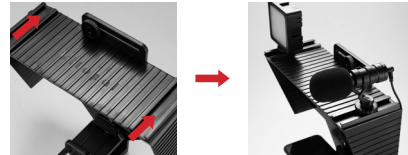

2. Teleprompter Installation for Camera

① Insert the screw to [A], then attach the phone/tablet clamp to the screw. Slide to the proper position for the clamp and tighten the screw to fix the clamp.


Note: The phone/tablet clamp is used for phone or tablet on each side, please choose carefully before installation.



② Choose the proper size of lens adapter and attach to the lens of camera.




③ Mount the camera to [B].

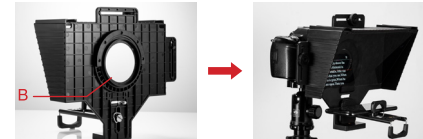


④ Set the camera to tripod through the 1/4 screw, then spin to lock it.

⑤ Turn on APP and install the phone/tablet to the front clamp.

Note: To avoid capturing the frame of teleprompter, please use longer mid-focus lens for SLR vertical shooting.

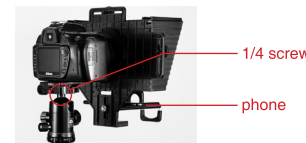

⑥ Optional: Equip the teleprompter with photography fill light and microphone through cold shoes.

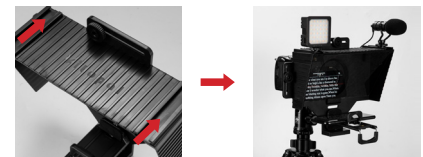


How to Use APP

1. Download APP

Downloading the APP Bestview through the QR Code below:



 2. Instructions of using APP

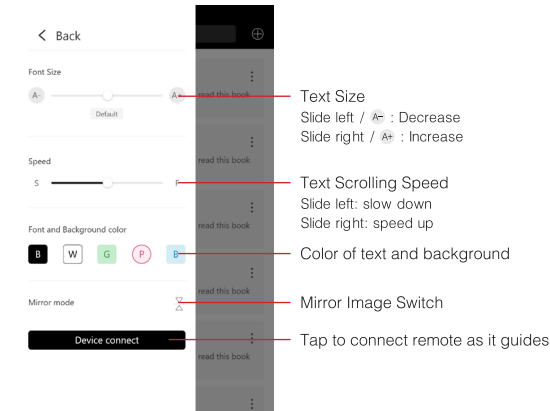

Text Size
Slide left / A- : Decrease
Slide right / A+ : Increase

Text Scrolling Speed
Slide left: slow down
Slide right: speed up

Color of text and background

Mirror Image Switch

Tap to connect remote as it guides