



YYCP005

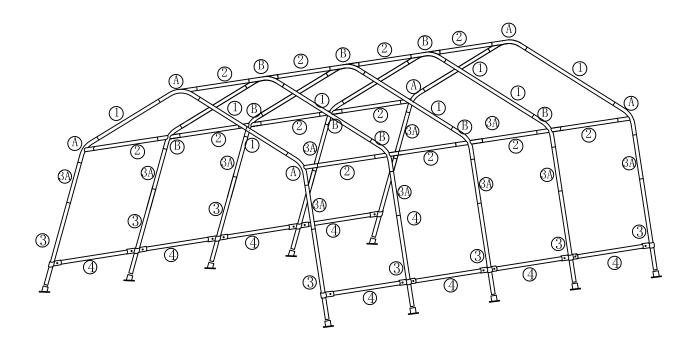


1	0 0	10pcs	E#	©——	4pcs
2	0 0	12pcs	F#	0	32+4pcs
3	0 0	10pcs	G#	M8×50	6+1pcs
3A	0 0	10pcs	Н#	M6×45	32+1pcs
4	0 0	8pcs	I#	ø 4. 2*160	30pcs
A		6pcs	J#	ϕ_5	4pcs
В		9pcs	K#		1pc
С		10pcs	K1#		2pcs
D#	00	8pcs	L#	<u>ه چ</u>	4pcs
D1#	00)00	12pcs	M#	M8×50	4+1pcs

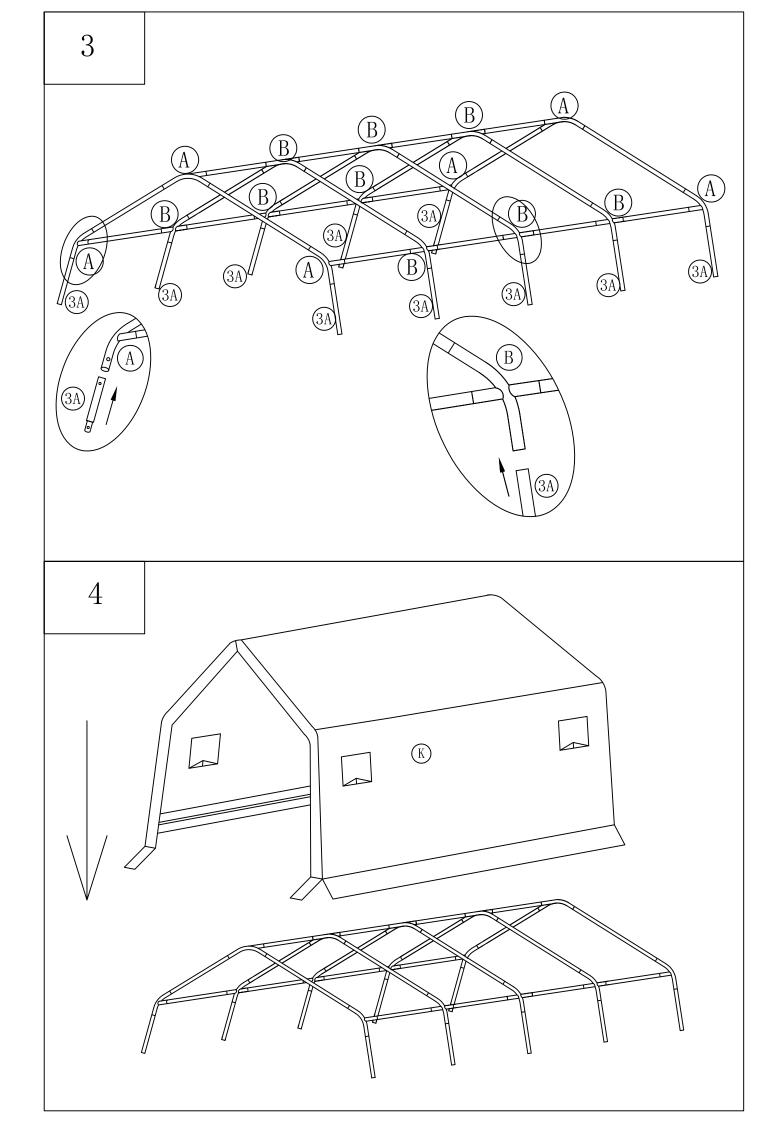

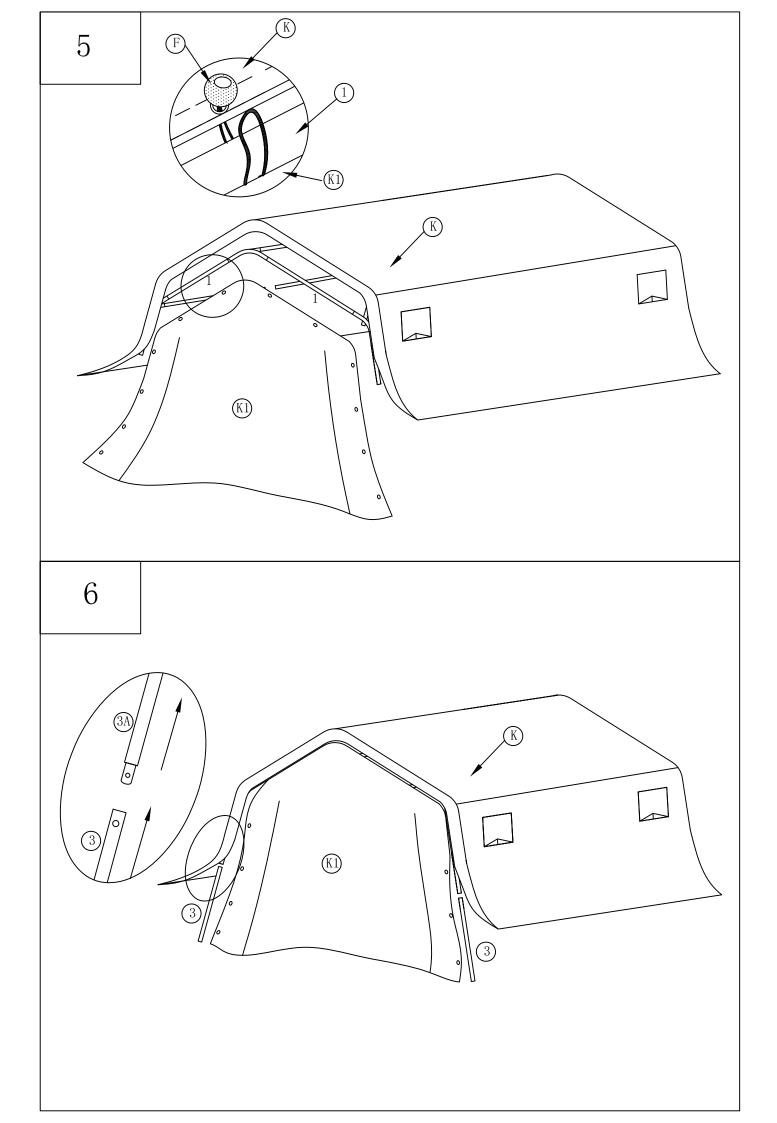

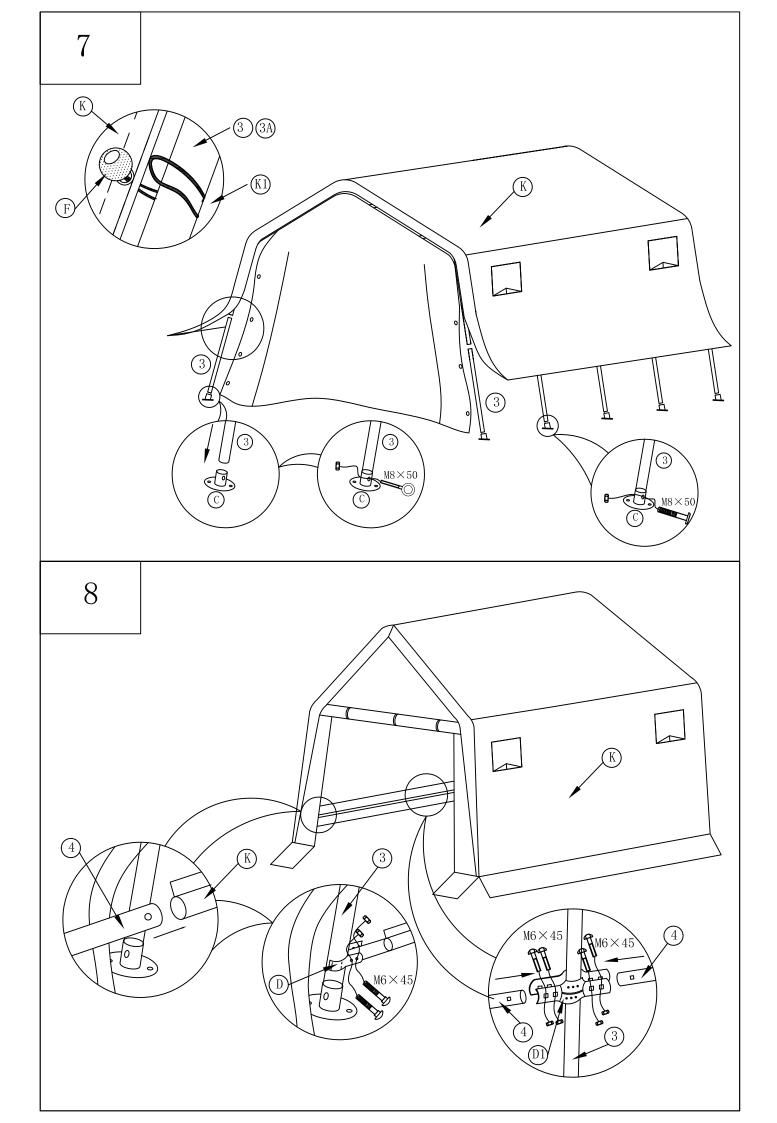


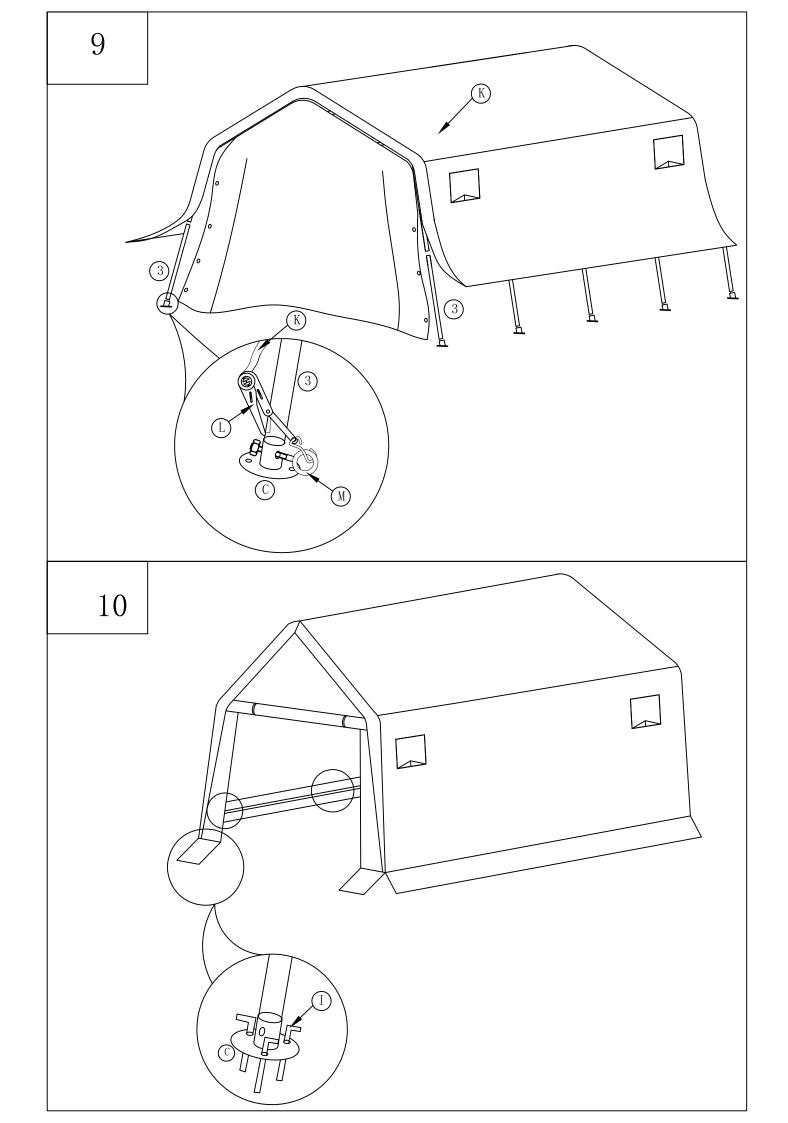

Securing Ratchet Tie-Downs

Note: Use these instructions in the pages that follow.

1. Thread the strap through the Ratchet's (8)

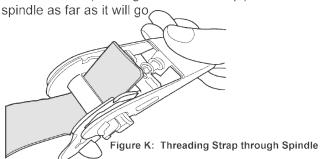

2. Insert the S-hook of the Ratchet into the hole in the Corner Leg (6).


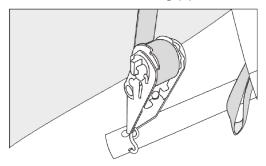


Figure L: Inserting Hook into Corner Leg

3. Lift and lower the Ratchet's handle to wind and tighten the strap onto the spindle.

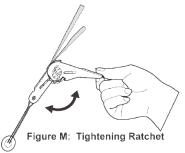

NOTICE: Excessive tightening will damage straps, Covers, and Corner Legs.

Releasing Ratchet Tie-Downs

- 1. Depress the spring-loaded bar on the handle.
- 2. Open Ratchet handle completely.
- 3. Unwind the strap.


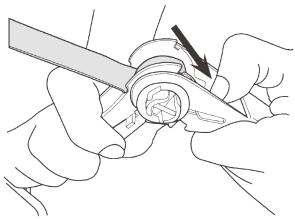


Figure N: Releasing Ratchet

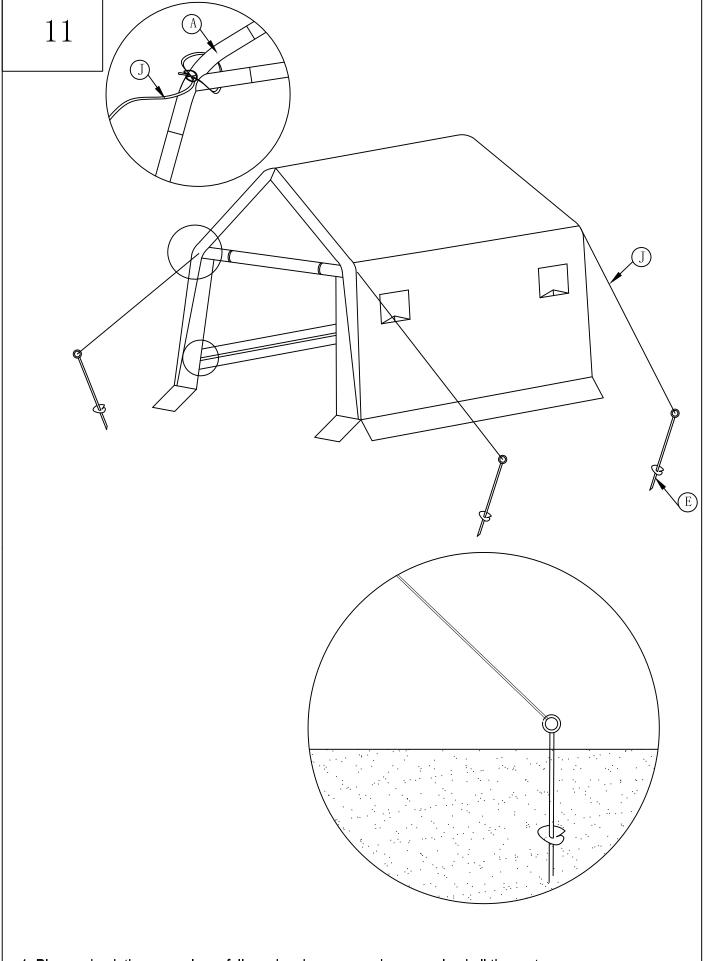

- 1. Please check the manual carefully and make sure you have received all the parts.
- 2. If there is any missing, please let us know the letter of the parts you need.
- 3. If there is any damage, please send clear photos to us, we will check and offer you best solution soon.