


APIER®

ROBOTIC POOL CLEANER

User Manual

Seagull 3000

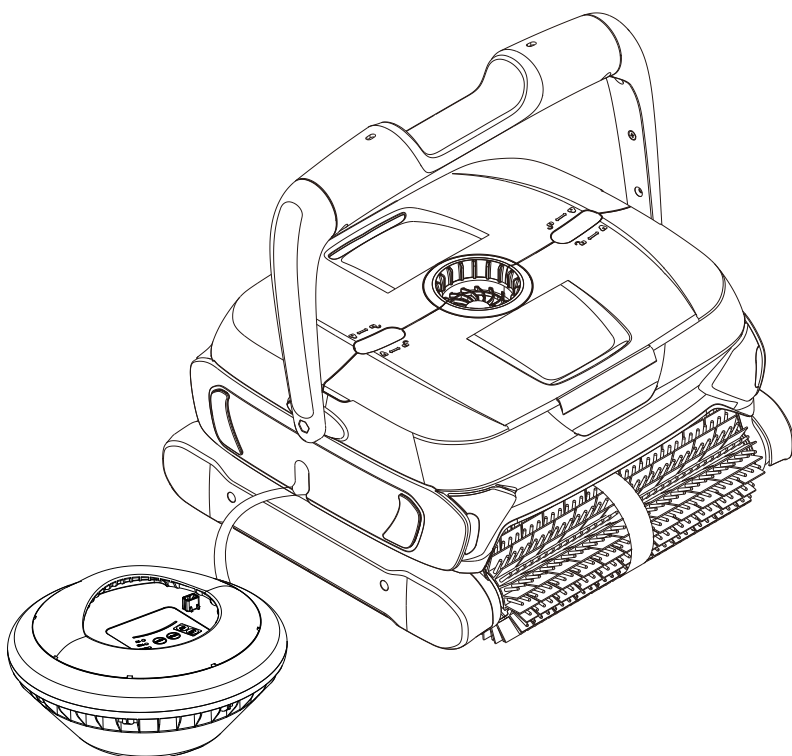

Thank you for choosing Aiper robotic pool cleaner.

You have joined millions of people to enjoy the convenience of robotic pool cleaning.

This user manual helps you to keep your robot performing at its best. Please take a few moments to read through it.


If you have any questions, please contact our customer service for assistance or visit www.aiper.com for more information.

Aiper Customer Service:

US Toll Free: 1-866-850-0666

Email: service@aiper.com

Facebook: [@AiperOfficial](https://www.facebook.com/AiperOfficial)

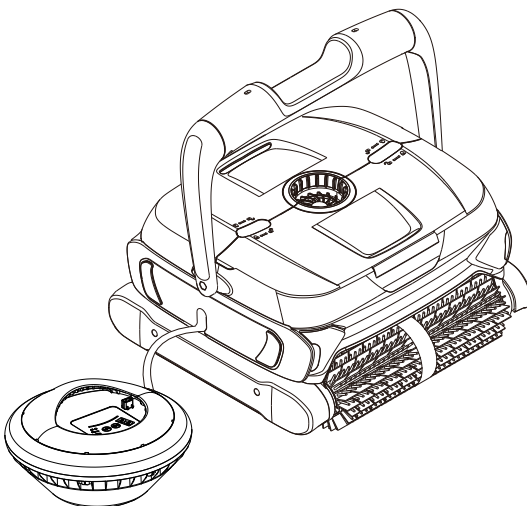

CONTENTS

Important Precautions ----- 1

1. Introduction ----- 2

2. Structure ----- 2

3. Specifications ----- 3

4. Operations ----- 3

 Important Notes ----- 3

 4.1 Operation Panel Instructions ----- 4

 4.2 Panel Light Indicators ----- 5

 4.3 App ----- 7

 4.4 Charging ----- 8

 4.5 Filter Cleaning ----- 9

 4.6 Installation of Foam Floating Blocks----- 10

5. Frequently Asked Questions (FAQ) ----- 11

6. Packing List ----- 13

7. Warranty ----- 14

Important Precautions

1. Read the manual carefully, and use the cleaner according to the manual. We are not liable for any losses or injuries caused by improper use.
2. Only use the accessories recommended or sold by the manufacturer.
3. Do not allow children to ride on the cleaner or play with it.
4. Use the original and authorized power adapter only.
5. The adapter cord should only be replaced by a qualified electrician.
6. Do not turn on the cleaner when it is out of water.
7. The charging adapter must be connected to a leakage protected and earthed socket when charging.
8. Do not operate the cleaner when people or animals are in the pool.
9. Always clean and wash the filter tray after using.
10. Turn off the cleaner when maintaining, cleaning or when it is not in use.
11. The cleaner should be stored in a cool and ventilated place, away from direct sunshine.
12. While charging, the cleaner should be kept in a cool place, and not covered with anything to prevent the damage of internal electrical components caused by overheating.
13. Only certified professionals can disassemble the sealed driving kit of the cleaner.
14. Do not operate the cleaner while pool filter is running.
15. Oil sealing for motor contains grease, which may cause water pollution if grease leaks.


16. Due to the limitation of battery capacity, the cleaner is only suitable for swimming pools with size up to 3229 sq.ft (300m²); otherwise the cleaning effect will be affected.
17. If the cleaner needs to be stored for a long period of time, it should be charged every three months to maintain battery life between 40%-60%. Please use the original and authorized power adapter only. If the cleaner is not charged for a long time, the battery voltage will be lower than the overdischarge protection voltage due to the self-discharge of the battery, which may cause fatal damage.
18. Do not use or store the cleaner near any heat source.
19. Do not pierce the shell of the cleaner with nails or other sharp objects. Do not hammer, impact, or throw the cleaner.
20. Make sure the charging socket is dried before charging.

1. Introduction

The robotic pool cleaner Seagull 3000 is a new type of highly efficient and energy-saving swimming pool cleaning robot. It cleans the pool walls and floor automatically without replacing the pool water. It's totally environment-friendly.

Read this user manual carefully before use.

2. Structure

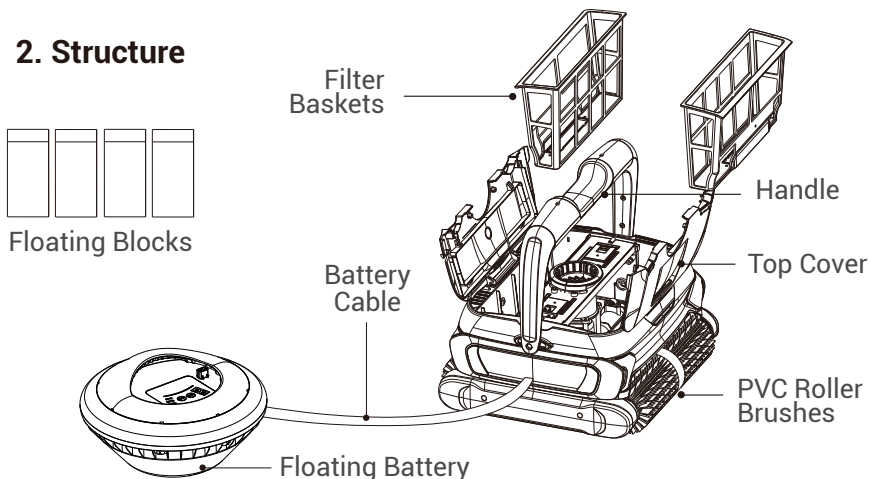

3. Specifications


| | |
|--------------------------------------|---|
| 1. Model | Seagull 3000 |
| 2. Rated Working Voltage | 25.9V |
| 3. Power | 120W |
| 4. Run Time | 110~120 Mins |
| 5. Charger Input | 100~240V, 50/60Hz |
| 6. Charger Output | 30V/2A |
| 7. Battery Capacity | 7800mAh |
| 8. Charging Time | 4~5 Hours |
| 9. Pool Size | Up to 3229sq.ft (300m ²) |
| 10. Filter Capacity | 71GPM(267LPM) |
| 11. Filter Density | 180μm |
| 12. Moving Speed | 32.8ft/min (10m/min) |
| 13. Waterproof Grade | IPX8 |
| 14. Pool Water Temperature | 50°F~95°F (10°C~35°C) |
| 15. Pool Water PH Value | 7.0~7.4 |
| 16. Charging Environment Temperature | 41°F~95°F (5°C~35°C) |
| 17. Max Water Depth | 8.2ft (2.5m) |
| 18. Product Size | 16.93(L)x15.35(W)x8.66(H) inches 430(L)x390(W)x220(H) mm |
| 19. Storage Temperature | -4°F~113°F (-20°C~45°C), RH≤75% |

4. Operations


Important Notes:

1. Put the cleaner into or lift it out of the pool with the bottom towards the wall to avoid any possible scratches to the pool. Hold the top

handle for putting it into the pool, then power on the cleaner (Make sure that the trapped air inside is emptied till no more air bubbles come out before powering on).

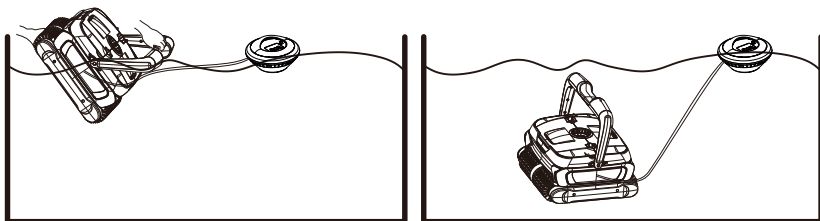


2. The cleaner will automatically sub-stop alongside the pool wall once the battery is low or completing a working cycle. Hold the top handle for removing it from the pool for charging. NEVER pull the cable.

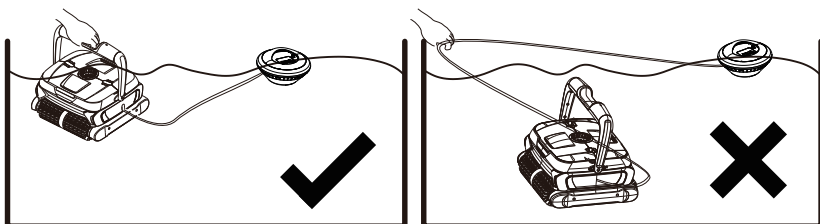

Notes:

1. The cleaner will not climb walls if the battery level is under 15%;
2. It is better to take out the filter trays first and then remove the cleaner from the pool.

4.1 Operation Panel Instructions

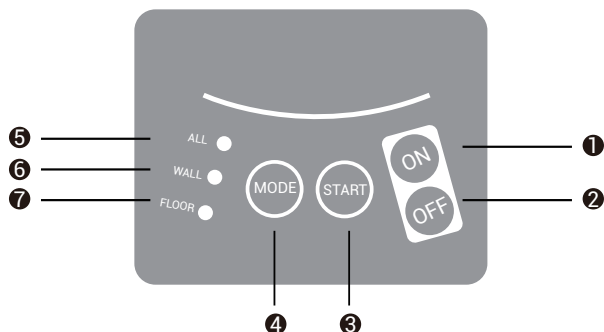

Instructions for Buttons and Indicators

| Item | Sign | Instruction | Description |
|------|-------|-------------------------|--|
| 1 | ON | Power ON | Press ON button, the cleaner is powered on. |
| 2 | OFF | Power OFF | Press OFF button, the cleaner is powered off. |
| 3 | START | Start to Work | Press this button, the cleaner will start to work automatically according to the selected cleaning mode, and the corresponding mode indicator will start to flash with the frequency of once per second. |
| 4 | MODE | Cleaning Mode Selection | The user can select the corresponding cleaning mode as required. |
| | | ALL | To clean pool floor, walls and water line (once floor once wall) |
| | | WALL | To clean the pool walls only |
| | | FLOOR | To clean the pool floor only |
| | | ALL+FLOOR | To clean the pool floor three times and pool wall once |

4.2 Panel Light Indicators


| Item | Description | Status | Indicators | | | |
|------|-------------|-----------------------------|------------|------|-------|--------|
| | | | ALL | WALL | FLOOR | Buzzer |
| 1 | Power on | Once floor once wall | ON | OFF | OFF | "Beep" |
| 2 | | Wall cleaning only | OFF | ON | OFF | "Beep" |
| 3 | | Floor cleaning only | OFF | OFF | ON | "Beep" |
| 4 | | Three times floor once wall | ON | OFF | ON | "Beep" |

| | | | | | | |
|----|----------------------|-----------------------------|--------------------------|--------------------------|--------------------------|--------|
| 5 | Auto Running | Once floor once wall | Flash once per second | OFF | OFF | "Beep" |
| 6 | | Wall cleaning | OFF | Flash once per second | OFF | "Beep" |
| 7 | | Floor cleaning | OFF | OFF | Flash once per second | "Beep" |
| 8 | | Three times floor once wall | Flash once per second | OFF | Flash once per second | "Beep" |
| 9 | | Working Completed | →Flash once per second | OFF | →Flash once per second | "Beep" |
| 10 | Remote Steering | Forward | →Flash once per 0.2s | →Flash once per 0.2s | →Flash once per 0.2s | "Beep" |
| 11 | | Backward | ←Flash once per 0.2s | ←Flash once per 0.2s | ←Flash once per 0.2s | "Beep" |
| 12 | | Left | Flash once per 0.2s | ON | ON | "Beep" |
| 13 | | Right | ON | ON | Flash once per 0.2s | "Beep" |
| 14 | Abnormal Indications | Overload | Flash fast once per 0.1s | Flash fast once per 0.1s | Flash fast once per 0.1s | |
| 15 | | Motor 1 overload | Flash fast once per 0.1s | Flash fast once per 0.1s | OFF | |
| 16 | | Motor 2 overload | OFF | Flash fast once per 0.1s | Flash fast once per 0.1s | |
| 17 | | Low battery | Flash fast once per 0.1s | OFF | Flash fast once per 0.1s | |

| | | | | | |
|----|----------------------|--------------|-----|--------------------------|-----|
| 18 | Abnormal Indications | Out of water | OFF | Flash fast once per 0.1s | OFF |
|----|----------------------|--------------|-----|--------------------------|-----|

4.3 App

DOWNLOAD THE APP : Please search "AIPER" on App Store or Google Play to download the App.

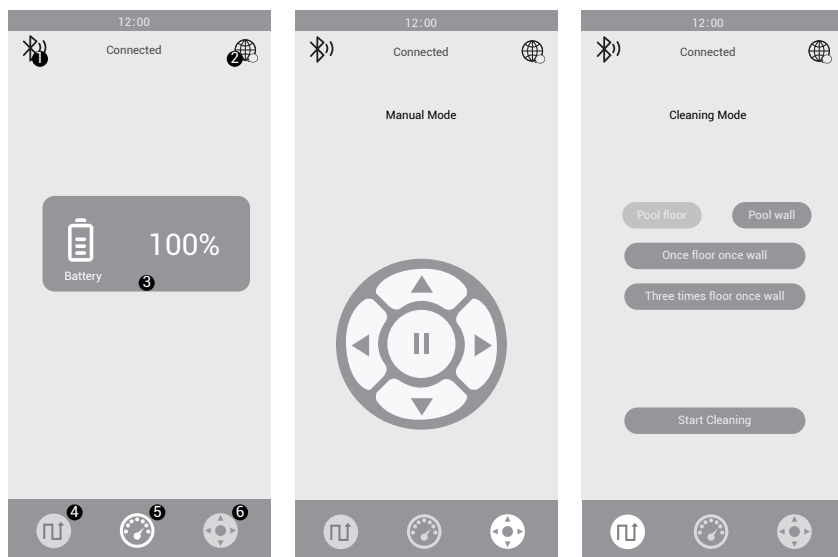

| # | Instruction | Description |
|---|--------------------|---|
| ① | Bluetooth Pairing | Click ① to select "Seagull 3000" on the Bluetooth pairing list to pair. |
| ② | Language Selection | Select the language |
| ③ | Remaining Battery | Shows the battery level |
| ④ | Auto Mode | Select the cleaning mode you want, and then click "START" |
| ⑤ | Main Interface | Shows the battery level |
| ⑥ | Manual Mode | Remote steering by hand |


Notes:

- 1.If the Bluetooth is disconnected, please do the Bluetooth pairing again by hand;
- 2.During App operation, if you need to change the cleaning mode, please pause the current working status first and select the new mode, then start it. Otherwise, the cleaning mode won't change;
- 3.During App operation, if the Bluetooth is disconnected, the cleaner will follow the last cleaning direction till low battery warning.
- 4.During App operation, if the cleaner is taken out of water and back to the pool, click the pause icon on the App to re-activate the machine (The cleaner is under power-on status).
- 5.During App operation, if the cleaning mode changes, the cleaning mode LED light will change as well.

4.4 Charging

Please turn off the cleaner till no indicators flash and charge it out of the pool. Please charge it indoors.

IMPORTANT NOTE: After each use, wipe and dry the charging pin with paper towel or cotton swab. Wait for a few minutes to let the moisture dry out before charging.

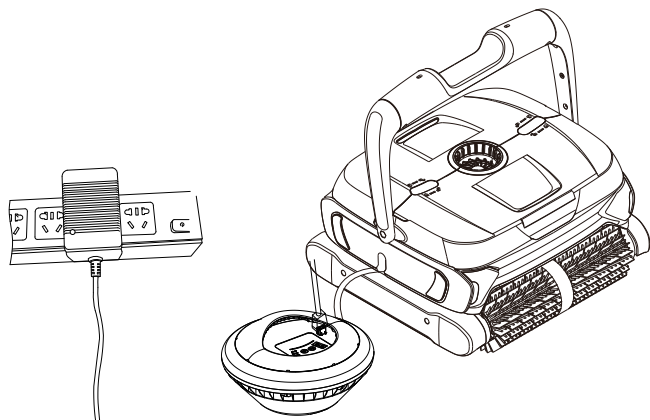




Charger Indicators

Red light stays on: the battery is being charged.


Green light stays on: 1. The charger is not plugged to the cleaner;
2. The charging is completed.

4.5 Filter Cleaning


A. Slide the two clips according to the indications on the top cover to open it and take out the filters.

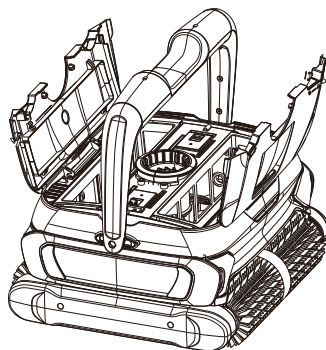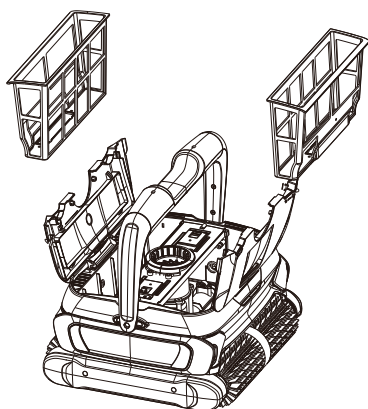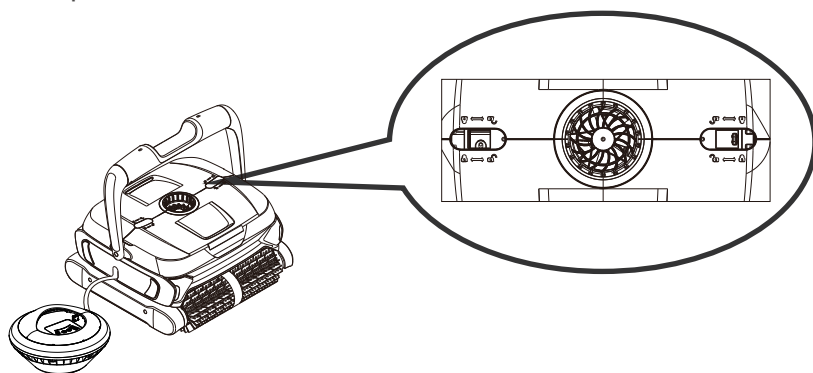

B. Clean and wash the filter baskets.

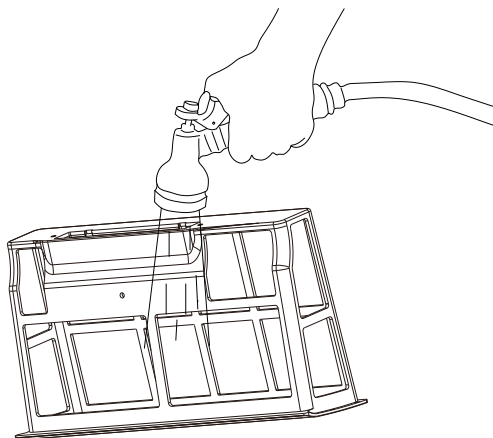

C. Re-install the filters, pay attention to the right position and slide the two clips to close the top cover.

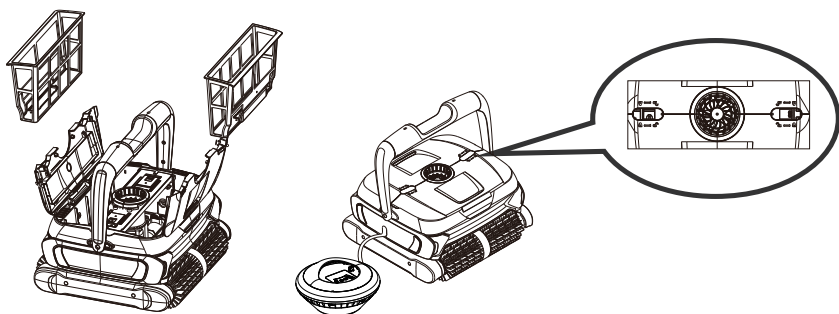


4.6 Installation of Foam Floating Blocks

Attention: If your robot is performing well, please ignore these instructions.

The following illustration is limited to the use of white foam blocks to increase coverage when the cleaning machine cannot completely clean and cover the pool area and climb walls well.

Stick the two foams on the internal surface of the top cover (see the picture below). Make sure the two foams are in the middle part of the top cover.

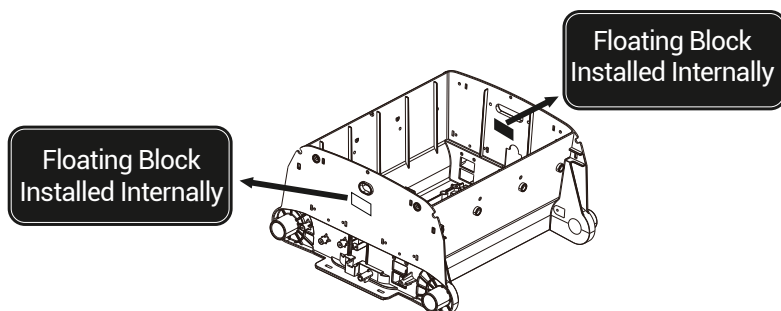

5. Trouble Shooting

Remark: The pool water condition must be within the following parameters:

- PH: 7.0 –7.4
- Temperature: 10°C(50°F) to 35°C(95°F)
- Salt: Max 5,000 ppm
- Chlorine: Max 2 ppm

| Issues | Possible Causes | Solutions |
|---|---|--|
| The robot does not reach all pool areas | There is algae on the pool floor and it can't be cleaned since it floats easily after the machine passes by | Before using the cleaner, please clean the algae on the floor or walls in case it floats when the machine passes by |
| | The pool shape is not regular | The ideal pool shapes are ROUND, OVAL, RECTANGULAR, KIDNEY-LIKE. Please place the robot on the area that needs specific cleaning |
| | The pool filter system and pump are running | Turn off the pool filter system and pump |

| | | |
|--|---|---|
| The robot does not climb walls | The filter baskets need to be cleaned | Clean and wash the filter baskets |
| | The PVC rollers are worn or consumed too much | Replace new rollers |
| | The pool wall radian is too big or the surface is too slippery. | It doesn't work for too curved or slippery walls. |
| The robot does not work | The battery is low | Recharge the battery |
| | The robot is damaged during transportation | Contact the customer service |
| | Electric Fault | Contact the customer service |
| | The cleaner gets blocked | Contact the customer service |
| It just sits at the bottom of the pool and won't move after several passes | 1.The battery is low; 2.There is a blockage in the filter baskets; 3.The belt is broken; If the belt is fine, there should be wrong with the motor, please contact the customer service. | 1.Recharge the battery; 2.Clean up the filter baskets and restart the machine; Replace the belts. (Note: Please don't use the cleaner immediately after spraying pool chemicals, otherwise it will break belts easily) |
| It spends all its time in the deep area without visiting the shallow area | The pool shape is not regular like ROUND/OVAL/RECTANGULAR | Paste the included floating blocks on the shell surface (refer to 4.6 on the manual) to widen the cleaning coverage |
| The cleaner can't be connected with the App | The Bluetooth function is not enabled on the phone. | Enable the Bluetooth permission and location permission once the app is turned on |

6. Packing List

| Item | Description | Name | Model | QTY (pc) |
|------|--|--|--------------|-------------|
| 1 | Cordless Robotic Pool Cleaner | Cleaner | Seagull 3000 | 1 |
| 2 | | Charger | | 1 |
| 3 | | User Manual | | 1 |
| 4 | | Floating Battery with 9.84ft(3m) Cable | | 1 |
| 5 | | Floating Blocks | | 4 |

7. Warranty

This product has passed all quality control and safety tests, conducted by the technical department of the factory.

Warranty Information

1. The warranty is covered for 24 months (only for battery and motor) from the date of its original purchase.
2. This warranty is voided if the product has been altered, misused, or has been repaired by unauthorized personnels.
3. The warranty extends only to manufacturing defects and does not cover any damage resulting from mishandling of the product by the owner.
4. The order number or record must be presented for any claim or repair during the warranty period.



Aiper Customer Service:

US Toll Free: 1-866-850-0666

Email: service@aiper.com

Facebook: [@AiperOfficial](https://www.facebook.com/AiperOfficial)