


Owner's Guide

JASHEN

V12 2 in 1 Vacuum



Instruction Manual

For easy assembly and use, please take a few moments to carefully read this owner's guide.

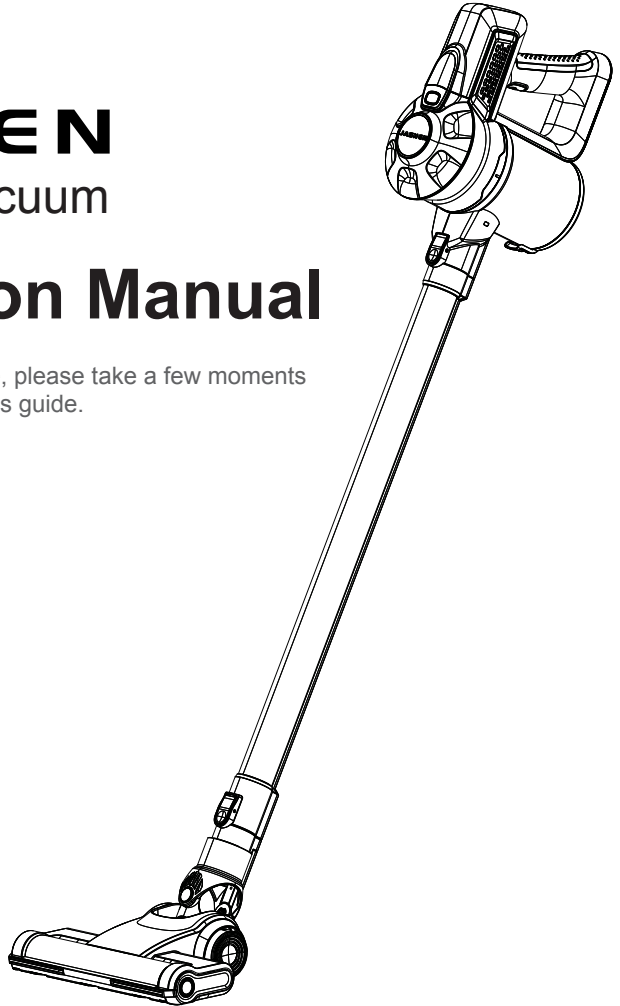

Component Installation








Connect the both end of the wand to the hand vacuum and the floor brush as shown.

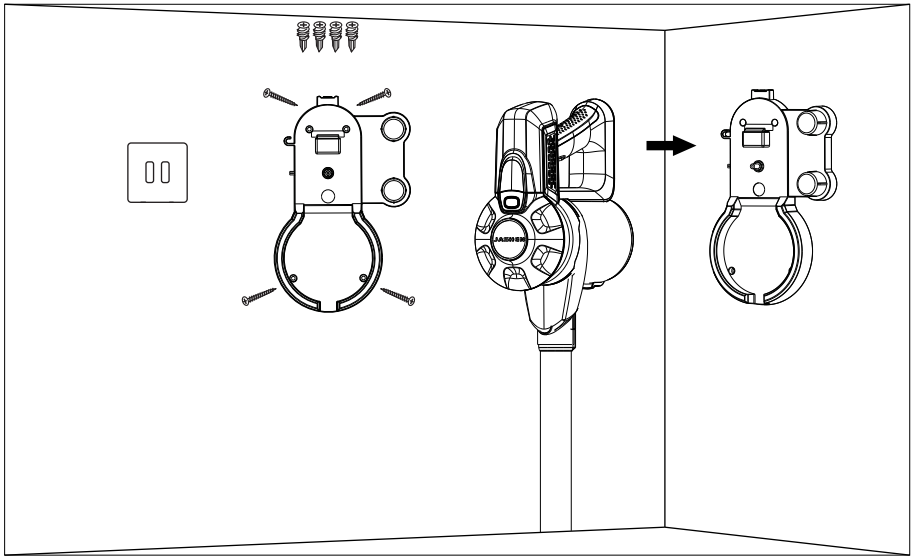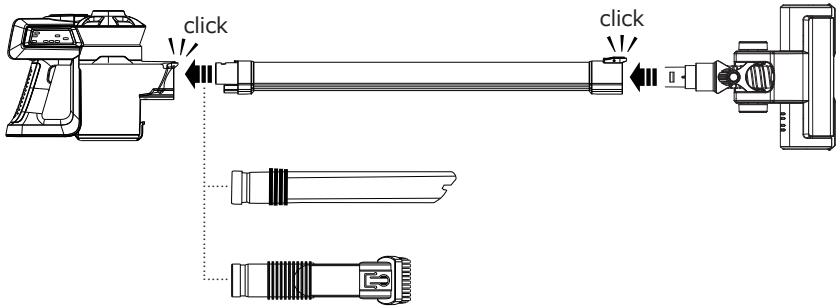


Choose location near power outlet as shown. Please make sure that there is no pipework(gas, water or air), electrical cables or ductwork directly behind it.

Place assembled vacuum onto wall mount, then connect charger to power outlet and charge. To preserve long-term battery life, please fully charge before first use.

 Part Name

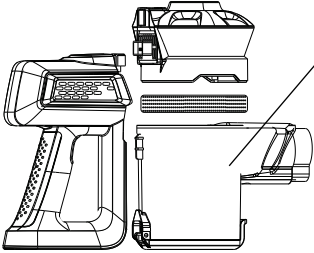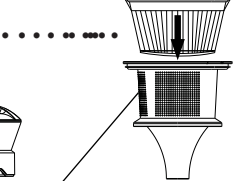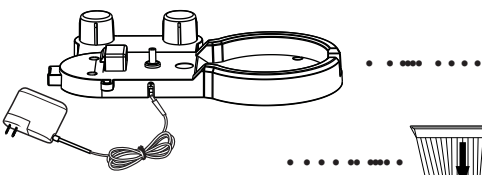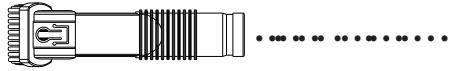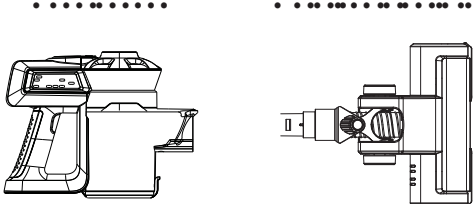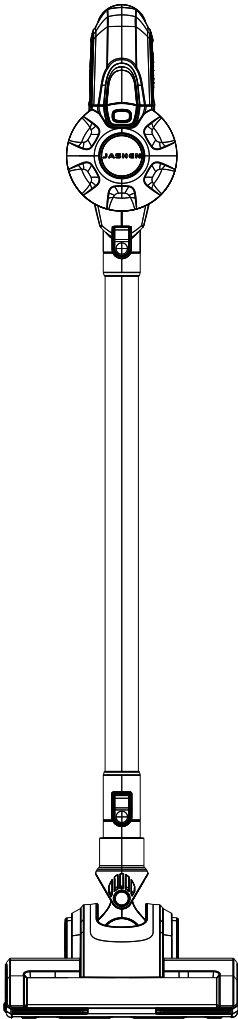

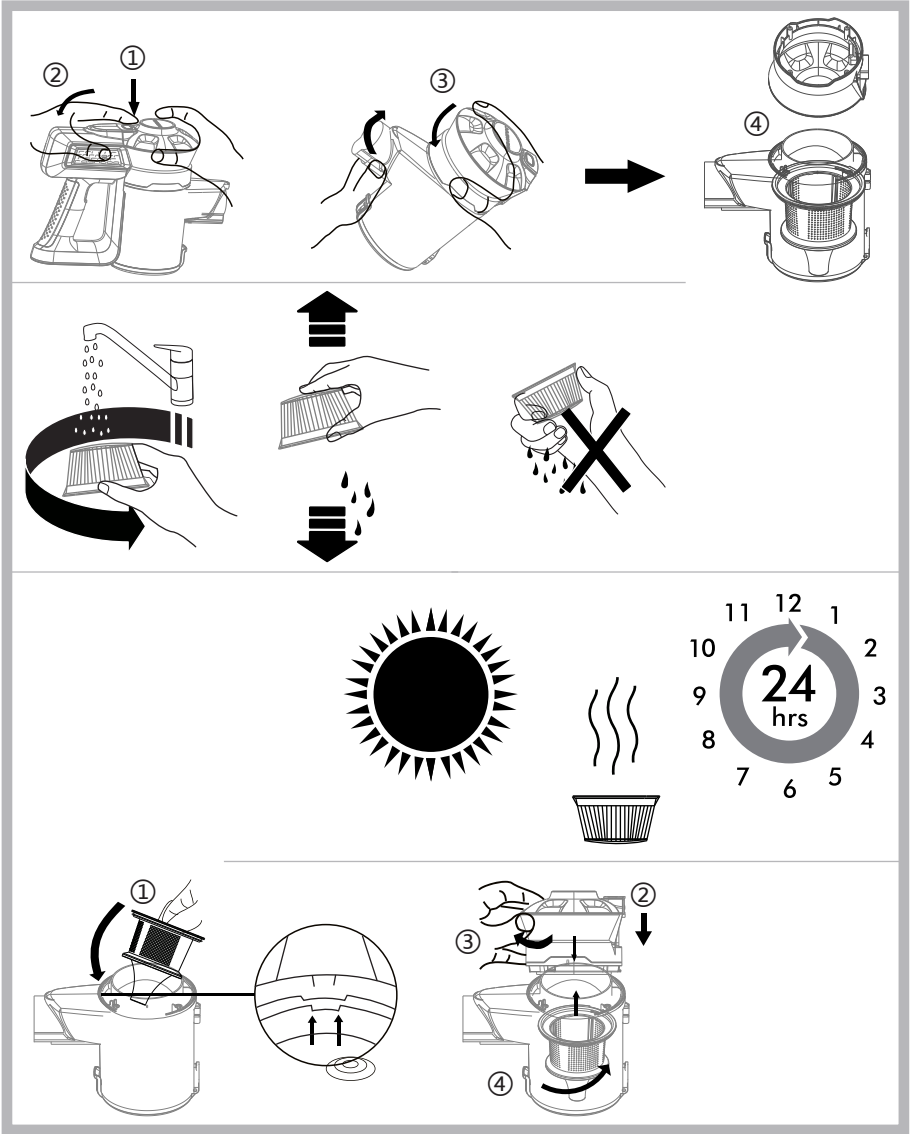


Important


Wash the filter with cold water at least once per month

Press the battery locker to remove the battery from dust cup. Remove the filter cover lid on the top of the dust cup and slide off the HEPA filter and the metal filter. Rinse the metal filter and HEPA filter with water and repeat washing them until the water runs clear. Leave the HEPA filter unit to completely for a minimum of 24 hours. Once completely dry, reinsert the filter and assemble the dust cover into the dust cup.




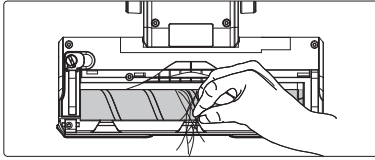


Place turn the motorized floor brush upside down. Use fingers to remove blockages or debris. Cut off the hair with a knife or scissors, but be careful not to cut the fuzz on the brush.

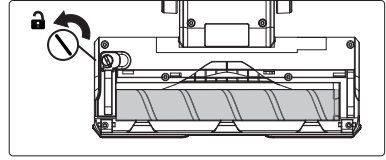

If debris is cannot be removed easily, remove retainer clip to access brushroll. Using flat head screwdriver or coin, turn screw to the 'unlock' position.

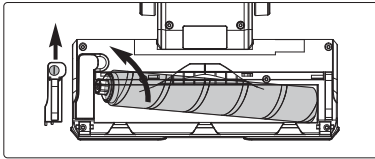


Remove retainer clip and lift out brushroll to clean and remove debris. Brushroll is washable. Roll in a towel to absorb water; dry THOROUGHLY before reassembling.

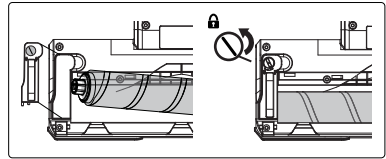

To reassemble:


1. Align one end of brushroll with floor nozzle gear.
2. Press other end into slot.
3. Hook retainer clip under tab and press down.
4. Insert screw and turn to 'lock' position.

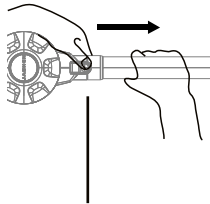

Metal tube locker


(1)

Remove the metal tube by pressing the release button.

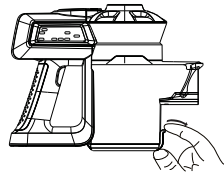

(2)



Unlock the dust cup locker

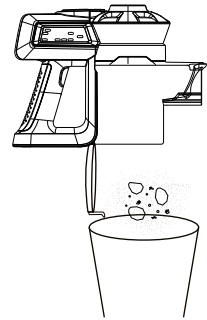

(3)

Hold dust cup over a trash bin and empty it.

**Empty as soon as dirt reaches the level of the MAX mark - do not over fill.
(Please do not use the appliance when the dirt exceeds the MAX line.)**

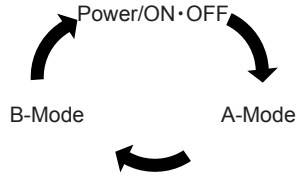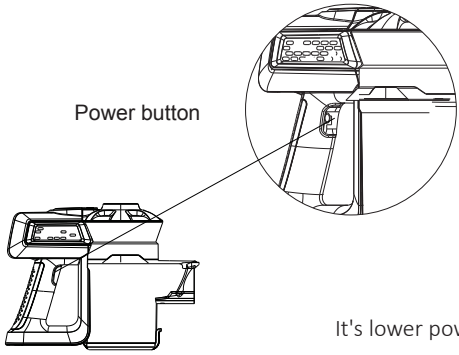

Suction Setting

Press the switch to work
Two level speed control


A. Standard Mode

It's lower power when you press the switch button first time

B. Max Mode

It's high power when you press the switch button second time

It will be power off when press third time, it's kind of circle as below showed

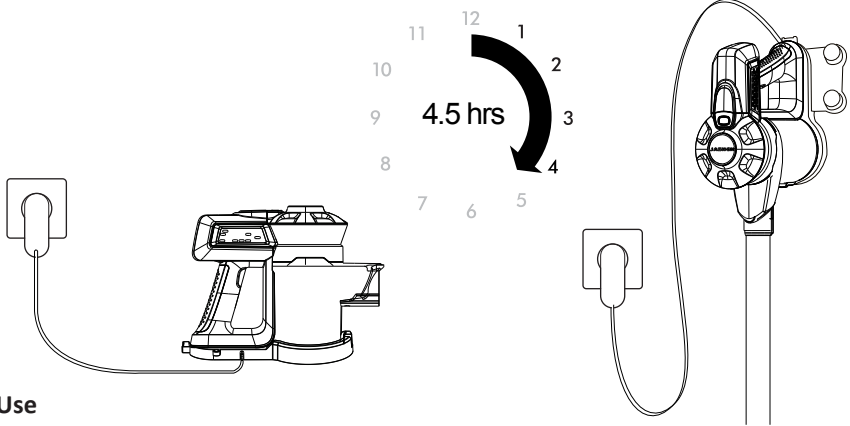



In Use

As the vacuum discharges, its 3 LED lights will gradually turn off in sequential order. When the battery power indicator is blinking, please turn off the appliance and a charge is needed



Charging

As the vacuum battery charges, the lights will first blink and then illuminate steadily, in sequential order. All 3 lights will glow steadily upon receiving a full charge. This preserves long-term battery life and allows the battery to remain connected to the charger even after reaching full charge

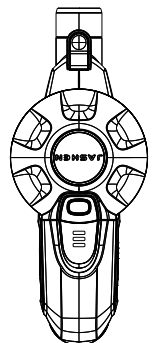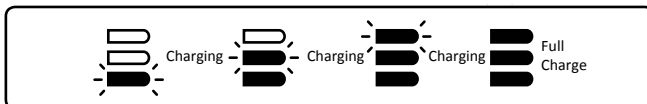

Personal Safety

1. Store it indoors in a dry place out of the reach of children;
2. This appliance can be used by children aged from 10 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance should not be performed by children without supervision.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended, may present a risk of personal injury;
5. Take extra care when cleaning stairs;
6. Do not place this product on or near a cooker or any other hot surface and do not incinerate this appliance even if it is severely damaged. The battery might catch fire or explode.
7. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts, such as the brush bar. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.

Electrical Safety

1. Only use batteries and chargers supplied by the manufacturer.
2. Never modify the charger in any way.
3. The charger has been designed for a specific voltage. Always check that the voltage is the same as that stated on the rating plate.
4. A charger that is suitable for this type of battery pack creates a risk of fire when used with another battery pack;
5. Before using, check the charger cord for signs of damage or ageing. A damaged or entangled charger cord increases the risk of fire and electric shock.
6. Don't abuse the charger cord.
7. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.
8. Don't wrap the cord around the charger when storing.
9. Keep the charger cord away from hot surfaces and sharp edges.
10. The supply cord cannot be replaced, the charger should be discarded and replaced if the cord is damaged.
11. Do not handle the charger or the appliance with wet hands.
12. Do not store or charge the appliance outdoors.
13. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

BATTERY SAFETY

1. This appliance includes Li-ion batteries, do not incinerate batteries or expose to high temperatures, as they may explode.
2. Liquid ejected from the battery may cause irritation or burns.
3. In an emergency situation contact professional help immediately.
4. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid that gets on skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations.

5. Shorting the battery terminals may cause burns or fire.
6. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal object that could make a connection from one terminal to another.
7. When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.

Service

1. Service using the appliance and after any impact, check for signs of wear of damage and repair as necessary.
2. Do not use the appliance if any part is damaged or defective.
3. Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations. Repairs by unqualified persons could be dangerous.
4. Never modify the appliance in any way as this may increase the risk of personal injury.
5. Only use replacement parts or accessories provided or recommended by manufacturer.

Intended use

1. This appliance has been designed for domestic dry vacuum cleaning only.
2. Don't pick up liquids or use on wet surfaces.
3. Do not use to pick up flammable or combustible liquids, such as petrol, or use in areas where they or their vapours may be present.
4. Use only as described in this manual.
5. Don't use on concrete, tarmacadam or other rough surface.

Warning

1. Don't use water, solvent, or polishes to clean the outside of the appliance: wipe clean with a cloth.
2. Never immerse the unit in water and do not clean in a dish washer.