 


# INSTRUCTION MANUAL

## 4 FT LED SHOP LIGHT

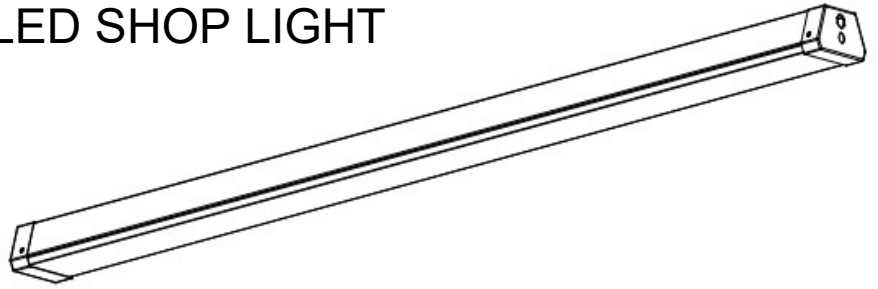

### SAFETY INFORMATION

**IMPORTANT:** Read all safety precautions and installation instructions carefully before installing

 
- ◆ Do not handle any energized fixture or attempt to energize any fixture with wet hand or while standing on a wet or damp surface or in water.
- ◆ Assure that the fixture is mounted onto a sound structurally surface that will support the fixture.
- ◆ The fixture is designed for use in 120VAC, 60Hz fused circuit. Do not use on a dimming circuit.
- ◆ Do not look inside the lights.
- ◆ Product can be used in garages, basements, work areas, utility rooms and recreation rooms.
- ◆ Maximum distance to the receptacle is depend on the length of the cord provided. (5 ft,2-prong, 120V grounded plug included)
- ◆ The fixture is installed directly beneath a ceiling-mounted receptacle. Excess cord should be secured to one of the supporting chains with a cable tie to keep it out of the work space.
- ◆ Use hook to support chain, not the electrical cord.
- ◆ Do not install on radiant-heating type ceiling.

**WARNING:IF NOT FOLLOW THESE INSTRUCTION MAY LEAD TO A POTENTIALLY FATAL ELECTRICAL SHOCK OR PROPERTY DAMAGE**


### PRE-INSTALLATION

- ◆ Remove the fixture carefully from the carton and check to make sure that all hardware is included.
- ◆ Be careful not to misplace the hardware needed for installing the fixture. Unwind string that binds power cord for last step.

### HARDWARE INCLUDED

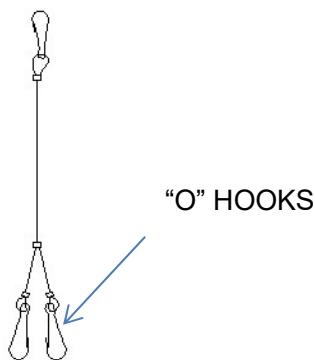

A: Steel wire \*2PCS

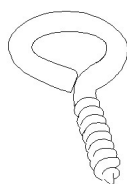 

B: Ceiling Hook\*2PCS




C: Rubber plug\*2PCS

## INSTALLATION

 **NOTE:** The unit is install directly beneath a ceiling-mounted receptacle. If excess cord ,bind with saved from Planning Installation or a cable tie to keep it out of work space.

### ATTACH THE CEILING HOOKS

Choose the ideal position of the lamp to ensure that the lamp is within the range of the power socket. Mark the position of each sheep's eye screw (part B) on the ceiling with a pencil. Insert the expansion screw (part C) into the hole and fix it with the sheep eye screw hook.

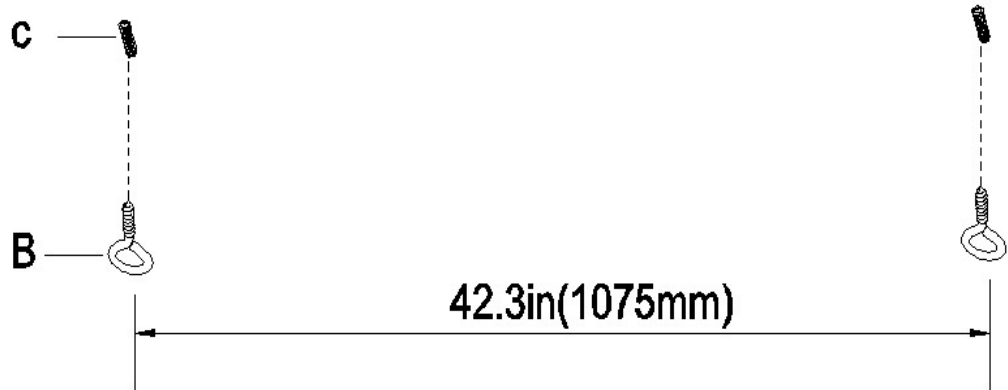

### ATTCH THE "O" HOOKS

Insert the "O" hooks(Part A) into each of the holes on both sides of the shop light.(Figure 1)

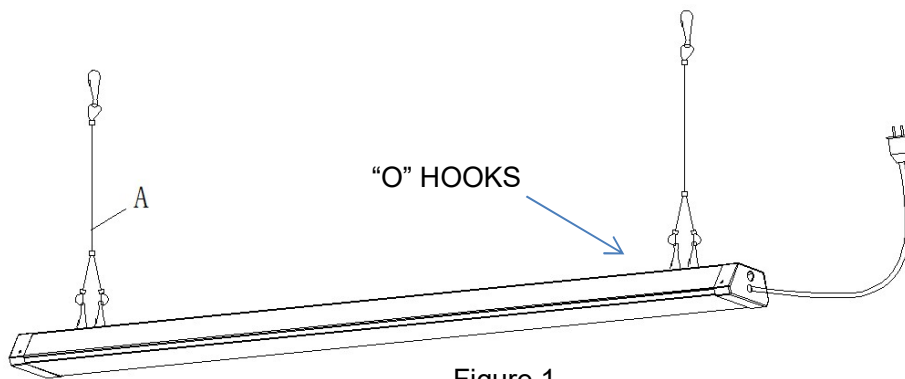 


Figure 1

### ATTACH THE HANGING CHAIN

Using two Steel wire (Part A) attach a Steel wire to one of the "O" hooks(Part A) previously attached to each side of the light fixture.(Figure 2)

Plug power cord into an outlet to use pull chain to power on.

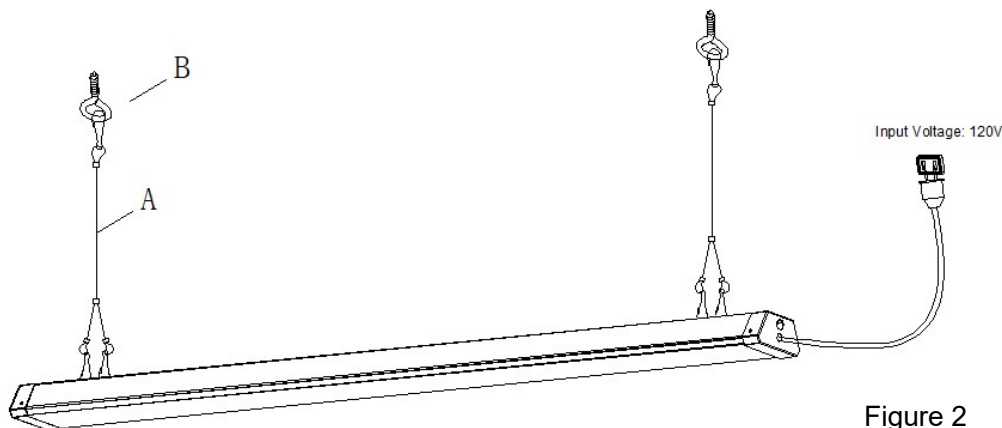 


Figure 2

## Guarantee

If your product does not arrive in good condition or does not work great 100% Satisfaction Guarantee within 3 years, please let us know we will give you replacement or refund. Customer service: [support@lightdot.com](mailto:support@lightdot.com)